



2, 4 AND 6-ROW
PEANUT
DIGGER-SHAKER-INVERTER

PARTS BOOK

PB-03

KELLEY MANUFACTURING CO.

South Industrial Park
P.O. Drawer 1467
Tifton, Georgia 31793/1467
Tel: 912-382-9393

Part No. 03-PB-01
Price \$5.00

EXPLANATION OF SERIAL NUMBER LISTING

Serial number information given on any page is applicable only to part listed and illustrated on that page.

When the space for year or number is completely empty the part is used on all machines, except as noted in the description column ()

When a serial number or year appears before the dash the part was introduced beginning with that serial number or year and is still being used (00001 -)

When a serial number or year appears after the dash the part was used up to and including that serial number or year but was not used after the serial number or year (- 010001)


When serial numbers appear both before and after the dash the part was used beginning with the first serial number or year but was not used after the second serial number or year (010001 - 010002)

*Serial number plates are attached to Shaker frame on end of tool bar.

The following is a list of serial numbers to help identify the year of your machine.

1983 MACHINES (22032-25194)
1984 MACHINES (25195-28777)
1985 MACHINES (28778-)


It may be necessary to contact your dealer or Kelley Manufacturing Co. if you have any questions concerning the serial number listing.

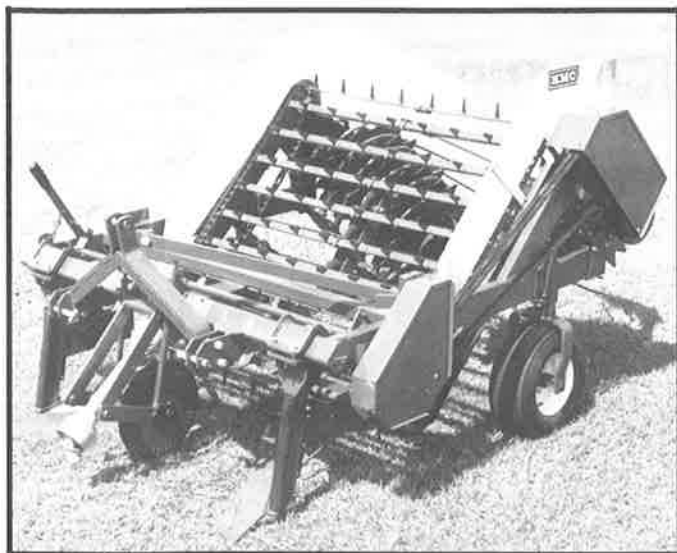

2-ROW



4-ROW

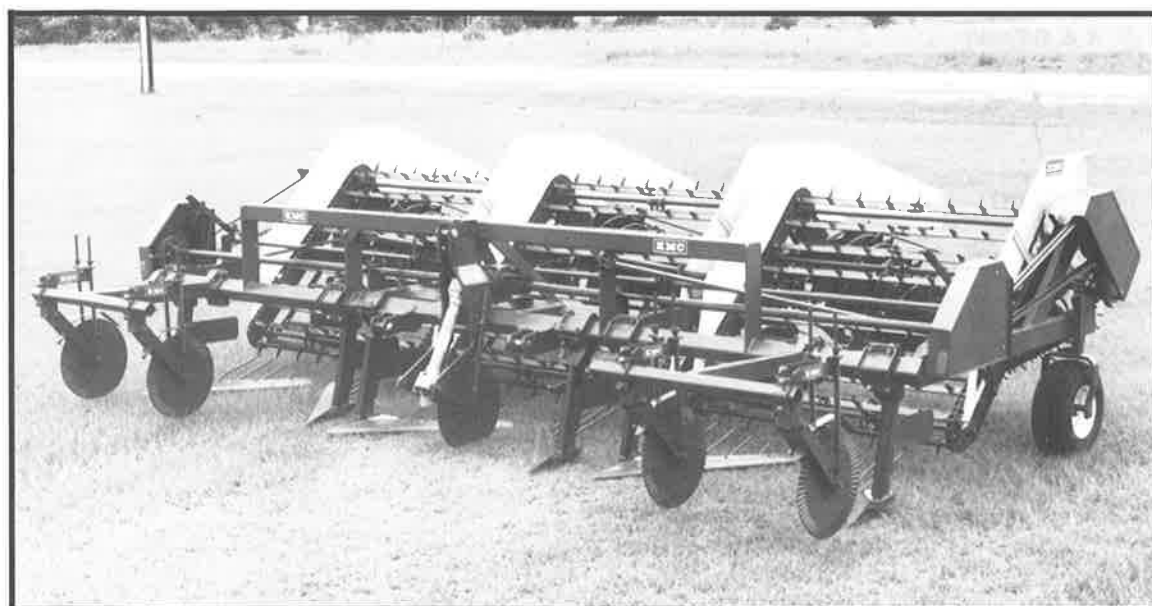


6-ROW

ALPHABETICAL INDEX

	PAGE
Bracket, Adaptor (M.F. 2705, M.F. 2675)	38
Bracket, M.F. (1150, 1155)	38
Bracket, M.F. Adaptor (2805, 2745)	38
Bracket, Mounting	36
Bracket, 4 & 6-Row Coulter	35
Bracket, 1 x 3 Shank (4x4)	40
Coulter 5 x 5	41
Coulter, 6-Row Double	42
Coulter, Front	34-35
Coulter, Mast (6-Row)	19
Coulter, 4-Row Center	19
Coulter, Spring Loaded (2-Row)	18
Coulter Bar (2-Row)	36
Coulter, 5 x 5	41
Coulter, 6 Row Double	42
Dirt Knocker, 3-Wheel	13
Drive Line (2, 4, and 6-Row)	7-8
Drive Train (2 & 4-Row)	14-15
Drive Train (6-Row)	16-17
Fender, Cylinder Inverter (2 & 4-Row)	26
Gauge Wheel, 5 x 8 & 8 x 10	27
Gauge Wheel, Cultivator (1x3 Shank)	40
Gear Box Components	5-6
Hitch Components (2-Row)	3
Hitch Components (4-Row)	4
Hose Bundle, Front Mounted Coulter	33
Hydraulic Cylinder (2" Bore x 8" Stroke x 1-1/8 Diameter Rod)	33
Hydraulic Cylinder (3" Bore x 8" Stroke)	33
Inverter, Lt. & Rt. Cylinder (2, 4 & 6-Row)	22-23
Inverter, Center (4 & 6-Row)	24-25
Main Frame (2-Row)	9
Main Frame (4-Row)	9
Main Frame (6-Row)	10
Plow Standard, (2, 4 & 6-Row)	20-21
Rattler Frame (2, 4 & 6-Row) (Prior To 1990)	11
Rattler Frame (2, 4 & 6-Row) (1991-)	12
Reflector Assembly, Lt. & Rt.	28
Shield, Lt. Front (2-Row)	28
Shield, Lt. Rear (2 & 4-Row)	29
Shield, Rt. Rear (2 & 4-Row)	29
Shield Lt. & Rt. Front (4 & 6-Row)	30
Shield, Lt. & Rt. Rear (6-Row)	31
Shield, Center '80, (4-Row, 6-36 & 6-38)	32
Step, Vine Cutter	37
Support Arm Bundle	37
Universal Shaft Components	7-8
Vine Guide Rod, #1 '80 (4-Row)	25
Vine Lifter	39


2-ROW HITCH COMPONENTS

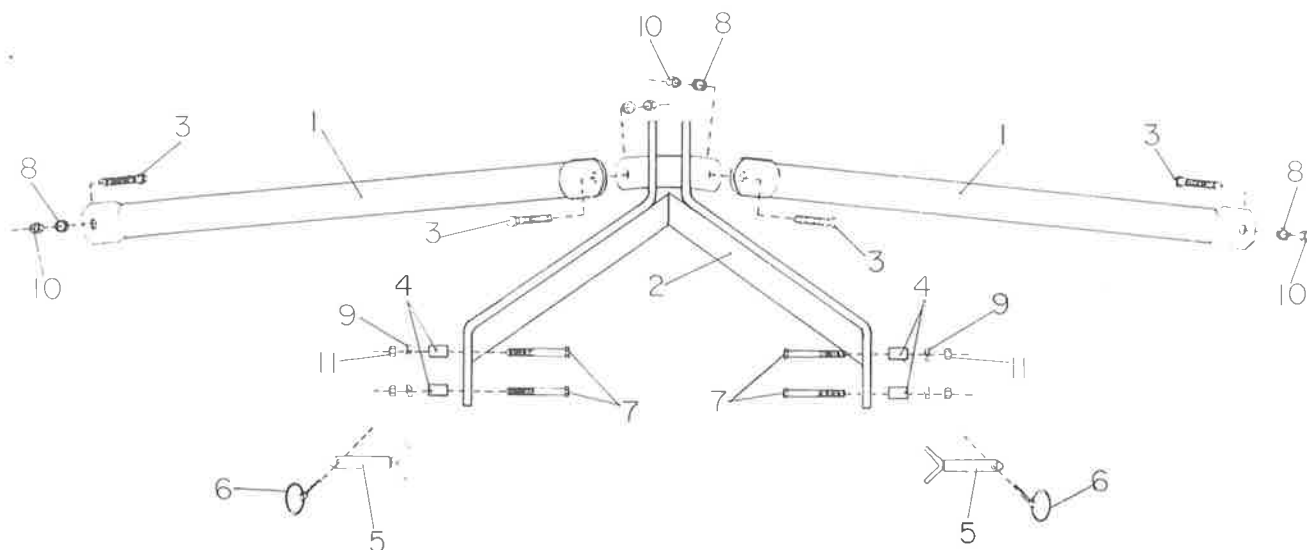

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-373	(-1982)	Tension Pipe - 2 Row
	03-023-463	(1983-)	Tension Strap - 2 Row (2 Used)
2	03-080-353		A-Frame
3	48-091550		7/8" x 2 1/2" Capscrew, Grd. 5 (4 Used)
4	03-024-143		Lower Hitch Spacer (4 Used)
5	03-050-088		Hitch Pin, 1-1/8" (2 Used)
6	02-050-002		Klik Pin 7/16" x 1 3/4" (2 Used)
7	48-091450		3/4" x 4 1/2" Capscrew, Grd. 5 (4 Used)
8	66-010400		7/8 Lockwasher (4 Used)
9	66-010350		3/4 Lockwasher (4 Used)
10	68-010400		7/8 Hex Nut (4 Used)
11	68-010350		3/4 Hex Nut (4 Used)

4-ROW HITCH COMPONENTS

(USED ON MACHINES PRIOR TO 1994)

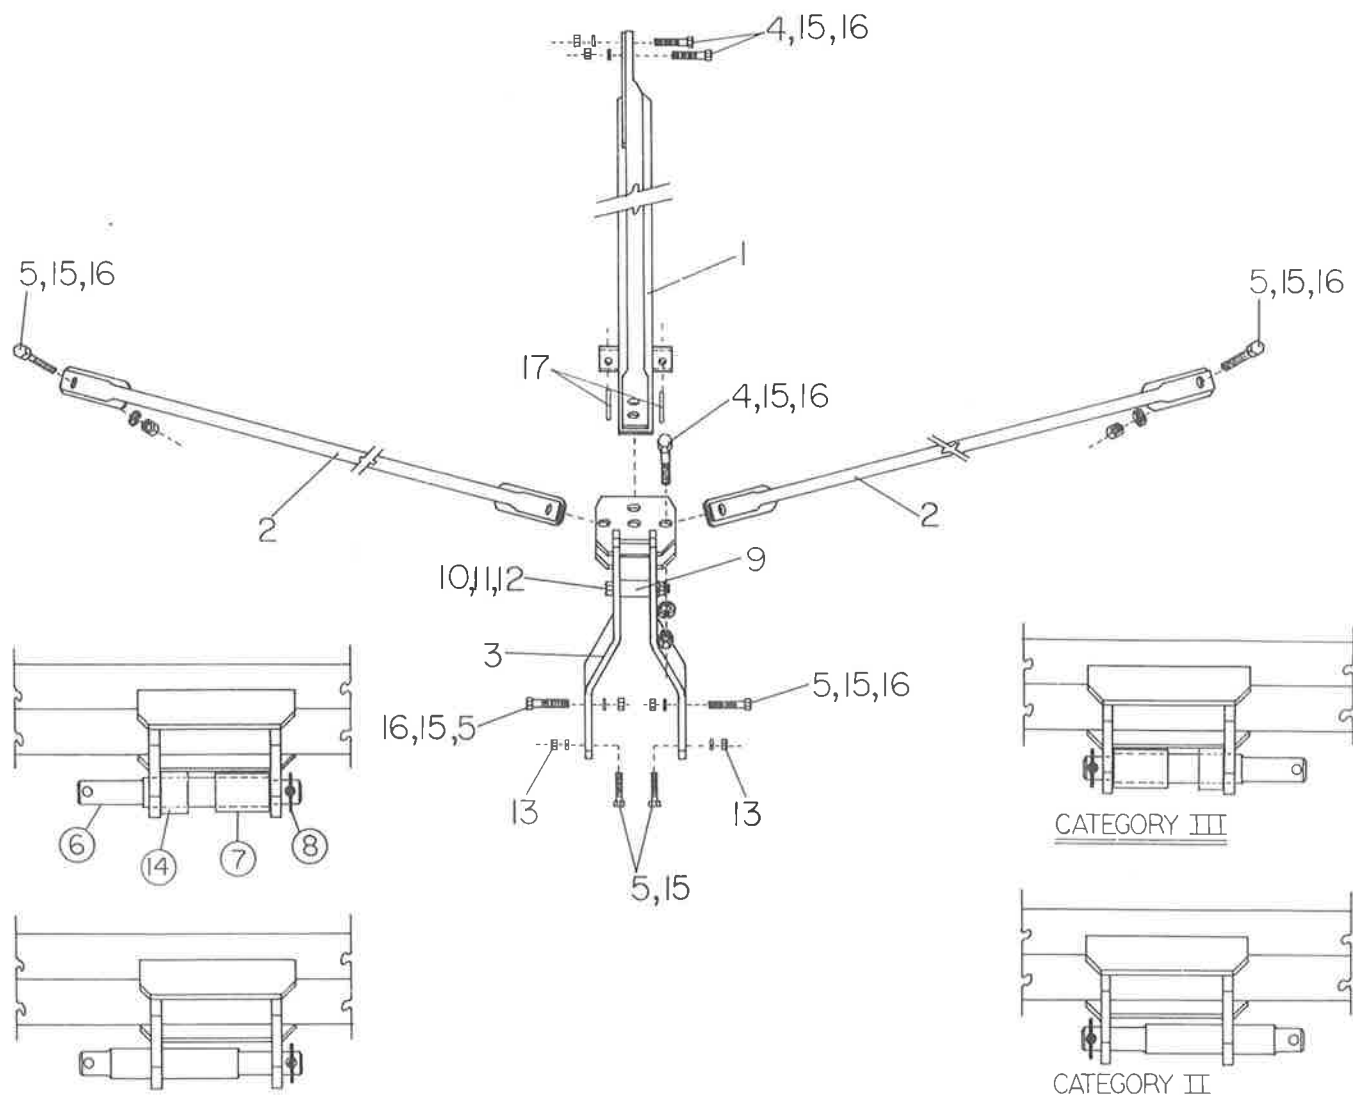

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-475	(- 1993)	Tension Pipe, Center
2	03-080-332	(- 1993)	Tension Pipe, Outside
3	03-080-474	(- 1993)	Mast, 4-Row Cat. II & III
4	48-091350	(- 1993)	3/4 x 2 1/2 C'scr., Grd. 5, Plt'd. (6 Used)
5	48-091300	(- 1993)	3/4 x 2 1/4 C'scr., Grd. 5, Plt'd. Nuts & L.W. (6 Used)
6	03-026-126		Step Hitch Pin
7	05-024-010		Cat. III Spacer
8	02-050-002		Klik Pin 7/16" x 1 3/4"
9	02-024-004	(- 1993)	Mast Spacer
10	48-100530	(- 1993)	1" x 4" Unfin. Hex Screw, Grd. 5, Plt'd.
11	66-010450	(- 1993)	1" Lockwasher, Plt'd.
12	70-010250	(- 1993)	1" Hex Jam Nut
13	70-010150	(- 1993)	3/4" Hex Jam Nut (2 Used)
14	06-024-022		Spacer, 1 x 1 1/2
15	66-010350	(- 1993)	Lockwasher, 3/4 (12 Used)
16	68-010350	(- 1993)	Hex Nut, 3/4 (10 Used)
17	03-050-026	(- 1993)	1/4 x 2 Roll Pin (2 Used)

540 RPM & 1000 RPM COMER GEAR BOXES


(1986-1992)

4-ROW (540 RPM)

(03-054-066)

4 & 6 ROW (1000 RPM)

(03-054-062)

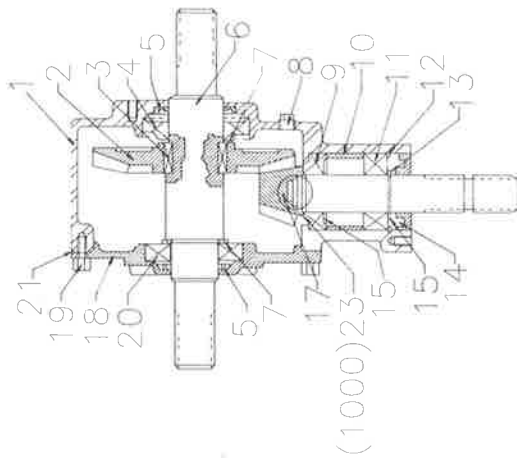

540 RPM & 1000 RPM COMER GEAR BOXES


(1986-1992)

2-ROW (540 RPM)

(03-054-060)

2-ROW (1000 RPM)

(03-054-063)

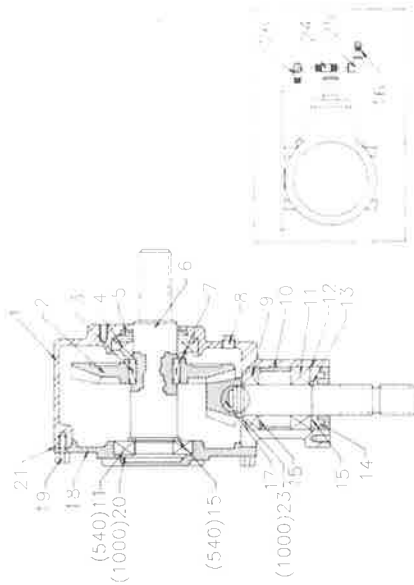

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-054-034		Casting
2	03-054-067		Gear (540 RPM)
3	03-054-072		Gear & Pinion (1000 RPM)
4	03-054-036		Parallel Key A (10 x 8 x 30)
5	03-054-038		Bearing (30208)
6	03-054-068		Oil Seal (40 x 62 x 7)
7	03-054-061		Shaft 1 1/4 Z19
8	03-054-041		Shim (40.3 x 51.5)
9	03-054-040		Plug 1/4" GAS
10	03-054-069		Bearing (30207)
11	03-051-006		Spacer
12	27-050-009		Snap Ring (72 UN17437)
13	27-050-008		Snap Ring (35 UN17435)
14	03-054-070		Oil Seal (35 x 72 x 10)
15	27-050-007		Shim (35.3 x 40)
16	27-050-014		Oil Filter Plug
17	03-054-071		Pinion (540 RPM)
18	03-054-072		Pinion & Gear (1000 RPM)
19	03-054-052		Cover (540 RPM)
20	03-054-057		Bolt (M2 x 20)
21	03-054-053		Gasket
22	27-050-013		Shim (1000 RPM ONLY)
23	03-054-056		Shim (1000 RPM ONLY)

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-054-034		Casting
2	03-054-067		Gear (540 RPM)
3	03-054-072		Gear & Pinion (1000 RPM)
4	03-054-036		Parallel Key A (10 x 8 x 30)
5	03-054-038		Bearing (30208)
6	03-054-073		Oil Seal (40 x 62 x 7)
7	03-054-064		Shaft 1 1/4 Z19 (1000 RPM)
8	03-054-040		Shim (40.3 x 51.5)
9	03-054-041		Plug 1/4" GAS
10	27-051-004		Bearing (30207)
11	03-054-069		Spacer
12	27-050-009		Snap Ring (72 UN17437)
13	27-050-008		Snap Ring (35 UN17435)
14	03-054-070		Oil Seal (35 x 72 x 10)
15	27-050-007		Shim (35.3 x 48)
16	27-050-014		Oil Filter Plug
17	03-054-071		Pinion (540 RPM)
18	03-054-072		Pinion & Gear (1000 RPM)
19	03-054-051		Cover (1000 RPM)
20	03-054-052		Bolt (M2 x 20)
21	03-054-053		Gasket
22	27-050-013		Plug (3/8" GAS)
23	03-054-056		Shim (1000 RPM ONLY)
24	03-059-003		3/8 x 2" Nipple, Sch. 40
25	03-059-004		90" Elbow, 3/8 Pipe, Sch. 40
26	03-059-005		90" Street El. 3/8 Pipe Sch. 40

03-SERIES PEANUT DIGGER-SHAKER-INVERTER

(2-Row)

540 GEAR BOX
(03-054-075)



1000 GEAR BOX
(03-054-076)

(1993 -)

(4-Row & 6-Row)


540 GEAR BOX
(03-054-077)

1000 GEAR BOX
(03-054-078)

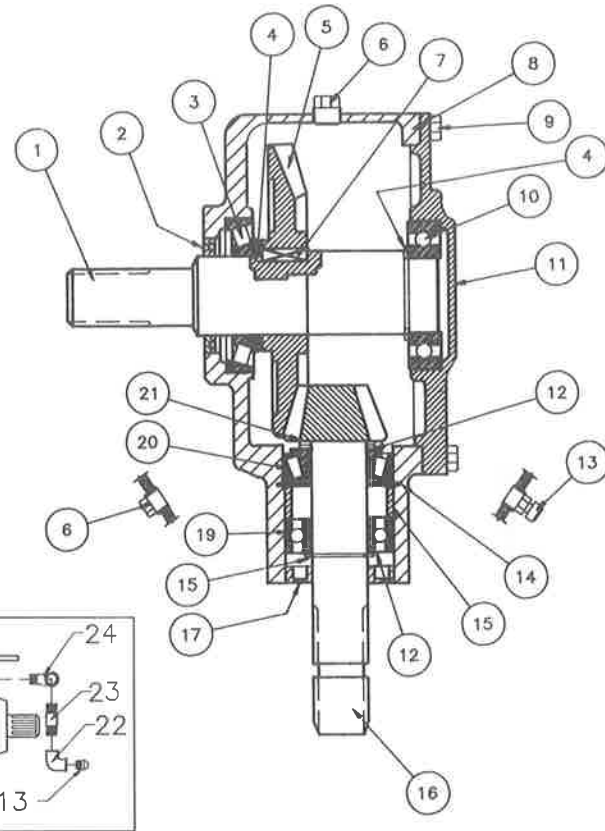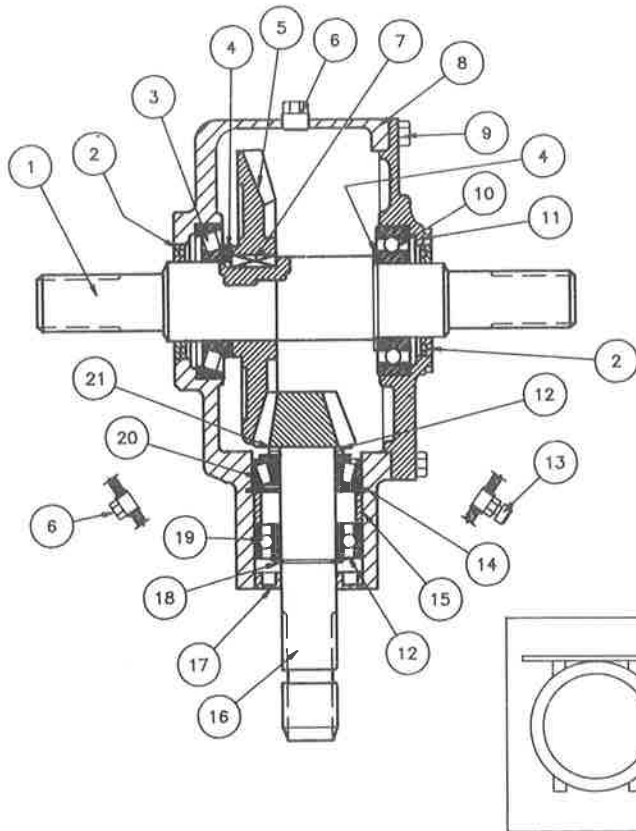

ITEM	PART NO.	SERIAL NO. OR YR.	DESCRIPTION	-075	-076	-077	-078
1	03-054-079		Shaft	1	1	-	-
	03-054-088		Shaft	-	-	1	1
2	03-054-038		Seal, Output	1	1	2	2
3	03-054-037		Bearing, Tapered	1	1	1	1
4	03-054-040		Shim	2	2	2	2
5	03-054-080		Gear, Z36, M4, 35	1	-	1	-
	03-054-087		Bevel Coupling	-	1	-	1
6	27-050-013		Plug, 3/8 Gas	2	2	2	2
7	03-054-081		Parallel Key B 12 x 8 x 30	1	1	1	1
8	03-054-082		Casing	1	1	1	1
9	03-054-083		Bolt M 10 x 25 8,8	8	8	8	8
10	03-051-028		Bearing 6208	1	1	1	1
11	03-054-084		Cover	1	1	-	-
	03-054-089		Cover	-	-	1	1
12	27-050-007		Shim	2	2	2	2
13	27-050-014		Plug, Oil Filler	1	1	1	1
14	27-050-009		Circlip, Internal	1	1	1	1
15	03-054-085		Spacer	1	1	1	1
16	03-054-086		Pinion Shaft, Z.12 M.4.35	1	-	1	-
17	03-054-070		Seal, Oil	1	1	1	1
18	03-050-108		Snap Ring, 35 UNI7436	1	1	1	1
19	03-051-029		Bearing 6207	1	1	1	1
20	03-051-030		Bearing 32207	1	1	1	1
21	03-050-109		Shim 35.3 x 1.3	1	1	1	1
22	03-059-003		3/8 x 2 Nipple Sch. 40	1	1	-	-
23	03-059-004		90° Elbow 3/8" Pipe Sch. 40	1	1	-	-
24	03-059-005		90° Street EL 3/8 Pipe Sch. 40	1	1	-	-

6-ROW 1-3/4-1000 DRIVELINE '86
(03-055-108) (USED ON MACHINES PRIOR TO 1994)

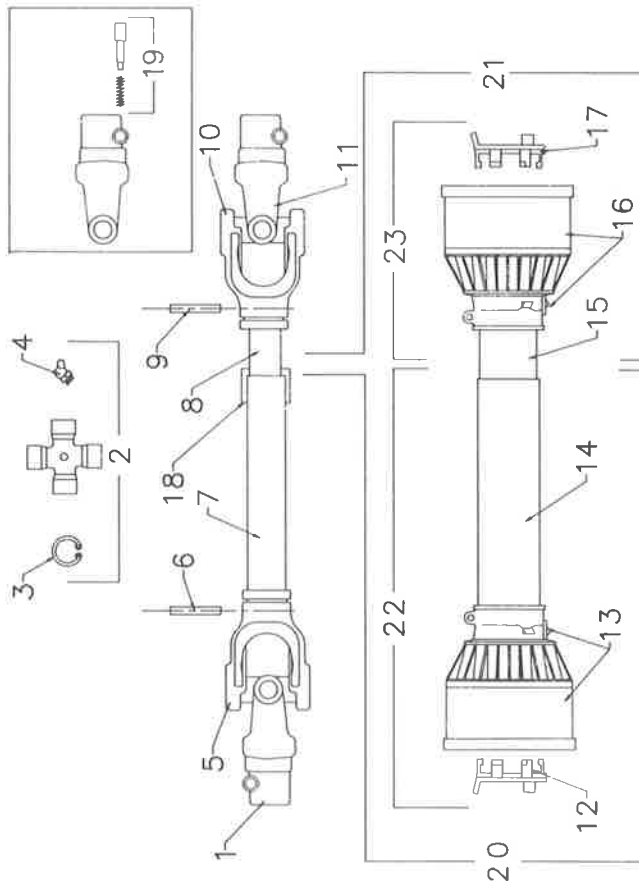


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-055-076	1 3/4 - 1000 Tractor Yoke	
2	03-055-075	Cross & Brg. Kit (2 Used)	
3	03-055-080	Cross Kit Snap Ring (8 Used)	
4	03-055-100	Grease Nipple (2 Used)	
5	03-055-081	Outer Shaft Yoke	
6	03-055-101	Roll Pin Outer	
7	03-055-129	Cardan Tube	
8	03-055-130	C.M. Cardan Tube	
9	03-055-103	Roll Pin Inner Shaft	
10	03-055-084	Inner Shaft Yoke	
11	03-055-078	1-3/8 - 6 (540) Tractor Yoke	
12	03-055-089	Outer Shield Retainer	
13	03-055-131	Outer Shield Cone (6-R Blk.)	
14	03-055-114	Outer Shield Tube (6 R Blk.)	
15	03-055-115	Safety Tube	
16	03-055-132	Inner Shield Cone (6-R Blk.)	
17	03-055-090	Inner Shield Retainer	
18	03-055-102	Grease Ring	
19	03-055-098	1-3/8 Q.D. Pin & Spring	
20	03-055-111	1 3/4 - 20 Shielded Tractor Half (6-R)	
21	03-055-113	1-3/8 - 6 Shielded Imp. Half (6-R)	
22	03-055-120	Safety Guard	
23	03-055-121	Half Safety Guard	

2-ROW 1-3/8 - 540

DRIVELINE '86 (USED ON PRESENT 2-ROW DRIVELINE '86
(03-055-122) & PRIOR TO 1994 ON 4-ROW) (03-055-123)

**** 4-ROW 1-3/4 - 1000 DRIVELINE '86**

(03-055-124) (USED ON MACHINE PRIOR TO 1994 4-ROW)

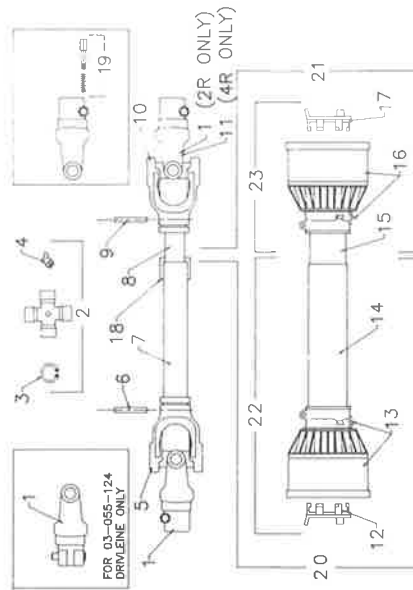

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	122	123	124
1	03-055-078	1-3/8 - 6 (540) Tractor Yoke		2	-	-
	03-055-077	1-3/8 - 1000 Tractor Yoke		-	1	-
	03-055-076	1 3/4 - 1000 Tractor Yoke		-	-	1
2	03-055-075	Cross and Brg. Kit		2	2	2
3	03-055-080	Cross Kit Snap Ring		8	8	8
4	03-055-100	Grease Nipple		2	2	2
5	03-055-081	Outer Shaft Yoke		1	1	1
6	03-055-101	Roll Pin Outershaft		1	1	1
7	03-055-082	Outer Shaft		1	1	1
8	03-055-083	Inner Shaft		1	1	1
9	03-055-103	Roll Pin Inner Shaft		1	1	1
10	03-055-084	Inner Shaft Yoke		1	1	1
11	03-055-078	1-3/8 - 6 (540) Tractor Yoke		-	1	1
12	03-055-089	Outer Shield Retainer		1	1	1
13	03-055-087	Outer Shield Cone		1	1	1
14	03-055-091	Outer Shield Tube		1	1	1
15	03-055-092	Inner Shield Tube		1	1	1
16	03-055-088	Inner Shield Cone		1	1	1
17	03-055-090	Inner Shield Retainer		1	1	1
18	03-055-102	Grease Ring		1	1	1
19	03-055-098	1-3/8 - Q.D. Pin & Spring		1	2	2
20	03-055-070	Shield Tractor Half - (1-3/8 - 6)		1	-	-
	03-055-126	Shield Tractor Half - (1-3/8 - 1000)		-	1	-
21	03-055-125	Shield Imp. Half - (1 3/4 - 1000)		-	-	1
	03-055-125	Shield Imp. Half - (1 3/8 - 6)		1	1	1
22	03-055-093	Tractor Half Shield w/Retainer		1	1	1
23	03-055-094	Imp. Half Shield w/Retainer		1	1	1


*03-055-123 is Optional on 6-Row Machines
**03-055-124 is Optional on 4-Row Machines

03-SERIES PEANUT DIGGER-SHAKER-INVERTER

1 3/8 - 540 DRIVELINE
(03-055-137)

1 3/8 - 1000 DRIVELINE
(03-055-138)


1 3/4 - 1000 DRIVELINE
(03-055-139)

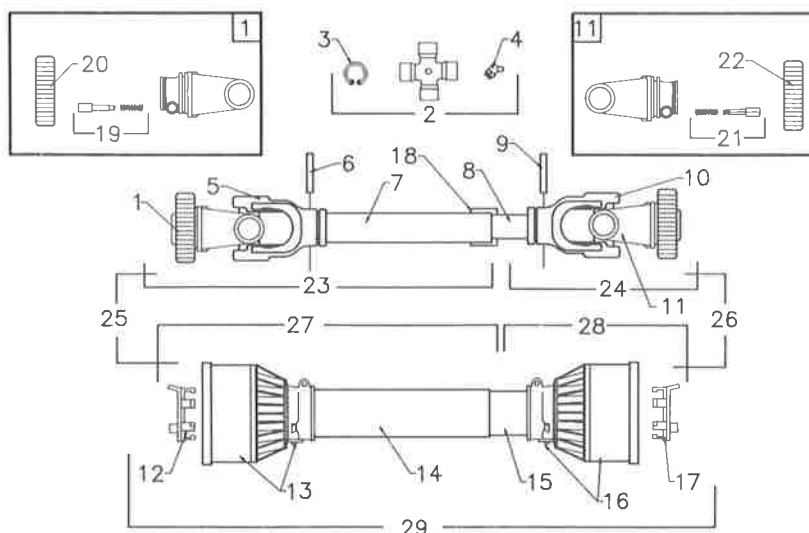

ITEM	PART NO.	SERIAL NO. OR YR.	DESCRIPTION	-137	-138	-139
1	03-055-140		Yoke RS	1	-	-
	03-055-156		Yoke RS	-	1	-
	03-055-159		Yoke RS	-	-	1
2	03-055-075		Cross Journal Assy.	2	2	2
3	03-055-080		Circlip	8	8	8
4	03-055-100		Grease Nipple	2	2	2
5	03-055-081		Outer Tube Yoke	1	1	1
6	03-055-101		Flexible Pin	1	1	1
7	03-055-141		Cardan Tube	1	1	1
8	03-055-142		CM Cardan Tube	1	1	1
9	03-055-103		Flexible Pin	1	1	1
10	03-055-084		Inner Tube Yoke	1	1	1
11	03-055-143		Yoke, RS	1	1	1
12	03-055-089		O. Bearing 3-4	1	1	1
13	03-055-144		O. Cone Sets F3-4	1	1	1
14	03-055-145		CM. Safety Tube	1	1	1
15	03-055-146		Safety Tube	1	1	1
16	03-055-147		I. Cone Sets F3-4	1	1	1
17	03-055-090		I. Bearing 3-4	1	1	1
18	03-055-102		Ring Nut	1	-	-
19	03-055-098		Complete Push Button	1	1	-
	03-055-184		Complete Push Button	-	-	1
20	03-055-148		Sleeve	1	1	-
	03-055-160		Sleeve	-	-	1
21	03-055-098		Complete Push Button	1	1	1
22	03-055-148		Sleeve	1	1	1
23	03-055-149		Half Shaft, 1 3/8 - 6 (540)	1	-	-
	03-055-157		Half Shaft, 1 3/8 - 21 (1000)	-	1	-
	03-055-161		Half Shaft, 1 3/4 - 20 (1000)	-	-	1
24	03-055-150		Half Shaft, 1 3/8 - 6 Imp.	1	1	1
25	03-055-151		Half Shaft, 1 3/8 - 6 (540) w/Shield	1	-	-
	03-055-158		Half Shaft, 1 3/8 - 21 (1000) w/Shield	-	1	-
	03-055-162		Half Shaft, 1 3/4 - 20 (1000) w/Shield	-	-	1
26	03-055-152		Half Shaft, 1 3/8 - 6 Imp. w/Shield	1	1	1
27	03-055-153		Half Safety Shield	1	1	1
28	03-055-154		Half Safety Shield	1	1	1
29	03-055-155		Safety Shield	1	1	1


2-ROW MAIN FRAME

NOTE: Change in frame for 1986 Production, to accept Comer Gear Box. New frame will not work with Terrell Gear Box.

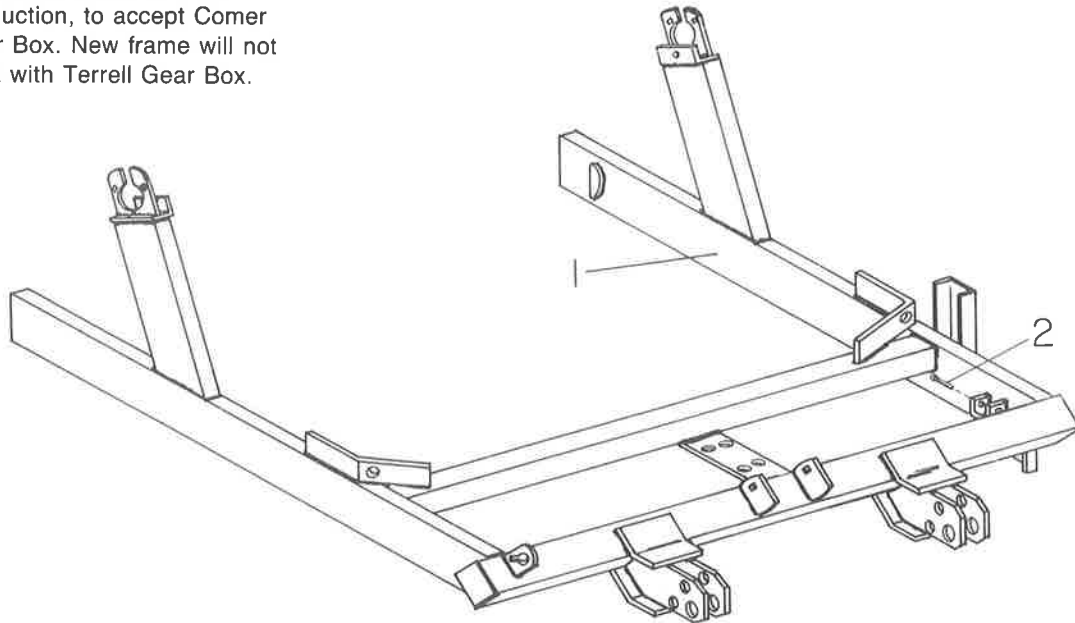


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-315		Main Frame (2-Row)
2	76-010150		Cotter Pin, 3/16 x 2 (2 Used)

4-ROW MAIN FRAME

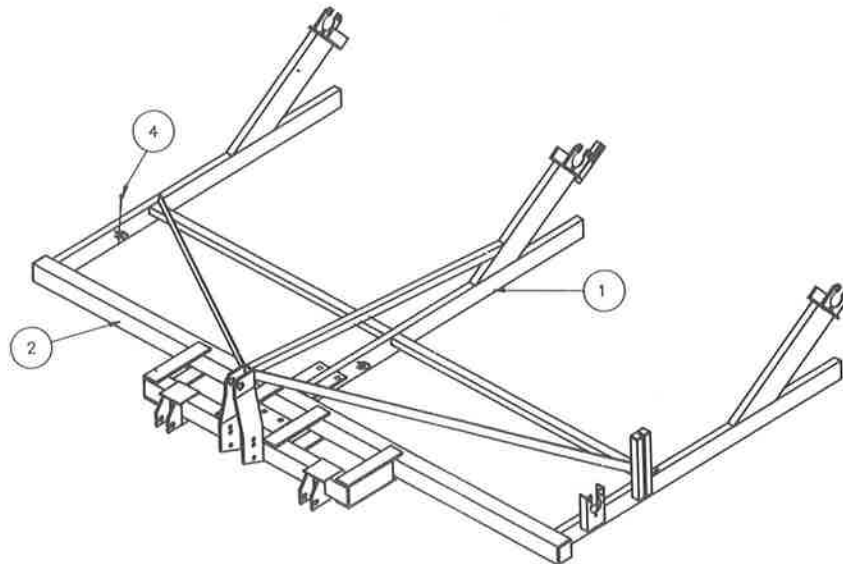


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	*03-080-463	(1980-1990)	Main Frame (4-Row)
	03-080-575	(1991-1993)	Main Frame (4-Row)
	03-080-615	(1994-)	Main Frame
2	02-050-053		KMC Decal (2 Used)
3	02-050-078		Warning Decal
4	76-010150		Cotter Pin, 3/16 x 2 (2 Used)

6-36 & 6-38 - ROW MAIN FRAME

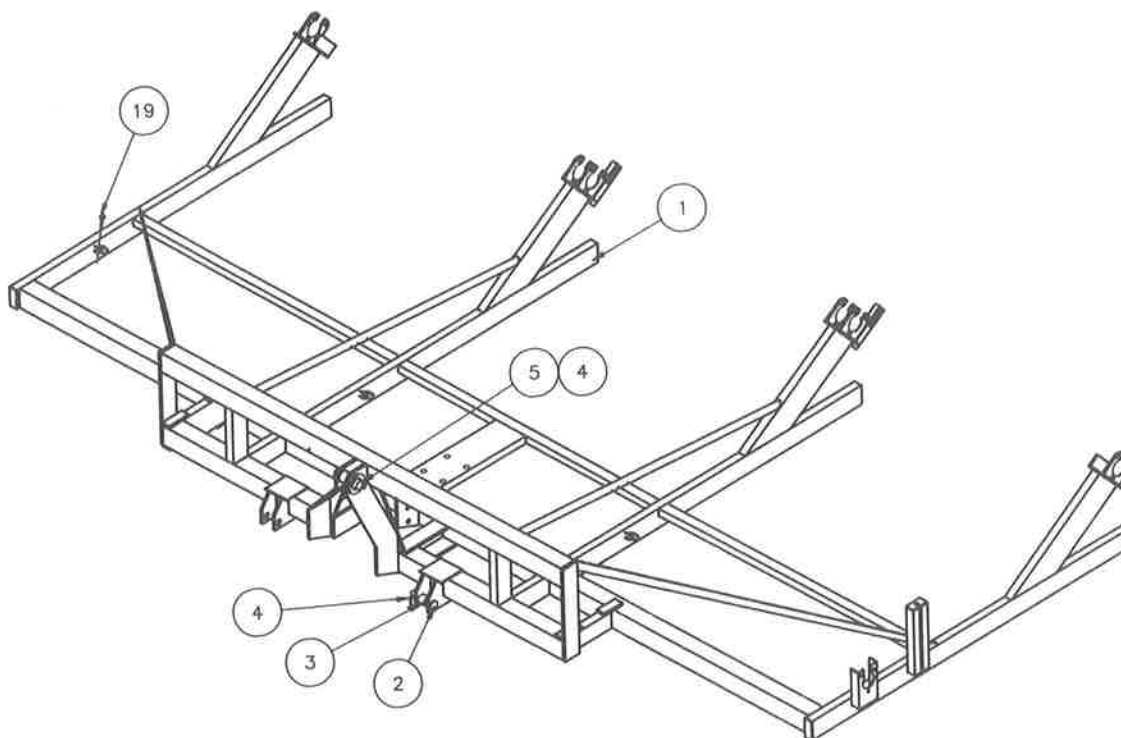


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-505	(-1993)	6-36 - Row Main Frame
	03-080-625	(1994-)	Main Frame, 6-Row 36
	03-080-526	(-1993)	6-38 - Row Main Frame
	03-080-621	(1994-)	Main Frame, 6-Row 38
2	03-050-089		Cat. III Hitch Pin (2 Used)
3	06-024-022		Cat. III Spacer (2 Used)
4	03-050-094		Linch Pin, 7/16 x 2 H.D. (3 Used)
5	03-050-090		Cat. III Top Link Pin
6	03-080-503	(-1993)	84 Tension Pipe (2 Used)
7	03-023-480	(-1993)	Tension Strap Outside (2 Used)
8	48-091550	(-1993)	Capscrew, 7/8 x 2 1/2 (4 Used)
9	66-010400	(-1993)	Lockwasher, 7/8 (4 Used)
10	68-010400	(-1993)	Hex Nut, 7/8 (4 Used)
11	48-091350	(-1993)	Capscrew, 3/4 x 2 1/2 (4 Used)
12	66-010350	(-1993)	Lockwasher, 3/4 (6 Used)
13	68-010350	(-1993)	Hex Nut, 3/4 (4 Used)
14	48-010700	(-1993)	Capscrew, 3/4 x 2 Grd. 2, Pln. (2 Used)
15	70-010150	(-1993)	Jam Nut, 3/4 (2 Used)
16	02-050-053		KMC Decal (2 Used)
17	03-050-095		PTO Decal
18	02-050-078		Warning Decal
19	76-010150		Cotter Pin 3/16 x 2 (6 Used)

2, 4 & 6-ROW RATTLER FRAME AND COMPONENTS (Prior to 1990)

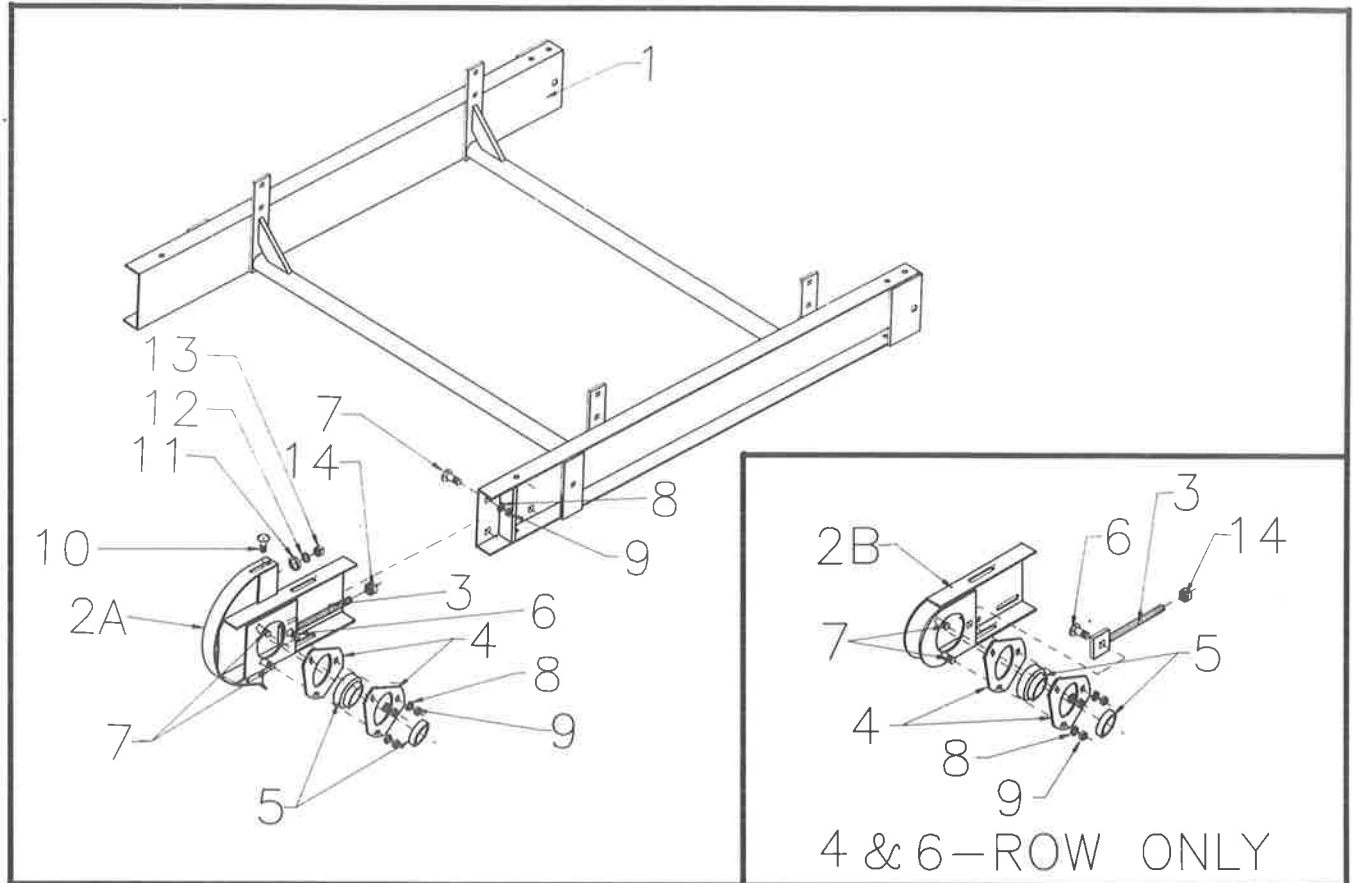



ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2R	4R	6R
1	03-080-469	(-1982)	4-Row Rattler Frame '80	(1)	(2)	-
	03-080-498	(1983-1990)	83 Rattler Frame	(1)	(2)	(3)
2A	03-080-200	(-1990)	Left Skid Shoe	(1)	-	-
	03-080-201	(-1990)	Right Skid Shoe	(1)	-	-
2B	03-080-466	(-1990)	Skid Shoe (4-Row)	-	(4)	(6)
3	03-080-025	(-1990)	Idler Adjustment	(2)	(4)	(6)
4	03-051-003	(-1982)	Flange #62 MS. 3H	(4)	-	-
	03-051-020	(1983-)	Flange #62 MSTR 3H	4	8	12
5	03-051-026	(-1990)	Bearing W.O./Locking Collar	(2)	(4)	(6)
	03-051-025	(-1990)	Locking Collar	(2)	(4)	(6)
6	52-030300	(-1990)	Carriage Screw, 3/8 x 1-1/4 Grd. 2 Plt'd.	(2)	(4)	(6)
7	52-030200	(-1990)	Carriage Screw, 3/8 x 3/4 Grd. 2 Plt'd.	(12)	(24)	(36)
8	66-010150	(-1990)	Lockwasher, 3/8	(14)	(28)	(42)
9	68-010150	(-1990)	Hex Nut, 3/8	(14)	(28)	(42)
10	52-030100	(-1990)	Carriage Screw, 5/16 x 3/4 Grd. 2, Plt'd.	(2)	-	-
11	62-010050	(-1990)	Flatwasher, 5/16	(2)	-	-
12	66-010100	(-1990)	Lockwasher, 5/16	(2)	-	-
13	68-010100	(-1990)	Hex Nut, 5/16	(2)	-	-
14	68-010250	(-1990)	Hex Nut, 1/2	(2)	-	-

2 & 4 & 6-ROW RATTLER FRAME AND COMPONENTS (1991-)

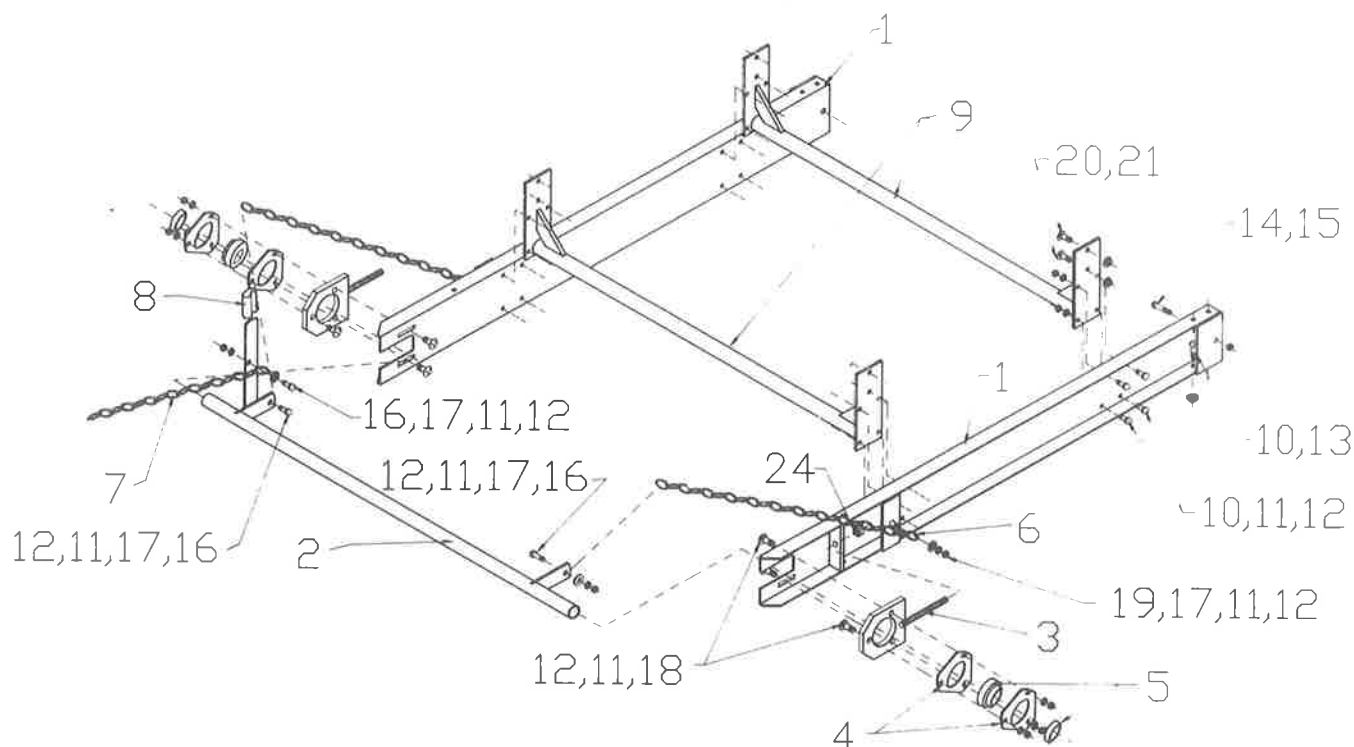

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2-R	4-R	6-36	6-38
1	03-080-561		Rattler Side	2	4	6	6
2	03-080-127		236 Rattler Adj. Pipe	1	-	1	-
	03-080-330		436 LT. Adj. Pipe	-	1	1	-
	03-080-331		436 RT. Adj. Pipe	-	1	1	-
	03-080-518		6-38 LT. Rattler Adj.	-	-	-	1
	03-080-519		6-38 RT. Rattler Adj.	-	-	-	1
	03-080-520		6-38 Center Rattler Adj.	-	-	-	1
3	03-080-559		Block Idler	2	4	6	6
4	03-051-020		Flange #62 MSTR 34	4	8	12	12
5	03-051-027		1-3/16 Ext. Brg. w/Collar	2	4	6	6
6	03-050-092		5/0 Mach. Str. Chain (23 Links)	2	4	6	6
7	03-050-093		5/0 Mach. Str. Chain (16 Links)	1	2	3	3
8	03-050-019		Plastic Handle Grip	1	2	3	3
9	03-080-558		Rattler Brace	2	4	6	6
10	48-090-100		Capscrew, 3/8 x 1	24	48	72	72
11	66-010100		Lockwasher, 3/8	25	54	75	75
12	68-010100		Hex Nut, 3/8	25	54	75	75
13	78-020300		Whiz Nut, 3/8	8	16	24	24
14	48-090650		Capscrew, 1/2 x 3 Grd. 5 Plt'd.	2	4	6	6
15	72-010100		Locknut, 1/2 Grd. "B" Plt'd. & Waved	2	4	6	6
16	48-090150		Capscrew, 3/8 x 1 1/4	3	6	9	9
17	62-010100		Flatwasher, 3/8	5	10	15	15
18	52-050045		Carriage Screw, 3/8 x 1 1/2 Grd. 5	4	12	18	18
19	52-050040		Carriage Screw, 3/8 x 1 1/4 Grd. 5	-	4	6	6
20	52-030100		Carriage Screw, 5/16 x 3/4 Grd. Plt.d	8	16	24	24
21	78-020049		Whiz Nut, 5/16	8	16	24	24
22	03-024-190		Rattler Pivot Spacer	-	1	2	4
*23	52-050048		Carriage Screw, 3/8 x 1 3/4 Grd. 5	2	-	-	-
24	68-010250		Hex Nut, 1/2 Plt.d	2	4	6	6


3 WHEEL DIRT KNOCKER (03-081-029)

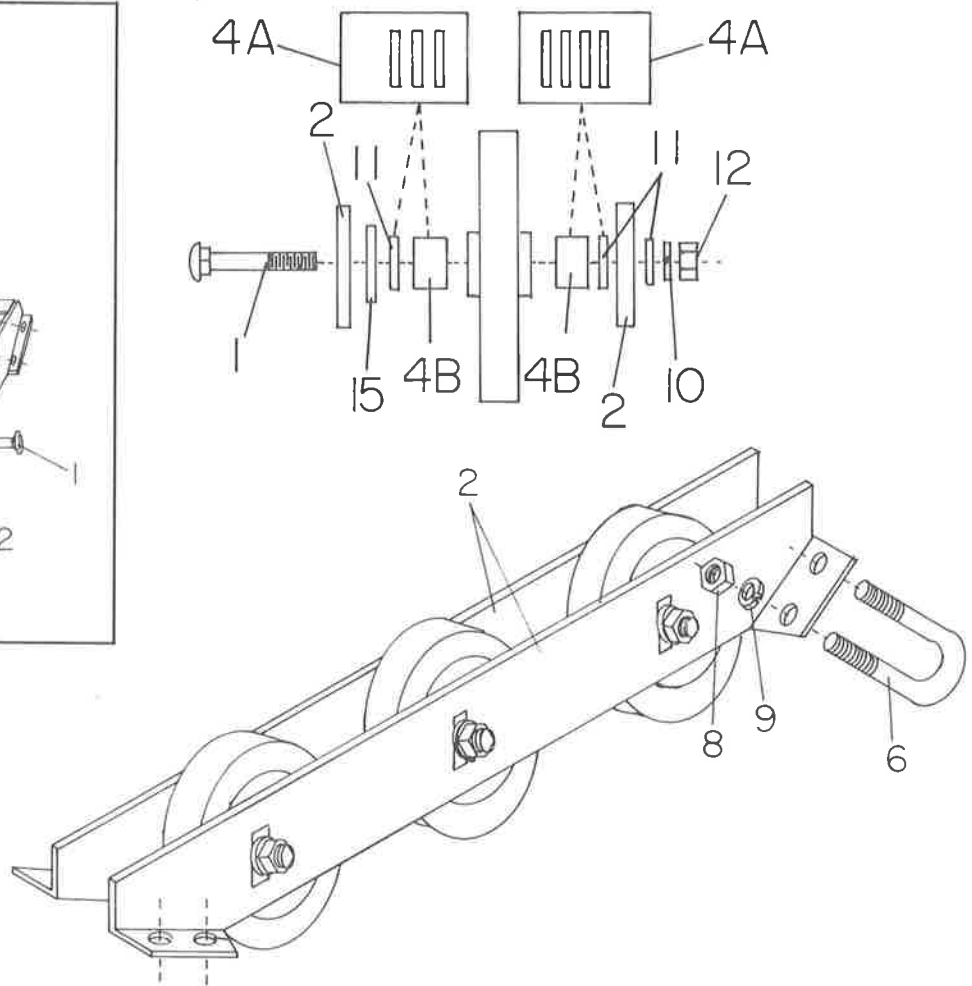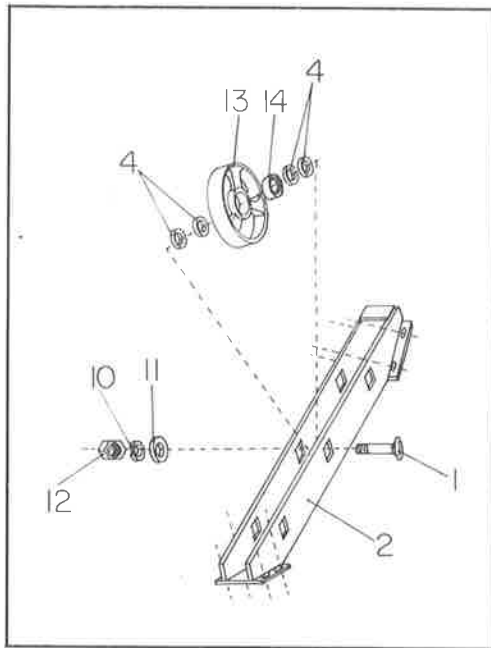

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-050-039	(-1982)	3/4 x 3 1/4 Short Sq. Neck Carriage Bolt (3 Used)
	04-050-011	(1983-1990)	3/4 x 4 1/4 Carriage Bolt (3 Used)
	52-030990	(1991-)	3/4 x 4 1/2 Carriage Bolt Grd. 2 (3 Used)
2	03-080-140	(-1982)	Dirt Knocker Support
	03-023-464	(1983-)	Dirt Knocker Support (2 Used)
3	03-081-016	(-1982)	Knocker Wheel Assembly (3 Used)
	03-050-083	(1983-)	7" Knocker Wheel Ass'y.
4	03-050-028	(-1982)	1 1/4 x 3/4 Washer (12 Used)
4A	04-050-014	(1983-1984)	1 1/4 x 3/4 x 3/16 Washer (21 Used)
4B	03-050-086	(1985-)	Knocker Wheel Spacer (6 Used)
*6	03-050-025		3/8 "U" Bolt (4 Used)
*8	68-010150		3/8" Hex Nut, Plt'd. (8 Used)
*9	66-010150		3/8" Lockwasher, Plt'd. (8 Used)
10	66-010350		3/4" Lockwasher, Plt'd. (3 Used)
11	62-010300		3/4" Flatwasher, Plt'd. (9 Used)
12	70-010150	(-1990)	3/4" Jam Nut (3 Used)
	68-010350	(1991-)	3/4 Hex Nut (3 Used)
13	03-057-013	(-1982)	Knocker Wheel (3 Used)
14	03-051-015	(-1982)	3/4" Cyl. Bearing (204) (6 Used)
15	62-010370	(1983-1990)	1" Std. Flatwasher (3 Used)
	62-020050	(1991-)	1" SAE Flatwasher (3 Used)

*Items not included in 03-081-029.

2 & 4-ROW DRIVE TRAIN COMPONENTS

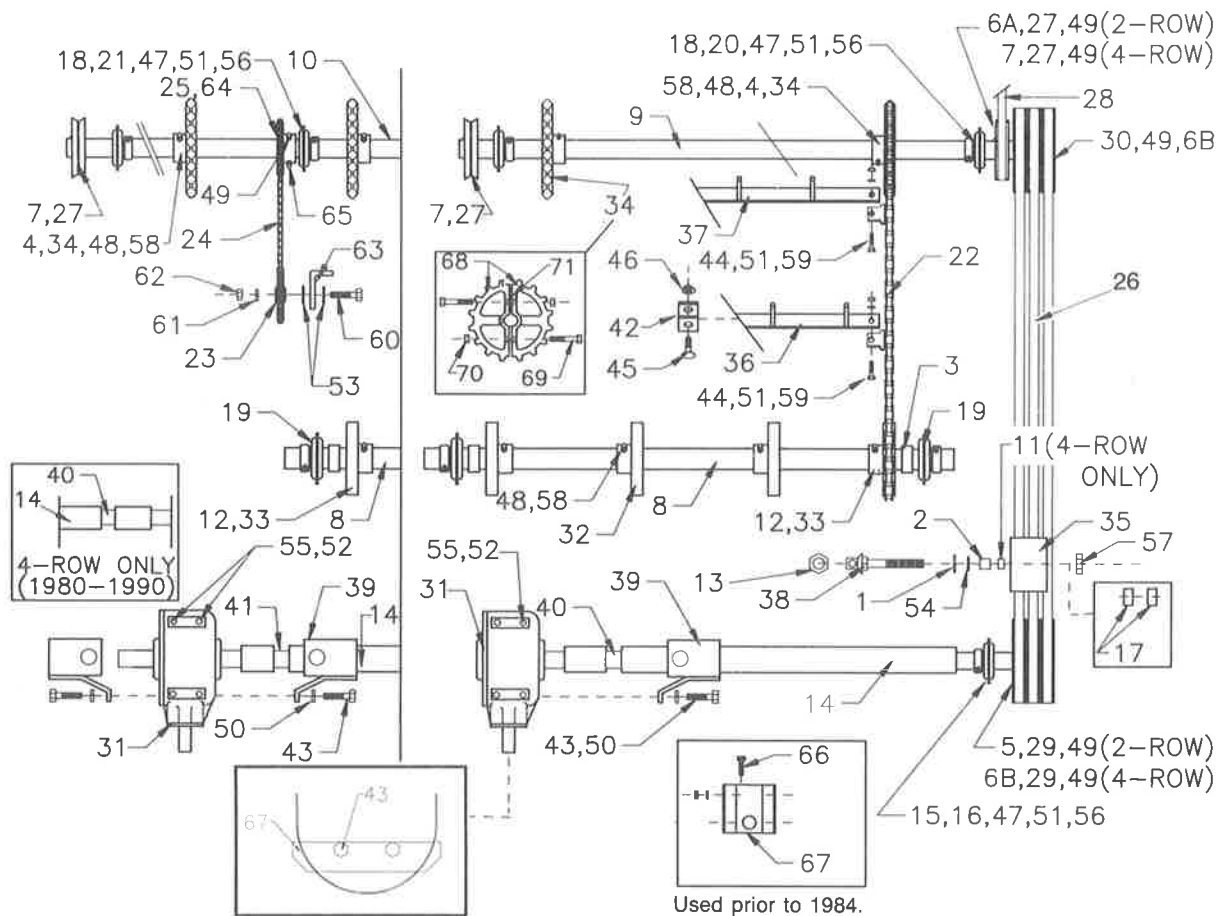


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2-ROW	4-ROW
1	03-023-148	(-1983)	Idler Washer	(1)	(2)
	62-010370	(1984-)	Flatwasher, 1"	1	1
2	03-024-036	(-1983)	3/4" Spacer, 29/32"	(1)	(2)
	03-050-085	(1984-)	3/4" Spacer, 1-1/8	1	1
3	03-024-102	(-1990)	Chain Idler Spacer	(2)	(4)
	03-024-215	(1991-)	Chain Idler Spacer	2	4
4	03-026-016		1/4 x 2 Key	2	4
5	03-026-017		1/4 x 2-11/16 Key	1	-
6A	03-026-033		1/4 x 4-7/8 Key (Left Side)	1	-
6B	03-026-095	(1991-)	1/4 x 4 Key	-	2
7	03-026-042		1/4 x 1-9/16 Key (Right Side)	1	2
8	03-026-074	(-1990)	Front Shaft	(1)	(2)
	03-026-175	(1991-)	Front Shaft 91	1	2
9	03-026-075		Rattler Drive Shaft 2-Row	1	-
	03-026-142	(-1990)	Rattler Drive Shaft, Lt. (4-Row)	-	(1)
10	03-026-143	(-1990)	Rattler Drive Shaft, Rt. (4-Row)	-	(1)
	03-026-176	(1991-)	Rear Shaft	-	1
11	03-050-086		Knocker Wheel Spacer	-	1
12	03-050-026		1/4 x 2 Spirol Pin	2	4
13	03-050-047		Idler Adjusting Screw (2-Row)	1	-
	03-050-053		1/2 - 13 NC x 16" Capscrew (4-Row)	-	1
14	03-050-048		1 1/2" Plastic Pipe (2-Row)	1	-
	03-050-081		Jackshaft Shield (4-Row)	-	1
15	03-051-002		1-3/16" Bearing w/Collar	1	1
16	03-051-020		#62 MSTR 3-H Flange	2	2
17	03-051-015		3/4" Cylindrical Bearing (204)	(2)	(4)
18	03-051-016		1 1/4" Bearing and Collar (SPH-72)	2	3
19	—		See Page 12 for Components (2-Row)	-	-
	—		See Page 12 for Components (4-Row)	-	-

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2-ROW	4-ROW
20	03-051-024		#72 MSTR 3-H Flange	4	4
21	03-051-023		#72 M.S. 3-Hole Flange (4-Row)	-	2
22	03-052-001		Chain (CA550-80)	2	-
	03-052-002		Attach Link (CA550-A4)		
	03-052-003		Coupler Link (CA550)		
	03-052-007		Roller Link (CA550)		
	03-052-008		Half Link (CA550)		
	03-052-045		Chain (CA557-80)	-	4
23	03-052-012		Sprocket Idler	-	1
24	03-052-043		Chain (#60-71)	-	1
	03-052-037		Offset Link #60	-	
	03-052-018		Connecting Link #60	-	
25	03-052-044		Sprocket #60 B-13 1.25	-	1
26	03-053-015		V-Belt HC-156.2 (1 Matched Set)	1	-
	03-053-040	(1991-)	V-Belt HC-156.2 (Set of 3)	-	1
27	03-053-030		Sheave (1C 6.35-F 1.25 PS)	2	2
28	03-053-031		V-Belt HC-72 (C-68)	2	2
29	03-053-036		Sheave (2C 10.375 F 1.88 PS)	2	3
30	03-053-037		Sheave (2C 12.375 F 1.25 P.S)	2	3
31	03-054-060	(1985-1992)	Gear Box 540 RPM (2-Row)	1	-
	03-054-075	(1993-)	Gear Box 540 RPM (2-Row)	1	-
	03-054-062	(1985-1992)	Gear Box 1000 RPM (4-Row)	-	1
	03-054-078	(1993-)	Gear Box 1000 RPM (4-Row)	1	-
32	03-057-003		Front Bar Idler	2	4
33	03-057-007		Front Chain Idler	2	4
34	03-081-084		Sprocket	2	4
35	03-057-012	(-1984)	7" Belt Idler w.o./Bearing	(1)	(2)
	03-081-017	(-1984)	7" Belt Idler w/Bearing	(1)	(2)
	03-053-039	(1985-)	Flat Idler, 3¼ x 6½	1	1
36	03-080-531		Rattler Bar, Lt.	10	20
37	03-080-532		Rattler Bar, Rt.	10	20
38	03-080-206		Idler Bolt, ¾	1	-
	03-080-562	(1991-)	Idler Bolt, ¾", 4	-	1
39	03-080-450	(-1990)	Coupling Shield	(1)	(2)
	03-080-546	(1991-1992)	Coupling Shield, 3¼ I.D.	1	2
	03-080-586	(1993-)			
40	03-080-010		Jackshaft (2-Row)	1	-
	03-080-461	(1980 - 1990)	Jackshaft (4-Row) (Use with Comer Box, both sides)	-	(2)
41	03-080-462		Jackshaft (4-Row)	-	1
42	03-027-077		Knocker Pads	10	20
43	03-050-097		M8 x 16mm Capscrew	3	2
44	48-090150		Capscrew, 3/8 x 1¼ Grd. 5	40	80
45	52-050050		Carriage Screw, 3/8 x 2¼ Grd. 5	10	20
46	78-020300		Locknut, 3/8 Whiz Flange	10	20
47	52-050035		Carriage Screw, 3/8 x 1 Grd. 5	9	11
48	54-010150		Setscrew, 3/8 x 7/8 Sq. Hd. Cuppt.	4	8
49	54-010050		Setscrew, 3/8 x ½ Sq. Hd. Cuppoint	12	17
50	66-010100		Lockwasher, 5/16	1	2
51	66-010150		Lockwasher, 3/8	49	91
52	66-010250		Lockwasher, ½	4	4
53	04-050-013		Flatwasher, 5/8 H.T.	-	2
54	62-010300		Flatwasher, ¾	1	1
55	03-050-091		M12 (1.75 x 30mm) Capscrew	4	4
56	68-010150		Hex Nut, 3/8	9	16
57	68-010350		Hex Nut, ¾	1	1
58	70-010050		Jam Nut, 3/8	4	8
59	72-010050		Lock Nut, 3/8	40	80
60	48-060300		Capscrew, 5/8 x 2½	-	1
61	66-010300		Lockwasher, 5/8	-	1
62	68-010300		Hex Nut, 5/8	-	1
63			Idler Bracket Frame	-	-
64	03-026-138		¼ x 1¼ Key	-	1
65	54-010100		Setscrew, 3/8 x ¾ Sq. Hd. Cuppt.	-	1
66	48-040060	(-1983)	Capscrew, 5/16 x ¾ w/Lockwasher & Nut	(4)	-
67	03-027-009	(-1984)	"U" Joint Shield	(1)	-
	03-080-576	(1992-)	Shield, P.T.O. 2-Row	1	-
*68	03-057-011		Sprocket	2	4
*69	48-090596		Capscrew, ½ x 1¼ Grd. 5 Plt'd.	4	8
*70	72-010100		Locknut, ½ Grd. "B"	4	8
*71	03-050-098		Washer, 1-3/8 x 17/32 x .042	2	4

*These items make up item 34 (03-081-084).

6-36 & 6-38 ROW DRIVE TRAIN COMPONENTS

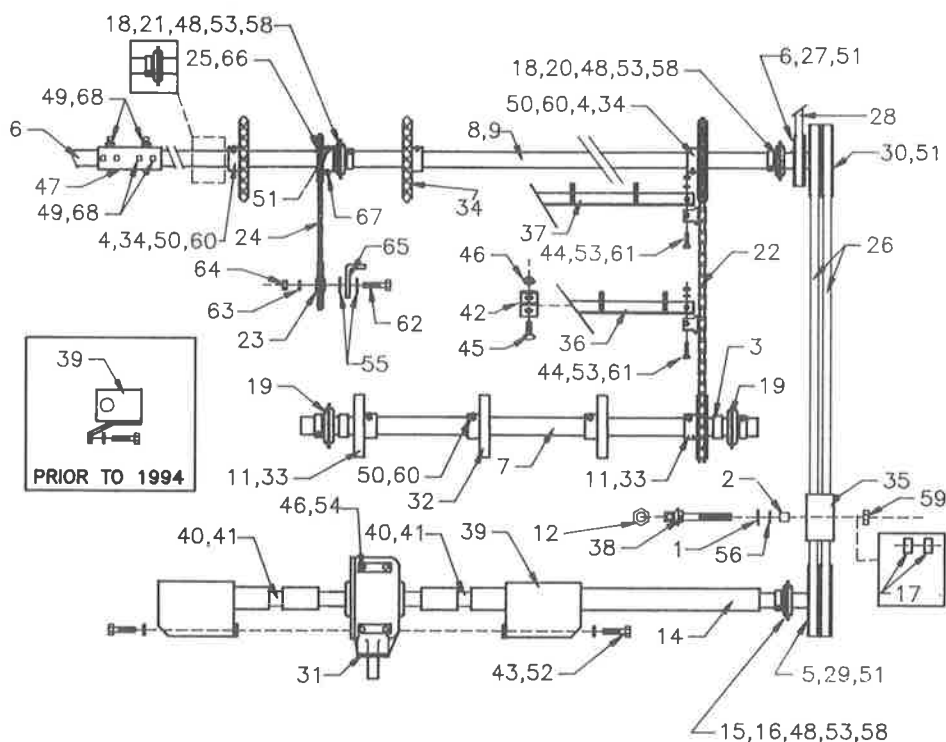



ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	6-36 ROW	6-38 ROW
1	03-023-148	(-1983)	Idler Washer 13/16"	(2)	(2)
	62-010370	(1984-)	Flatwasher, 1"	2	2
2	03-024-036	(-1983)	3/4" Spacer, 29/32	(2)	(2)
	03-050-085	(1984-)	3/4" Spacer, 1-1/8	2	2
3	03-024-102	(-1990)	Chain Idler Spacer	(6)	(6)
	03-024-215	(1991-)	Chain Idler Spacer	6	6
4	03-026-016		Key, 1/4 x 2	6	6
5	03-026-017		Key, 1/4 x 2-11/16	2	2
6	03-026-033		Key, 1/4 x 4-7/8	3	3
7	03-026-074	(-1990)	Front Shaft	(3)	(3)
	03-026-175	(1991-)	Front Shaft, 91	3	3
8	03-026-186		Rear Drive Shaft (6-Row)	2	-
9	03-026-158		Rear Drive Shaft (6-38)	-	2
11	03-050-026		Spirol Pin, 1/4 x 2	6	6
12	03-050-053		Capscrew, 1/2-13 NC x 16	2	2
13	03-050-081	(-1992)	Jackshaft Shield	(2)	(2)
14	03-050-074	(-1992)	Plastic Pipe, 1 1/2 x 22 1/4 (6-Row)	(2)	-
	03-050-107		Plastic Pipe, (6-36)	2	-
	03-050-048		Plastic Pipe, 1 1/2 x 29 1/2 (6-38)	-	2
15	03-051-002		Ext. Bearing w/Collar, 1-3/16	2	2
16	03-051-020		#62 MSTR 3-H Flange	4	4
17	03-051-015	(-1984)	3/4 Cylindrical Bearing (204)	(4)	(4)
18	03-051-016		1 1/4 Bearing and Collar (SPH-72)	4	6
19	—		See Page 13 For Components	-	-
20	03-051-024		#72 MSTR 3-H Flange	4	4
21	03-051-023		#72 M.S. 3-Hole Flange	4	8
22	03-052-045		Chain (CA557-80)	6	6
	03-052-046		Attach Link (CA557-A4)		
	03-052-047		Coupler Link (CA557)		
	03-052-048		Roller Link (CA557)		
	03-052-049		Half Link (CA557)		

03-SERIES PEANUT DIGGER-SHAKER-INVERTER

17

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	6-36 ROW	6-38 ROW
23	03-052-012		Sprocket Idler (60-15T-625)	2	2
24	03-052-043		Chain (#60-71)	2	2
	03-052-018		Connecting Link #60		
	03-052-037		Offset Link #60		
25	03-052-044		Sprocket #60B-13-1.25	2	2
26	03-053-015		V-Belt HC-156.2 (1 Matched Set)	2	2
27	03-053-030		Sheave (1C 6.35-F 1.25PS)	2	2
28	03-053-031		V-Belt HC-72 (C-68)	2	2
29	03-053-036		Sheave (2C 10.375-F 1.88PS)	4	4
30	03-053-037		Sheave (2C 12.375-F 1.25PS)	4	4
31	03-054-062	(-1992)	4 & 6 Row Gear Box	(1)	(1)
	03-054-078	(1993-)	Gear Box	1	1
32	03-057-003		Front Bar Idler	6	6
33	03-057-007		Front Chain Idler	6	6
34	03-081-084		Sprocket (See Page ____ for parts)	6	6
35	03-057-012	(-1984)	7" Belt Idler wo/Bearings	(2)	(2)
	03-081-017	(-1984)	78" Belt Idler w/Bearings	(2)	(2)
	03-053-039	(1985-)	Flat Idler, 3/4 x 6 1/2	2	2
36	03-080-531		Rattler Bar, Lt.	30	30
37	03-080-532		Rattler Bar, Rt.	30	30
38	03-080-206		Idler Bolt, 3/4	2	2
39	03-080-450	(-1990)	Coupling Shield	(2)	(2)
	03-080-546	(1991-1992)	Coupling Shield	(2)	(2)
	03-080-586	(1993-)	Coupling Shield	2	2
40	03-080-501	(-1984)	Jackshaft, 6-Row, Rt. (Use With Terrell Box)	(1)	-
	03-080-500	(1984-1993)	Jackshaft, 6-Row Lt.	(2)	-
	03-080-628	(1994-)	Jackshaft, 6-Row	2	2
41	03-080-523	(1984-)	Jackshaft, 6-38, Lt.		2
	03-080-524	(-1984)	Jackshaft, 6-38, Rt. (use with Terrell Box)		(1)
42	48-090060	(-1984)	Capscrew, 5/16 x 2 3/4, Grd. 5 Plt'd.	(1)	(1)
43	03-050-097		Capscrew, M8 x 16 mm Hex Hd.	4	4
44	48-090150		Capscrew, 3/8 x 1 1/4, Grd. 5	120	120
46	48-010150	(-1984)	Capscrew, 1/2 x 1	(3)	(3)
	03-050-091	(1985-)	Capscrew, 12 mm x 30 mm	4	4
47	03-080-506		Rear Drive Shaft Coupler	1	1
48	52-050035		Carriage Screw, 3/8 x 1, Grd. 5 Plt'd.	16	20
49	54-010194		Setscrew, 7/16 x 1 1/4 Sq. Hd. Cuppt.	6	6
50	54-010150		Setscrew, 3/8 x 7/8 Sq. Hd. Cuppt.	12	12
51	54-010050		Setscrew, 3/8 x 1/2 Sq. Hd. Cuppt.	22	22
52	66-010100		Lockwasher, 5/16	2	2
53	66-010150		Lockwasher, 3/8	136	140
54	66-010250		Lockwasher, 1/2	4	4
55	04-050-013		Flatwasher, 5/8 H.T.	4	4
56	62-010300		Flatwasher, 3/4	2	2
58	68-010150		Hex Nut, 3/8	16	20
59	68-010350		Hex Nut, 3/4	2	2
60	70-010050		Jam Nut, 3/8	12	12
61	72-010050		Lock Nut, 3/8	120	120
62	48-060300		Capscrew, 5/8 x 2 1/2, Grd. 5 Pln.	2	2
63	66-010300		Lockwasher, 5/8	2	2
64	68-010300		Hex Nut, 5/8	2	2
65	—		Idler Bracket Frame	-	-
66	03-026-138		Key, 1/4 x 1 1/4	2	2
67	54-010100		Setscrew, 3/8 x 3/4 Sq. Hd. Cuppt.	2	2
68	70-010071		Jam Nut, 7/16 Hex	6	6

2-ROW SPRING LOADED COULTER (03-081-070)

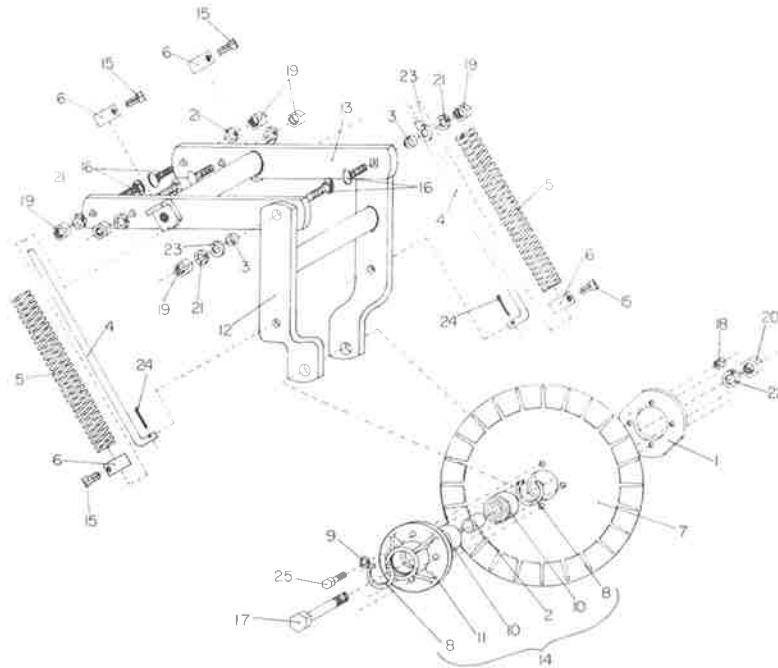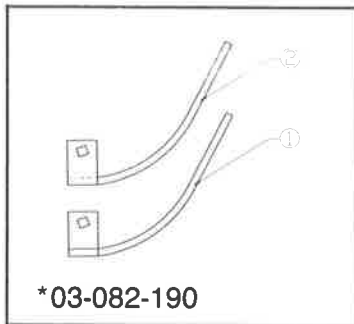


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-023-064		Coulter Flange
2	04-024-069		Bearing Spacer 3/8"
3	04-024-001		Pivot Bushing (2 Used)
4	03-026-115		Spring Push Rod (2 Used)
5	03-050-008		Coulter Spring (2 Used)
6	03-050-009		11/16 Adj. Collar (4 Used)
7	03-050-010		Dura Flute Coulter 17"
8	04-050-078		Retaining Ring 2-3/64; Internal (2 Used)
9	62-010050		5/16" Flatwasher, Plt'd. (4 Used)
10	04-051-004		3/4" Cyl. Bearing (2 Used)
11	03-057-014		Coulter Hub
12	03-080-319		Coulter Fork
13	03-080-320		Spring Coulter Arm
14	04-081-014		Coulter Hub Assembly
15	54-010200		1/2 x 5/8 Sq. Hd. Cuppoint Setscrew (4 Used)
16	52-030800		5/8 x 2 Carriage Bolt, Plt'd. (4 Used)
17	48-010750		3/4 x 5 Capscrew (Axle)
18	72-010050		3/8 Locknut, Grd. "B", Plt'd. & Waxed (4 Used)
19	68-010300		5/8 Hex Nut, Plt'd. (6 Used)
20	68-010350		3/4 Hex Nut, Plt'd.
21	66-010300		5/8 Lockwasher, Plt'd. (6 Used)
22	66-010350		3/4 Lockwasher, Plt'd.
23	62-010250		5/8 Flatwasher, Plt'd. (2 Used)
24	76-010100		3/16 x 1 1/2 Cotter Pin (2 Used)
25	48-060100		3/8 x 1 1/2 Capscrew, Grd. 5 (4 Used)

CENTER COULTER VINE HOLD DOWN *(03-082-190)

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-547		Center Coulter Hold Down, Lt.
2	03-080-548		Center Coulter Hold Down, Rt.


* Can be used on (03-081-070 & 03-082-157) coulters.

4-ROW CENTER COULTER (03-081-105)

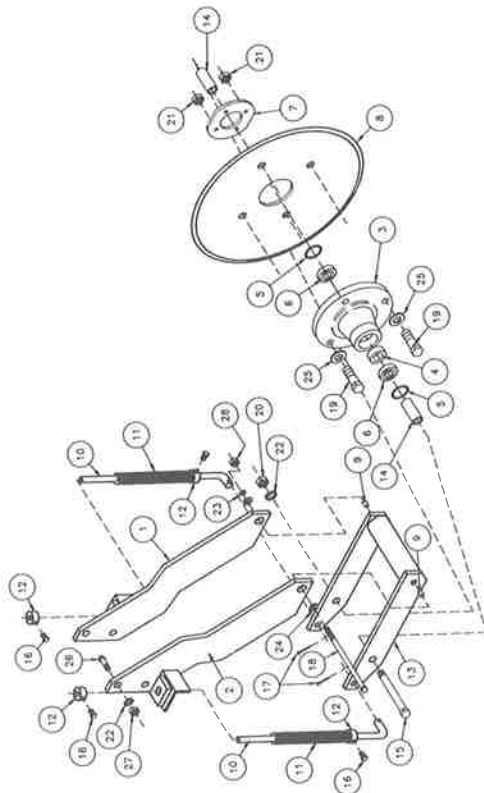





ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	QTY.
1	03-080-611		Support, Coulter 4-Row Lt.	1
2	03-080-612		Support, Coulter 4-Row Rt.	1
3	03-057-014		Hub, Coulter	1
4	04-024-069		Spacer, 3/8 Bearing	1
5	04-050-078		Ring, Internal Retainer 2 3/64	2
6	04-051-004		Bearing, 3/4 Ext. Cyl. (205)	2
7	03-023-064		Flange, Coulter	1
8	03-050-042		Coulter, Dura-Flute 20"	1
9	04-024-001		Bushing, Pivot	2
10	03-026-115		Rod, Spring Push	2
11	03-050-008		Spring, Coulter	2
12	03-050-009		Collar, 11/16 Adj.	4
13	03-080-619		Fork, Coulter	1
14	03-024-236		Spacer, Bearing	2
15	48-100110		Capscrew, 3/4 x 11 Grd. 5 Plt'd.	1
16	54-010200		Setscrew, 1/2 x 5/8 sq. H.D. Cuppt	4
17	76-010100		Cotter Pin, 3/16 x 1 1/2	2
18	48-091268		Capscrew, 5/8 x 12 grd. 5 Plt'd.	1
19	48-060100		Capscrew, 3/8 x 1 1/2 Grd. 5	4
20	68-010350		Hex Nut, 3/4 Plt'd.	1
21	72-010050		Locknut, 3/8 gr B Plt'd. & Waxed	4
22	66-010350		Lockwasher, 3/4 Plt'd.	5
23	66-010300		Lockwasher, 5/8 Plt'd.	1
24	62-020040		Flatwasher, 5/8 SAE Plt'd.	2
25	62-010050		Flatwasher, 5/16 Plt'd.	4
26	48-091275		Capscrew, 3/4 x 2 grd. 5 Plt'd.	4
27	70-010150		Nut, Hex Jam, Plain	4
28	72-020050		Locknut, 5/8 Grd. C Plt'd.	1

6 ROW MAST COULTER (03-082-157)

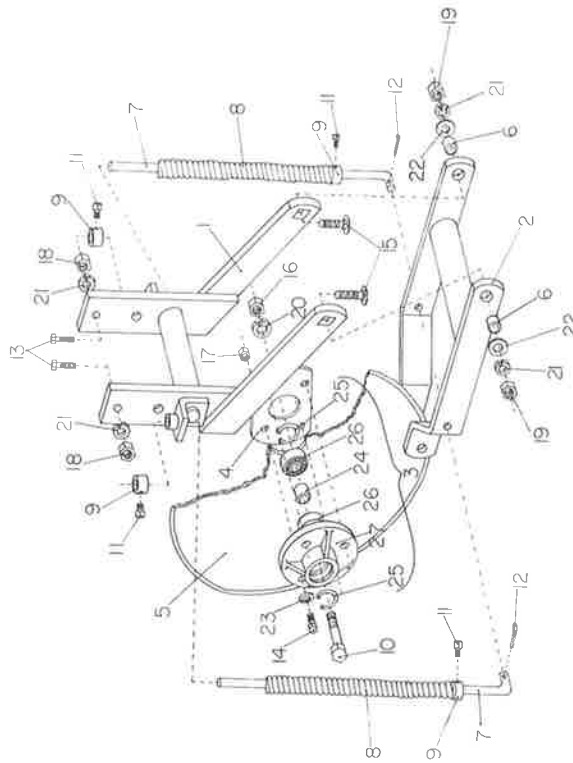

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-470		Mast Coulter Brkt.
2	03-080-472		Mast Coulter Fork
3	04-081-014		Hub Assy-1977
4	03-023-064		Coulter Flange
5	03-050-042		Dura-Flute Coulter, 20"
6	04-024-001		Pivot Bushing (2 Used)
7	03-026-115		Spring Push Rod (2 Used)
8	03-050-008		Coulter Spring (2 Used)
9	03-050-009		11/16 Adj. Collar (4 Used)
10	48-010750		3/4" x 5" Capscrew (Axle), Grd. 2, Plain
11	54-010200		1/2" x 5/8" Sq. Hd. Cuppoint Setscrew (4 Used)
12	76-010100		3/16" x 1 1/2 Cotter Pin (2 Used)
13	48-090920		5/8" x 1 3/4" Capscrew, Grd. 5, Plt'd. (2 Used)
14	48-060100		3/8" x 2" Capscrew, Grd. 5 (4 Used)
15	52-030800		5/8" x 2" Carriage Bolt, Plt'd. (2 Used)
16	68-010350		3/4" Hex Nut, Plt'd.
17	72-010050		3/8" Locknut, Grd. "B", Plt'd. & Waxed (4 Used)
18	70-010140		5/8" Hex Jamnut, Plt'd. (2 Used)
19	68-010300		5/8" Hex Nut, Plt'd. (2 Used)
20	66-010350		3/4" Lockwasher, Plt'd.
21	66-010300		5/8" Lockwasher, Plt'd. (4 Used)
22	62-010250		5/8" Flatwasher, Plt'd. (2 Used)
23	62-010050		5/16 Flatwasher, Plt'd. (4 Used)
*24	04-024-069		3/8 Bearing Spacer
*25	04-050-078		Internal Retainer Ring 2-3/64 (2 Used)
*26	04-051-004		3/4 Ext. Cyl. Bearing (205) (2 Used)
*27	03-057-014		Coulter Hub





*Contained in Item #3 - 04-081-014

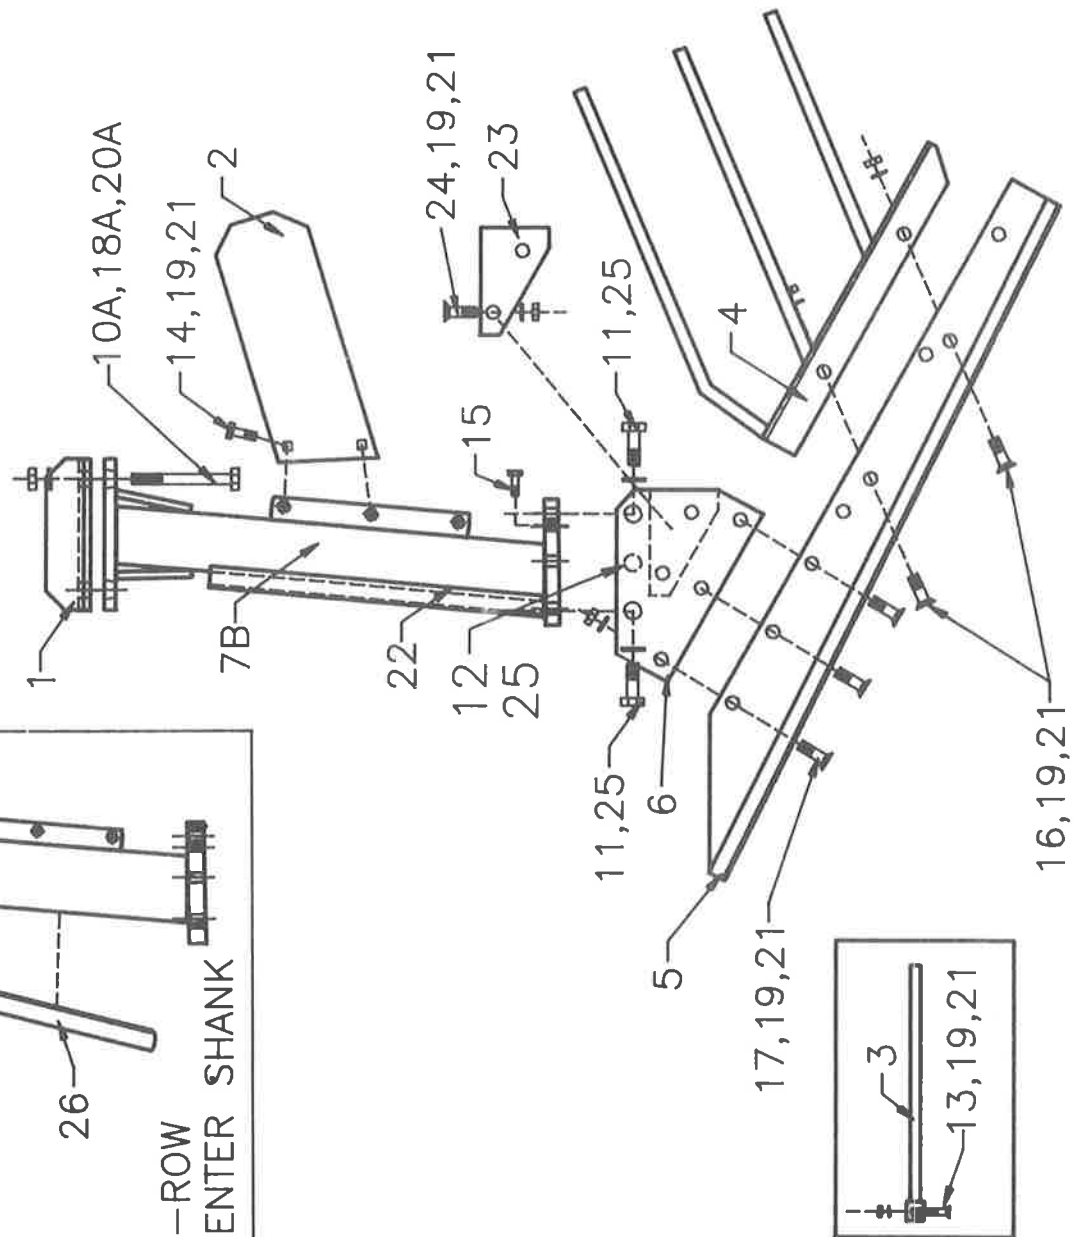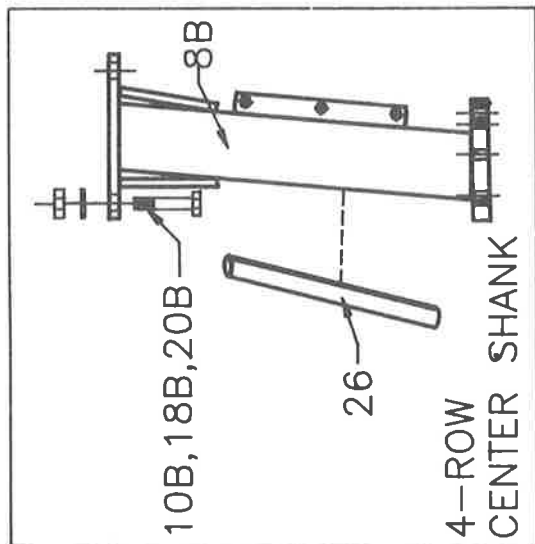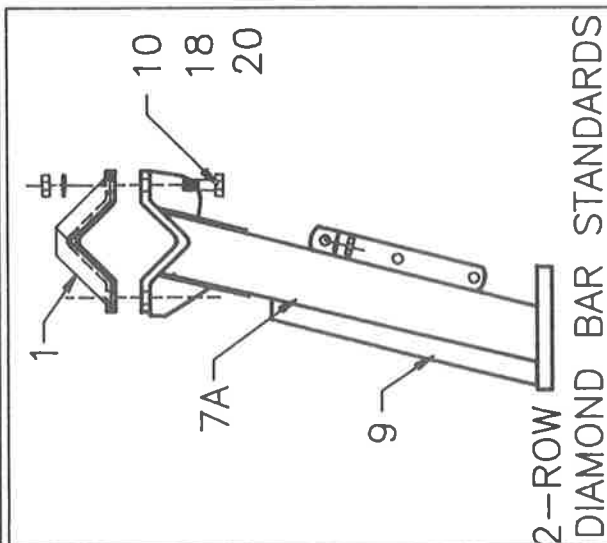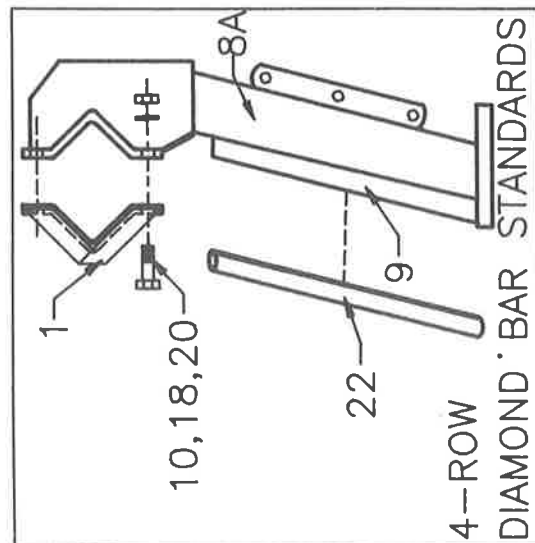

2, 4 & 6-ROW PLOW STANDARD

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2-R	4-R	6-R
1	03-080-352	(-1990)	Plow Standard Clamp	(2)	(4)	(6)
	03-080-560	(1991-1993)	Plow Standard Clamp	(2)	(4)	(6)
	03-080-604	(1994-)	Cap, Shank	2	2	6
2	03-027-105		Plow Standard Shield	2	4	6
3	03-080-227	(-1982)	Vine Deflector Rod	(2)	(4)	(6)
4	03-080-014		21" Cut Rod, Lt.	Opt.	Opt.	Opt.
	03-080-015		21" Cut Rod, Rt.	Opt.	Opt.	Opt.
	03-080-071		26" Cut Rod, Lt.	1	2	-
	03-080-072		26" Cut Rod, Rt.	1	2	-
	03-080-543		26" 6-Row Long Cut Rod, Lt.	-	-	3
	03-080-544		26" 6-Row Long Cut Rod, Rt.	-	-	3
	03-080-220		30" Cut Rod, Lt.	Opt.	Opt.	-
	03-080-221		30" Cut Rod, Rt.	Opt.	Opt.	-
	03-080-550		30" 6-Row Long Cut Rod, Lt.	-	-	Opt.
5	03-050-014		3/8" x 5" x 42" Blade, Lt.	1	2	3
	03-050-015		3/8" x 5" x 42" Blade, Rt.	1	2	3
6	03-027-109		21" Cut Frog, Lt.	Opt.	Opt.	Opt.
	03-027-110		21" Cut Frog, Rt.	Opt.	Opt.	Opt.
	03-027-111	(-1990)	26" Cut Frog, Lt.	(1)	(2)	-
	03-023-533	(1991-)	26" Cut Frog, Lt. (91)	1	1	3
	03-027-273		Frog, 4-Row Center Lt.	-	1	-
	03-027-112	(-1990)	26" Cut Frog, Rt.	(1)	(2)	-
	03-023-534	(1991-)	26" Cut Frog, Rt. (91)	1	1	3
	03-027-274		Frog, 4-Row Center, Rt.	-	1	-
	03-080-218		30" Cut Frog, Lt.	Opt.	Opt.	Opt.
7A	03-080-224	(-1993)	Plow Standard	(2)	-	(2)
	03-080-605	(1994-)	Shank	2	2	6
8A	03-080-309	(-1993)	Plow Standard	-	(4)	(4)
8B	03-080-607	(1994-)	Center Shank	-	1	-
*9	03-027-106		Wear Shield	(2)	(4)	(6)
10	48-090985	(1983-1993)	Capscrew, 5/8" x 2 3/4" Grd. 5 Plt'd.	(8)	(16)	(24)
10A	48-100075	(1994-)	Capscrew 3/4" x 7 1/2" Grd. 5 Plt'd.	8	8	24
10B	48-091550	(1994-)	Capscrew, 7/8" x 2 1/2" Grd. 5 Plt'd.	-	4	-
11	48-090930		Capscrew, 5/8" x 1 1/2" Grd. 5 Plt'd.	4	10	12
12	48-090910		Capscrew, 5/8" x 1 1/4" Grd. 5 Plt'd.	2	2	6
13	52-030250	(-1982)	Carriage Screw, 3/8 x 1 Plt'd.	(2)	(4)	-
14	52-030300	(-1984)	Carriage Screw, 3/8 x 3/4 Plt'd.	(4)	(8)	-
	48-090090	(1985-)	Capscrew, 3/8 x 3/4 Plt'd.	4	8	12
15	48-090590		Capscrew, 1/2 x 1 Grd. 5 Plt'd.	4	8	12
16	60-010050	(-1982)	Plow Bolt, 3/8 x 1 Grd. 2	(4)	(8)	-
	60-020050	(1983-)	Plow Bolt, 3/8 x 1 1/4 Grd. 2	4	8	12
17	14-050-030		Plow Bolt 3/8 x 1 1/2 Grd. 8 Plt'd.	6	12	18
18	66-010300		Lockwasher, 5/8 Plt'd.	(8)	(16)	(24)
18A	66-010350		Lockwasher, 3/4 Plt'd.	8	8	24
18B	66-010400		Lockwasher, 7/8 Plt'd.	-	4	-
19	66-010150		Lockwasher, 3/8 Plt'd.	18	36	54
20	68-010300		Hex Nut, 5/8 Plt'd.	(8)	(16)	(24)
20A	68-010350		Hex Nut, 3/4 Plt'd.	8	8	24
20B	68-010400		Hex Nut, 7/8 Plt'd.	-	4	-
21	68-010150		Hex Nut, 3/8 Plt'd.	18	36	54
22	03-024-211		Plastic Shin Guard	2	2	6
23	03-027-258		26" Frog Slide	2	2	6
	03-027-259		30" Frog Slide	2	2	6
	03-027-275		Slide, 4-Row Center	-	2	-
24	60-020060		Plow Bolt, 3/8 x 1 1/2 Grd. 5 Plt'd.	4	8	12
25	66-010595		Washer, 5/8 Ext. Tooth	6	12	18
26	03-024-253		Guard, Center 4-Row	-	1	-

LT. & RT. CYLINDER INVERTER COMPONENTS 2, 4 & 6-ROW

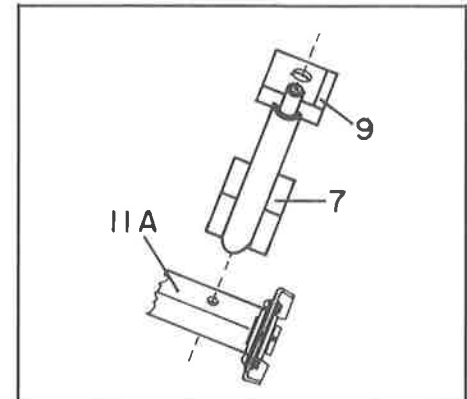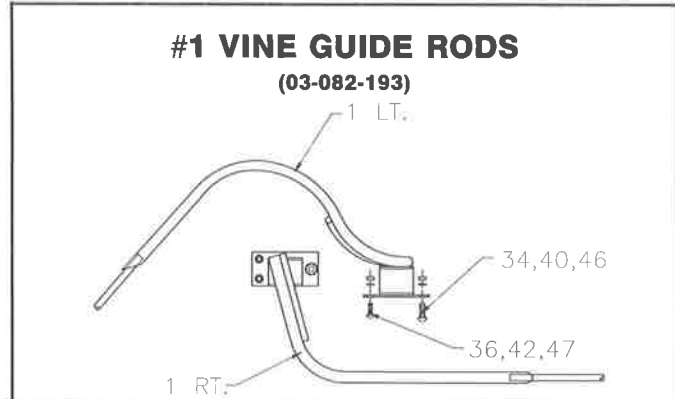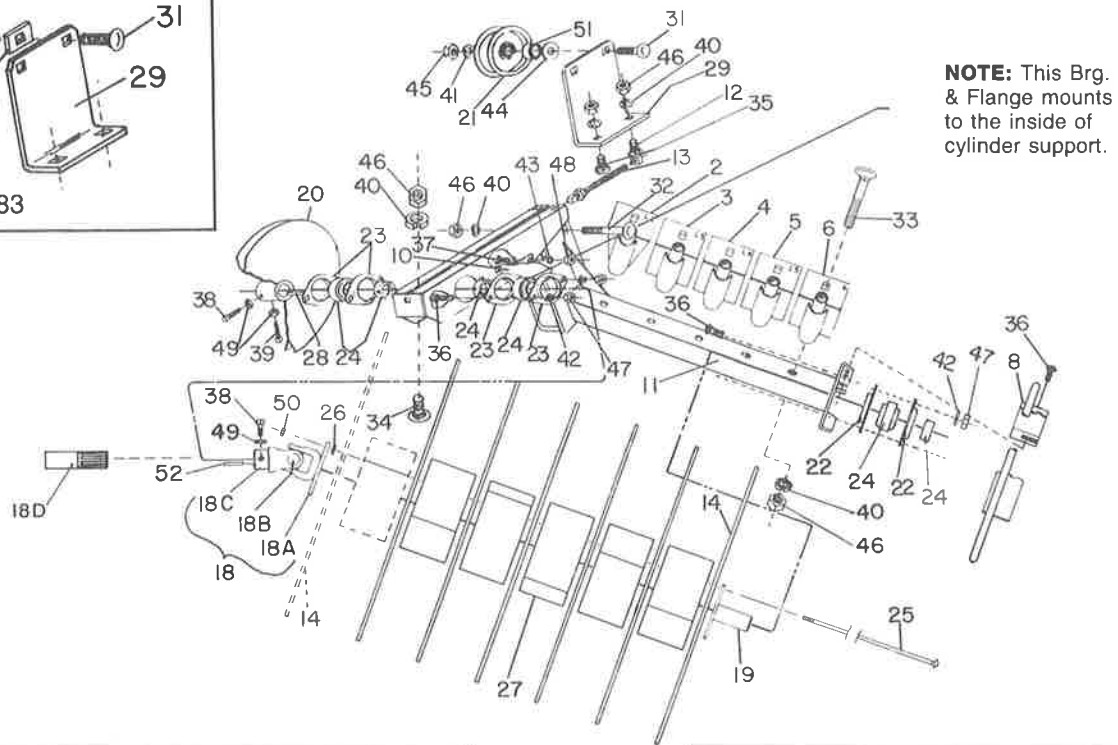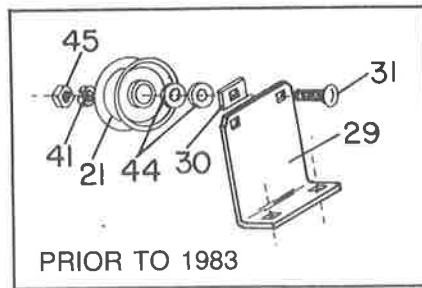

Items 7, 9 & 11A Used on Machines Prior to 1983

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-269	(-1991)	#1 Vine Guide, Lt.
	03-080-579	(1992-)	#1.92 Vine Guide, Lt.
	03-080-270	(-1991)	#1 Vine Guide, Rt.
	03-080-580	(1992-)	#1.92 Vine Guide, Rt.
2	03-080-290	(-1990)	#2 Vine Guide, Lt.
	03-080-565	(1991-)	#2.91 Vine Guide, Rod, Lt.
	03-080-291	(-1990)	#2 Vine Guide, Rt.
	03-080-566	(1991-)	#2.91 Vine Guide Rod, Rt.
3	03-080-292	(-1990)	#3 Vine Guide, Lt.
	03-080-567	(1991-)	#3.91 Vine Guide Rod, Lt.
	03-080-293	(-1990)	#3 Vine Guide, Rt.
	03-080-568	(1991-)	#3.91 Vine Guide Rod, Rt.
4	03-080-294	(-1990)	#4 Vine Guide, Lt.
	03-080-569	(1991-)	#4.91 Vine Guide Rod, Lt.
	03-080-295	(-1990)	#4 Vine Guide, Rt.
	03-080-570	(1991-)	#4.91 Vine Guide Rod, Rt.

03-SERIES PEANUT DIGGER-SHAKER-INVERTER


23

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
5	03-080-296	(-1983)	#5 Vine Guide, Lt.
	03-080-513	(1984-1990)	#5.84 Vine Guide, Lt.
	03-080-571	(1991-)	#5.91 Vine Guide Rod, Lt.
	03-080-297	(-1983)	#5 Vine Guide, Rt.
	03-080-514	(1984-1990)	#5.84 Vine Guide, Rt.
6	03-080-572	(1991-)	#5.91 Vine Guide Rod, Rt.
	03-080-357	(-1983)	#6 Vine Guide, Lt.
	03-080-358	(-1983)	#6 Vine Guide, Rt.
	03-080-538	(1984-)	#6.85 Vine Guide, Lt.
7	03-080-539	(1984-)	#6.85 Vine Guide, Rt.
	03-080-299	(1983)	#7 Vine Guide Rod (2 Used)
8	03-080-300		Bearing Cover & G. Rod, Lt.
	03-080-301		Bearing Cover & G. Rod, Rt.
9	03-080-413	(-1983)	Scraper, Lt. (6 Used)
	03-080-414	(-1983)	Scraper, Rt. (6 Used)
10	03-080-247		"U" Joint Shield, Lt.
	03-080-248		"U" Joint Shield, Rt.
11A	03-080-267	(-1983)	Cylinder Support, Lt.
	03-080-268	(-1983)	Cylinder Support, Rt.
11B	03-080-511	(1984-)	'84 Cyl. Support, Lt.
	03-080-512	(1984-)	'84 Cyl. Support, Rt.
12	03-080-250		Idler Push Bolt (2 Used)
13	03-080-308		Idler Push Bolt (2 Used)
14	03-080-359		"A" Disc. (6 Used)
15	03-080-409	(-1990)	"B" Disc. (4 Used)
16	03-080-410	(-1990)	"C" Disc. (4 Used)
17	03-080-411	(-1990)	"D" Disc. (2 Used)
18	03-055-064	(-1991)	Single "U" - Joint (2 Used)
**	03-055-133	(1992-)	"U" - Joint, Single - 35R (2 Used)
18A	03-055-018	(-1991)	Flange Yoke
	03-055-134	(1992-)	Plate, Yoke
18B	03-055-003	(-1991)	Cross & Brg. Kit
	03-055-135	(1992-)	Kit, 35R, Cross & Brg.
18C	03-055-065	(-1991)	Fitting Yoke
	03-055-136	(1992-)	Yoke, 1 ³ / ₁₆
18D	03-026-086		Cylinder Drive Shaft
19	03-080-412		'78 Lower Cyl. Shaft (2 Used)
20	03-053-029		Sheave (1C-12.375, F-1.188 PS) (2 Used)
*21	03-053-023		1 x 5 ¹ / ₂ " Idler (.625) Brg. (2 Used)
22	03-051-003	(-1982)	Brg. Flange 3H, #62 M.S. (4 Used)
	03-051-020	(1983-)	Brg. Flange 3H, #62 MSTR (4 Used)
23	03-051-022		Brg. Flange 2H, #62 M.S. (6 Used)
24	03-051-002		1-3/16" Brg. & Collar (6 Used)
25	03-050-011		3/8 x 25 Capscrew, Grd. 5 Plt'd. (8 Used)
26	03-050-077	(-1990)	Zipnut 3/8" N.C. Plain (8 Used)
27	03-027-217	(-1983)	Cylinder Space '78, 3-29/32 Long (12 Used)
	03-024-198	(1984-)	Inverter Disc Spacer, 4-45/64 Long (10 Used)
28	03-026-016		1/4 x 1/4 x 2 Key (2 Used)
*29	03-023-251		Idler Bracket (2 Used)
30	03-023-018	(-1983)	Idler Washer (2 Used)
*31	52-030850		5/8 N.C. x 2 1/2 Carriage Bolt, Plt'd. (2 Used)
32	52-050275		1/2 x 3 1/2 Carriage Bolt, Plt'd. (4 Used)
33	52-050260		1/2 x 3 1/4 Carriage Bolt, Grd. 5 Plt'd. (10 Used)
34	52-030440		1/2 x 1 Carriage Screw, Grd. 2, Plt'd. (4 Used)
*35	52-010200		1/2 x 1 Carriage Screw, Grd. 2, Plain (2 Used)
36	52-030250		3/8 x 1 Carriage Bolt, Plt'd. (26 Used)
37	52-030150		5/16 x 1 Carriage Bolt, Plt'd. (4 Used)
38	54-010100		3/8 x 3/4 Setscrew (2 Used)
39	54-010150		3/8 x 7/8 Setscrew (2 Used)
*40	66-010250		1/2 Lockwasher, Plt'd. (22 Used)
*41	66-010300		5/8 Reg. Lockwasher, Plt'd. (2 Used)
42	66-010150		3/8 Lockwasher, Plt'd. (26 Used)
43	66-010100		5/16 Lockwasher, Plt'd. (4 Used)
*44	62-010250		5/8" Flatwasher, Plt'd. (2 Used)
*45	68-010300		5/8" N.C. Hex Nut, Plt'd. (2 Used)
*46	68-010250		1/2 Hex Nut, Plt'd. (22 Used)
47	68-010150		3/8 Hex Nut, Plt'd. (26 Used)
48	68-010100		5/16 Hex Nut, Plt'd. (4 Used)
49	70-010050		3/8" Jam Nut (4 Used)
50	72-010050		3/8" N.C. Hex Locknut, Grd. "B", Plt'd. (8 Used)
*51	03-050-087	(1984-)	Inverter Belt Spacer (2 Used)
52	03-026-138	(-1991)	Key, 1/4 x 1 1/4 (2 Used)
	03-026-016	(1992-)	Key, 1/4 x 2 (2 Used)

**This item can be used to replace 03-055-064 prior to 1992.

*These items make up 03-081-052 & 053.

4 & 6-ROW CENTER INV. BUNDLE

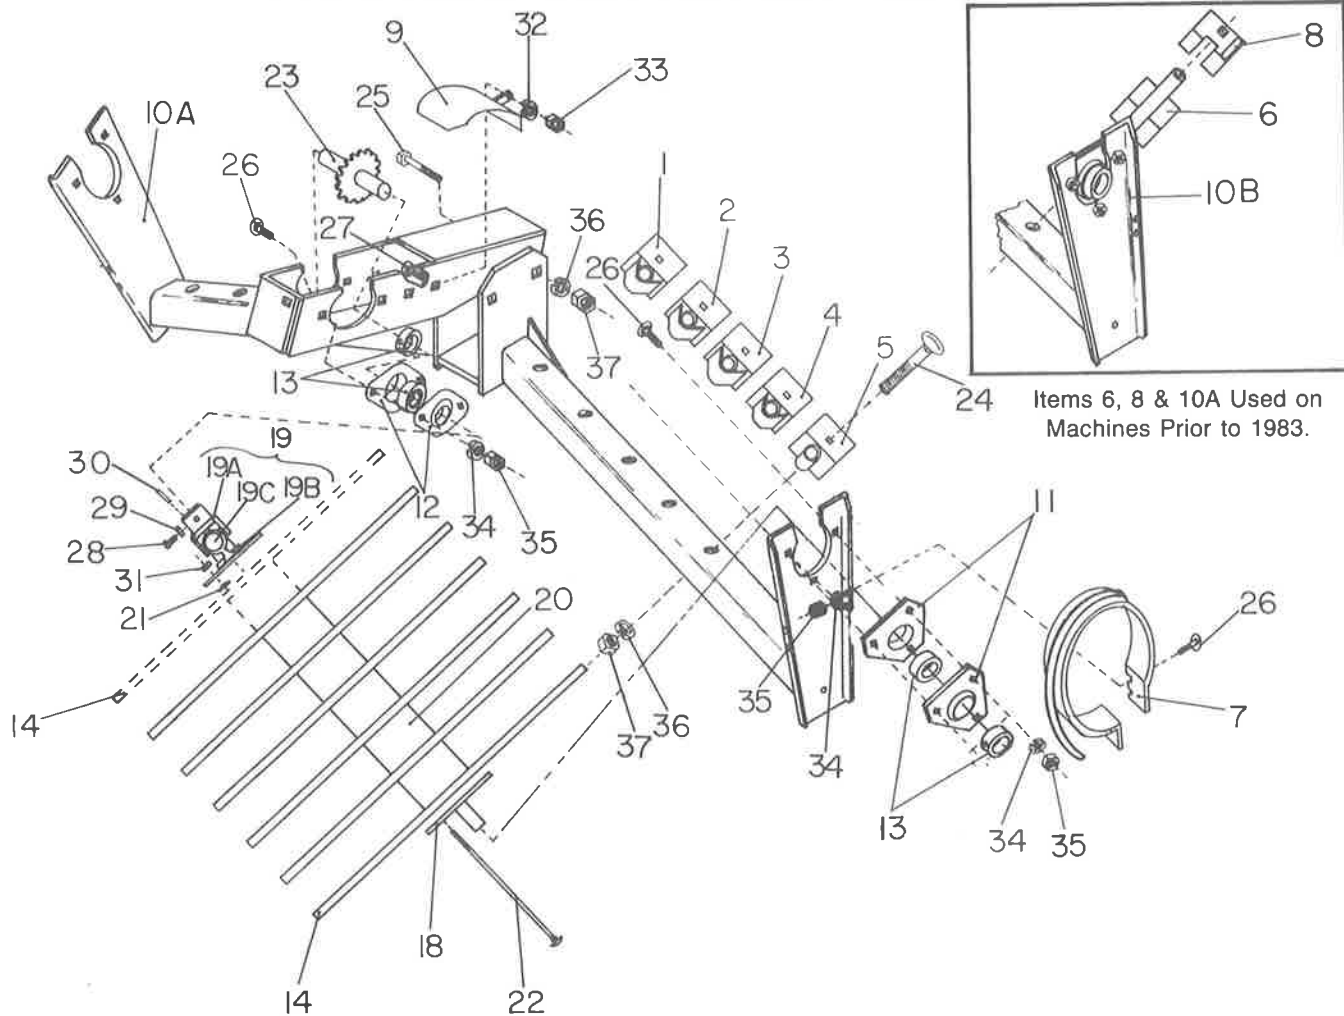

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-290	(-1990)	#2 Vine Guide, Lt.
	03-080-565	(1991-)	#2.91 Vine Guide, Rod, Lt.
	03-080-291	(-1990)	#2 Vine Guide, Rt.
2	03-080-566	(1991-)	#2.91 Vine Guide Rod, Rt.
	03-080-292	(-1990)	#3 Vine Guide, Lt.
	03-080-567	(1991-)	#3.91 Vine Guide Rod, Lt.
3	03-080-293	(-1990)	#3 Vine Guide, Rt.
	03-080-568	(1991-)	#3.91 Vine Guide Rod, Rt.
	03-080-294	(-1990)	#4 Vine Guide, Lt.
4	03-080-569	(1991-)	#4.91 Vine Guide Rod, Lt.
	03-080-295	(-1990)	#4 Vine Guide, Rt.
	03-080-570	(1991-)	#4.91 Vine Guide Rod, Rt.
5	03-080-296	(-1983)	#5 Vine Guide, Lt.
	03-080-513	(1984-1990)	#5.84 Vine Guide, Lt.
	03-080-571	(1991-)	#5.91 Vine Guide Rod, Lt.
6	03-080-297	(-1983)	#5 Vine Guide, Rt.
	03-080-514	(1984-1990)	#5.84 Vine Guide, Rt.
	03-080-572	(1991-)	#5.91 Vine Guide Rod, Rt.
7	03-080-357	(-1983)	#6 Vine Guide, Lt.
	03-080-358	(-1983)	#6 Vine Guide, Rt.
	03-080-538	(1984-)	#6.85 Vine Guide, Lt.
8	03-080-539	(1984-)	#6.85 Vine Guide, Rt.
	03-080-299	(1983)	#7 Vine Guide Rod (2 Used)
9	03-080-300		Brg. Cover & G. Rod, Lt.
	03-080-301		Brg. Cover & G. Rod Rt.
	03-080-413	(-1983)	Scraper, Lt. (6 Used)
10	03-080-414	(-1983)	Scraper, Rt. (6 Used)

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
9	03-080-247		U-Joint Shield, Lt.
	03-080-248		U-Joint Shield, Rt.
10A	03-080-471	(-1983)	4-Row Center Cylinder Support
10B	03-080-517	(1984-)	84 - Center Cylinder Support
11	03-051-003	(-1982)	Brg. Flange, 3H #62 M.S. (4 Used)
	03-051-020	(1983-)	Brg. Flange, 3H #62 MSTR (4 Used)
12	03-051-022		Brg. Flange, 2H #62 M.S. (4 Used)
13	03-051-002		1-3/16 Brg. & Collar (4 Used)
14	03-080-359		"A" Disc (12 Used)
15	03-080-409	(-1990)	"B" Disc (4 Used)
16	03-080-410	(-1990)	"C" Disc (4 Used)
17	03-080-411	(-1990)	"D" Disc (2 Used)
18	03-080-412		'78 Lower Cyl. Shaft (2 Used)
19	03-055-064		Single "U" Joint, 4-Row (2 Used)
	03-055-133	(1992-)	"U" - Joint, Single - 35R (2 Used)
19A	03-055-018	(-1991)	Flange Yoke
	03-055-134	(1992-)	Plate, Yoke
19B	03-055-003	(-1991)	Cross & Brg. Kit
	03-055-135	(1992-)	Kit, 35R Cross & Brg.
19C	03-055-065	(-1991)	Fitting Yoke
	03-055-136	(1992-)	Yoke, 1 ³ / ₁₆
20	03-027-217	(-1983)	Cylinder Spacer, '78, 3-29/32 Long (12 Used)
	03-024-198	(1984-)	Inverter Disc Spacer, 4-45/64 Long (10 Used)
21	03-050-077		3/8" N.C. Zipnut, Plain (8 Used)
22	03-050-011		3/8" x 25" Capscrew, Grd. 5 Plt'd. (8 Used)
23	03-080-573		'91-Center Inverter Drive
24	52-050260		1/2 x 3/4 Carriage Bolt, Grd. 5, Plt'd. (10 Used)
25	48-090900		1/2 x 5/2 Capscrew, Grd. 5, Plt'd. (2 Used)
26	52-030250		3/8 x 1 Carriage Bolt, Plt'd. (18 Used)
27	52-030150		5/16 x 1 Carriage Bolt, Plt'd. (4 Used)
28	54-010100		3/8 x 3/4 Sq. Hd. Cuppoint Setscrew, Grd. 5, Plain (2 Used)
29	70-010050		3/8" Jam Nut (4 Used)
30	03-026-138	(-1991)	1/4 x 1 1/4 Key (2 Used)
	03-026-016	(1992-)	1/4 x 2 Key (2 Used)
31	72-010050		3/8 N.C. Hex Locknut, Grd. B, Plt'd. (8 Used)
32	66-010100		5/16 Lockwasher, Plt'd. (4 Used)
33	68-010100		5/16 Hex Nut, Plt'd. (4 Used)
34	66-010150		3/8" Lockwasher, Plt'd. (18 Used)
35	68-010150		3/8" Hex Nut, Plt'd. (18 Used)
36	66-010250		1/2 Lockwasher, Plt'd. (12 Used)
37	68-010250		1/2 Hex Nut, Plt'd. (12 Used)
38	54-010150		3/8 x 7/8 Sq. Hd. Cuppoint Setscrew (2 Used)

*This item can be used to replace 03-055-064 prior to 1992.


#1 VINE GUIDE ROD, 4 & 6-ROW (USED ON CENTER INVERTER ONLY)

(03-082-185)

(Used on machines
prior to 1991.)

(03-082-194)


(1992-)

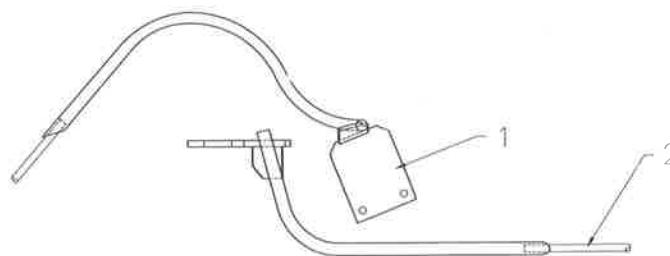

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
* 1	03-080-540	(-1991)	#1 Guide Rod Ctr., Lt.
	03-080-581	(1992-)	#1.92 Center Vine Rod, Lt.
* 2	03-080-541	(-1991)	#1 Guide Rod Ctr., Rt.
	03-080-582	(1992-)	#1.92 Center Vine Rod, Rt.


*Replaces 03-080-489 & -490 on Machines Prior to 1985.

2, 4, & 6-ROW CYLINDER INVERTER FENDER

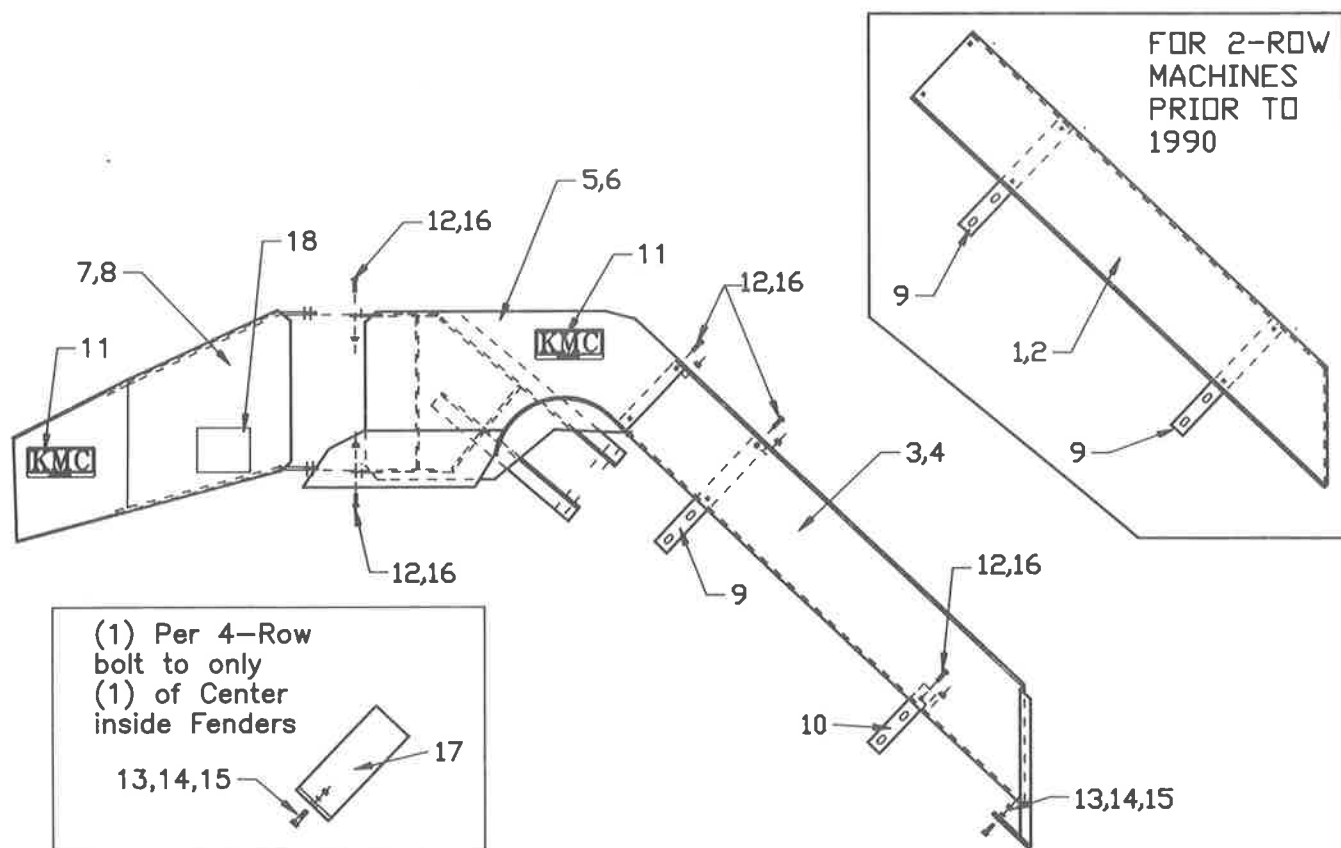

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	2-ROW	4-ROW	6-ROW
1	03-027-093	(-1990)	Fender, Lt.	(1)	-	-
2	03-027-094	(-1990)	Fender, Rt.	(1)	-	-
3	03-080-464		Fender, Lt.	1	2	3
4	03-080-465		Fender, Rt.	1	2	3
5	03-080-255	(-1982)	Fender Rear, Lt.	(1)	-	-
	03-080-495	(1983-)	83 Rear Fender, Lt.	1	2	3
6	03-080-256	(-1982)	Fender Rear, Rt.	(1)	-	-
	03-080-496	(1983-)	83 Rear Fender, Rt.	1	2	3
7	03-080-251	(-1990)	Adjustable Shield, Lt.	(1)	(2)	(3)
	03-080-563	(1991-)	Adjustable Shield, Lt.	1	2	3
8	03-080-252	(-1990)	Adjustable Shield, Rt.	(1)	(2)	(3)
	03-080-564	(1991-)	Adjustable Shield, Rt.	1	2	3
9	03-027-015		Fender Post	2	4	6
10	03-027-232		Fender Post	2	4	6
11	02-050-053		KMC Decal	4	6	8
12	52-030100		Carriage Screw, 5/16 x 3/4	20	40	60
13	48-090100		Capscrew, 3/8 x 1	2	4	6
14	62-010100		Flatwasher, 3/8	2	4	6
15	72-010050		Locknut, 3/8 Grd. "B" Plt'd.	2	4	6
16	78-020045		Whiz Nut, 5/16	20	40	60
17	03-027-245		Center Deflector	-	1	-
18	03-050-084		Shaker Rod Decal	1	1	1

GAUGE WHEEL
5 x 8 **8 x 10**
(03-082-028) **(03-082-019)**
8x8 (2-Row)
(03-082-192)

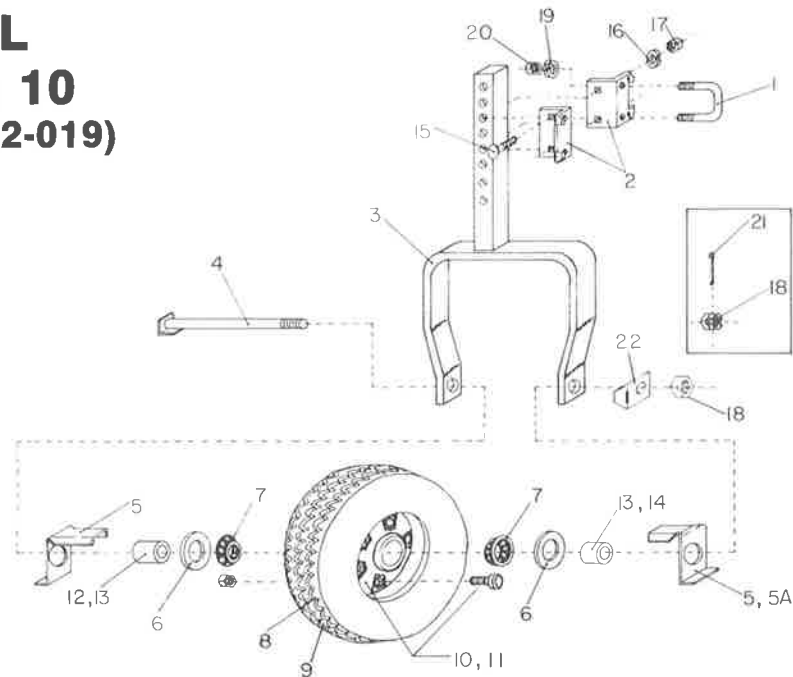


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-050-001		Wheel Post "U" Bolt (2 Used)
2	03-027-044		Wheel Post Bracket (2 Used)
3	03-080-054	(-1990)	Wheel Fork (5x8)
	03-080-060		Wheel Fork (8x10)
4	03-080-059	(-1983)	Wheel Spindle (5x8)
	03-080-508	(1984-1990)	Wheel Axle Weld't. (5x8)
	02-080-019	(-1983)	Wheel Spindle (8x10)
	03-080-507	(1984-)	Wheel Axle Weld't. (8x10)
5	03-027-160	(-1990)	Gauge Wheel Bearing Shield (5x8) (2 Used)
	03-027-161		Gauge Wheel Bearing Shield (8x10)
5A	03-027-252		Wheel Shield Short (8x10)
6	02-056-007		Seal (Nat. 204029X) (2 Used)
7	02-051-015		Bearing Cone L44643 (2 Used)
8	03-058-001	(-1982)	Tire (5x8)
	03-058-002	(-1982)	Tube (5x8)
*	03-058-005	(1983-1990)	Tire 5x8 (Tubeless)
9✓	02-058-012		Tire (8x10) Tubeless
	21-058-003		Tire (8x8) w/Wheel
10✓	02-058-014		Wheel (8x10) (Rim)
	03-058-008		Hub Ass'y. w/Cups (8x10)
	02-051-016		Cup (2 Used)
	02-058-004		Wheel Bolt, 1/2 x 1 NF-20 (5 Used) (8x10)
11*	03-058-003	(-1990)	Hub Assembly w/Cups, Wheel Rim & Stud (5x8)
	02-051-016	(-1990)	Cup (5x8) (2 Used)
12	02-024-004		Spacer (8x10) (Short)
13	03-024-030	(-1990)	Spacer (5x8) (2 Used)
14	02-024-005		Spacer (8x10) (Long)
15	52-050100		3/8" x 3" Carriage Screw Grd. 5, Plt'd. (2 Used)
16	66-010150		3/8" Lockwasher, Plt'd. (2 Used)
17	68-010150		3/8" Hex Nut, Plt'd. (2 Used)
18	68-030100	(-1983)	1" N.C. Hex Nut, Slotted
	70-010250	(1984-1990)	1" N.C. Jam Nut
19	66-010250		1/2" Lockwasher, Plt'd. (4 Used) (8x10)
	66-010300	(-1990)	5/8" Lockwasher, Plt'd. (4 Used)
20	68-010250		1/2" Hex Nut, Plt'd. (4 Used) (8x10)
	68-010300	(-1990)	5/8" Hex Nut, Plt'd. (4 Used)
21	76-010150	(-1983)	3/16" x 2" Cotter Pin
22	11-027-014	(1984-)	Nut Stop Plate

* Items make up 03-058-006 5x8 Tire Mounted on Wheel With Cups.


✓ Items make up 03-058-007 8x10 Tire Mounted on Rim.

LT. & RT. REFLECTOR ASS'Y.

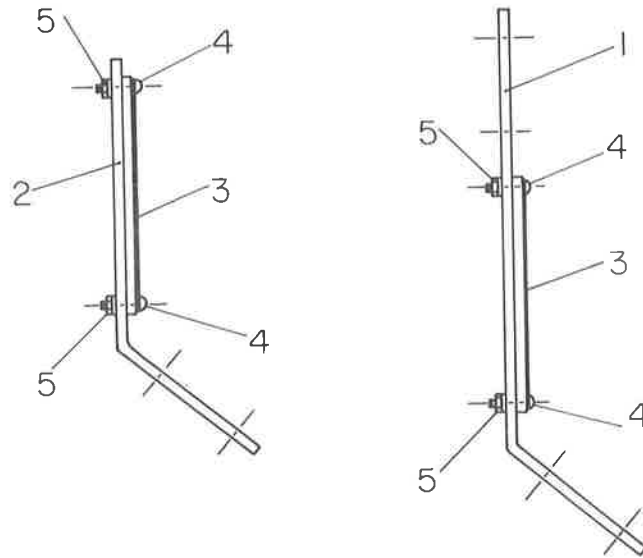


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-027-209	(1983)	Reflector & SMV Support (Lt.)
2	03-027-210	(1983)	Reflector Support (Rt.)
3	03-050-070	(1983)	Red Reflector (2 Used)
4	58-010100	(1983)	#10 x 3/4 Round Hd. Machine Screw (4 Used)
5	68-010020	(1983)	#10 Hex Nut (4 Used)

2-ROW LT. FRONT SHIELD ASS'Y.

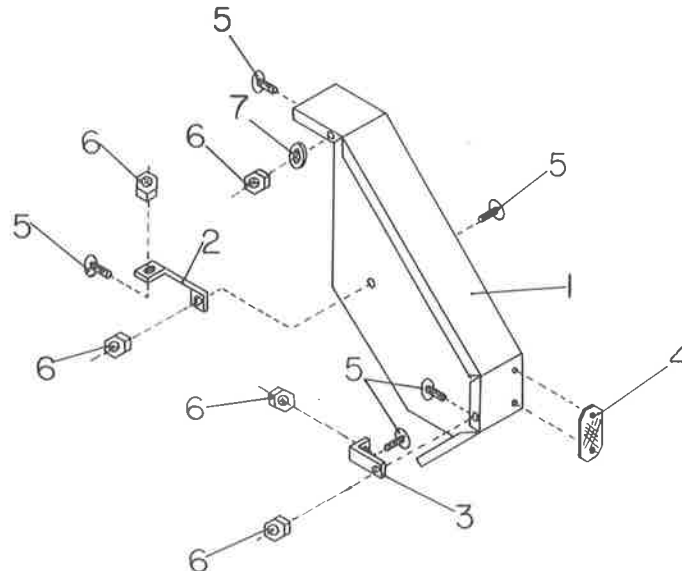


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-356		Lt. Front Shield
2	03-023-313		Lt. Front Shield Support
3	03-023-319		Lt. Front Shield Brace
4	03-050-069		Amber Reflector
5	52-030100		5/16 x 3/4 Carriage Bolt, Plt'd.
6	78-020049		5/16" Whiz - Flange Locknut, Plt'd. (5 Used)
7	62-010150		7/16" Flatwasher

2 & 4-ROW, LT. REAR SHIELD

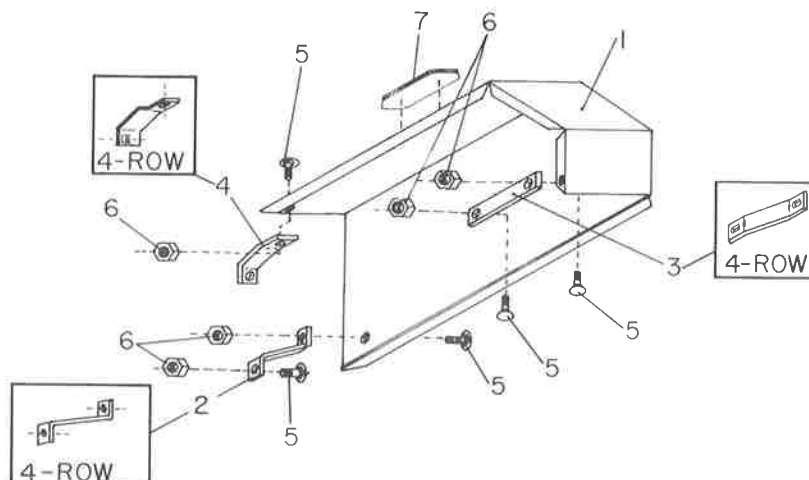

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-354		Lt. Rear Shield (2-Row)
	03-080-365		Lt. Rear Shield (4-Row)
2	03-023-309		Lt. Shield Brace (2-Row)
	03-023-538		Lt. Shield Brace (4-Row)
3	03-023-310		Lt. Shield Leg (2-Row)
	03-023-539		Lt. Shield Leg (4-Row)
4	03-023-308		Rear Shield Support (2-Row)
	03-023-536		Rear Shield Support (4-Row)
6	78-020049		5/16 Whiz Flange Locknut, Plt'd (5 Used)
5	52-030100		5/16 x 3/4 Carriage Bolt, Plt'd.
7	03-050-070		Red Reflector


2 & 4-ROW, RT. REAR SHIELD

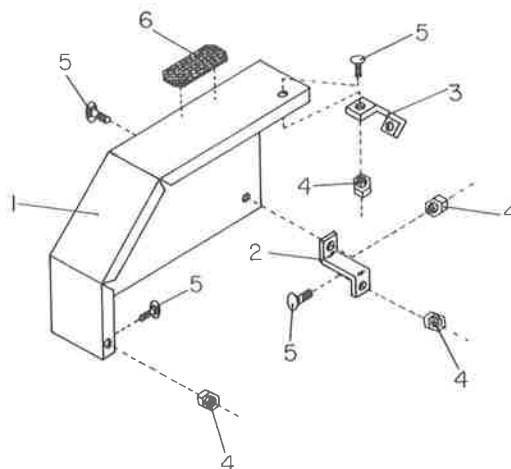

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-355		Rt. Rear Shield
2	03-023-311		Rt. Shield Brace
3	03-023-308		Rear Shield Support
4	78-020049		5/16, Whiz Flange Locknut, Plt'd. (6 Used)
5	52-030100		5/16 x 3/4 Carriage Bolt, Plt'd. (4 Used)
6	03-050-070		Red Reflector


*Not Shown

4 & 6 ROW LT. & RT. FRONT SHIELD ASS'Y. (03-081-042 & 03-081-043)

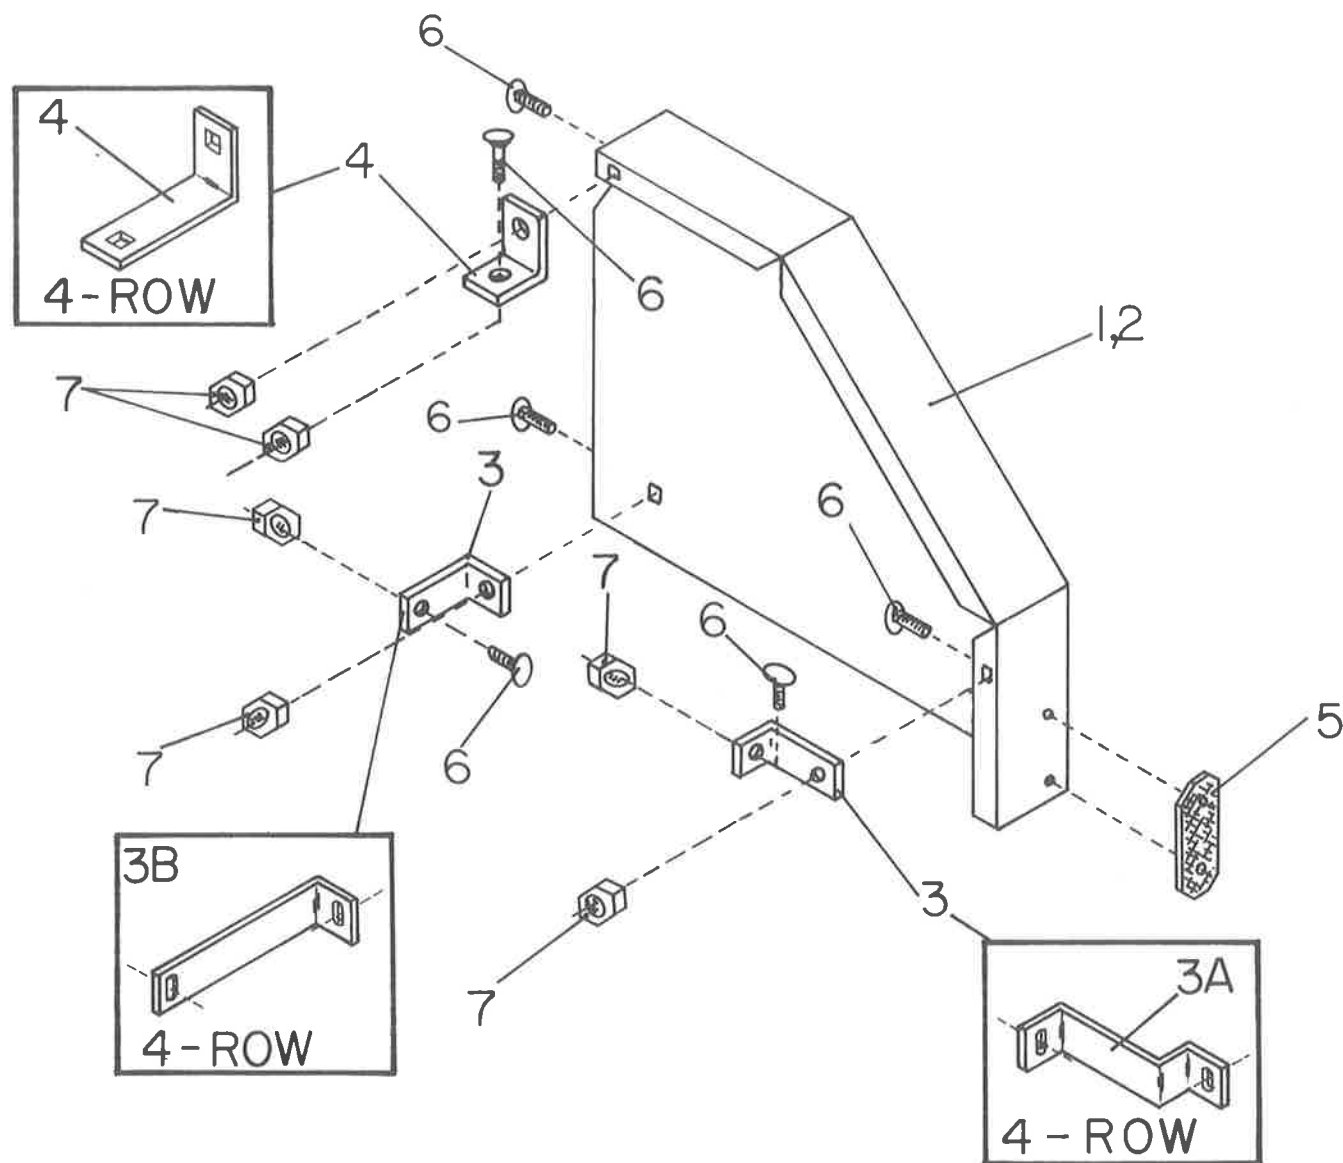


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-363		Front Shield (4 & 6-Row) (Lt.)
2	03-080-364		Front Shield (6-Row Only) (Rt.)
3	03-023-317		Lower Front Shield Support (6-Row) (2 on Lt. & 2 on Rt.)
3A	03-023-540		4-Row Front Brace
3B	03-023-541		4-Row Front Brace, Lower
4	03-023-315		Top Front Shield Support (6-Row) (1 on Lt. & 1 on Rt.)
	03-023-542		4-Row Only Front Shield Support
5	03-050-069		Amber Reflector
6	52-030100		Carriage Bolt, 5/16 x 3/4 Plt'd. (3 on Lt. & 3 on Rt.)
7	78-020049		Whiz Flange Locknut, 5/16 (6 on Lt. & 6 on Rt.)

6-ROW LT. & RT. REAR SHIELD

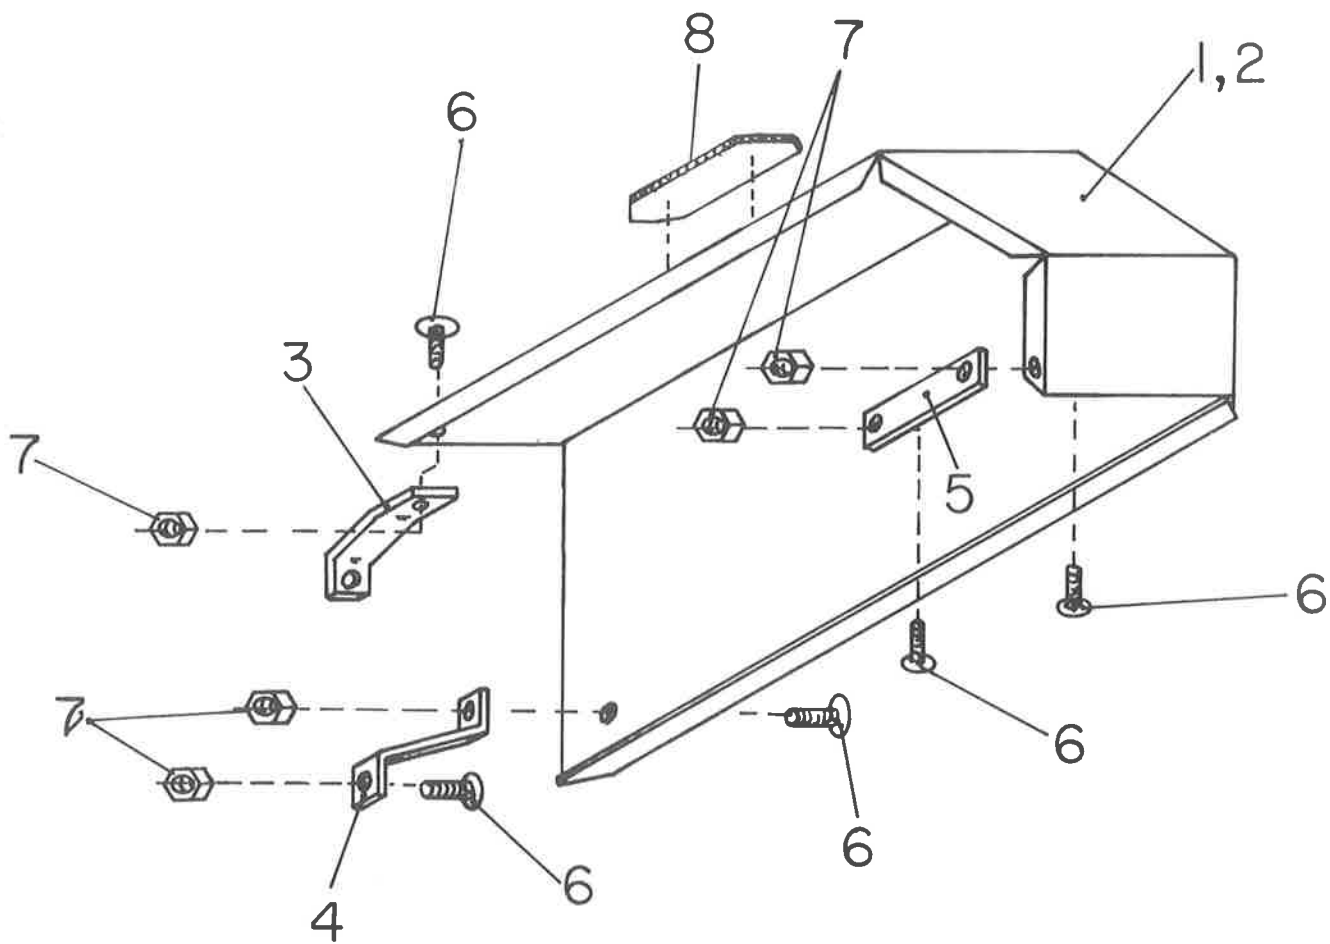

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-365		Lt. Rear Shield
2	03-080-366		Rt. Rear Shield
3	03-023-308		Rear Shield Support (1 on Lt. & 1 on Rt.)
4	03-023-309		Lt. Shield Brace (1 on Lt. & 1 on Rt.)
5	03-023-318		4-Row Shield Leg (1 on Lt. & 1 on Rt.)
6	52-030100		5/16 x 3/4 Carriage Bolt, Plt'd. (2 on Lt. & 2 on Rt.)
7	78-020049		5/16 Whiz Flange Locknut, Plt'd. (5 on Lt. & 5 on Rt.)
8	03-050-070		Red Reflector (1 on Lt. & 1 on Rt.)

CENTER SHIELD ASS'Y. 4 & 6-36 - ROW

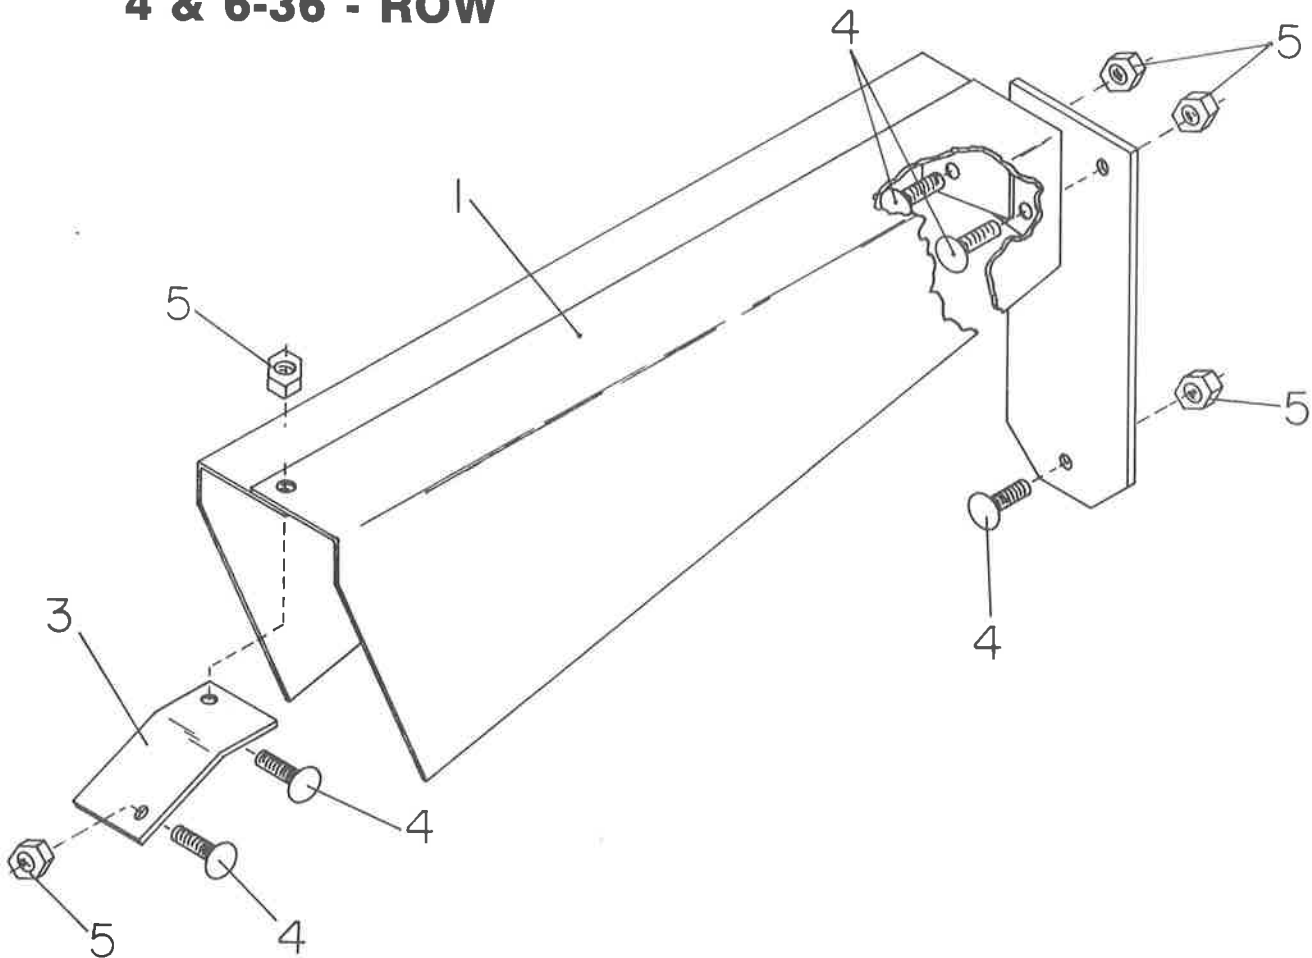


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-478		Inverter Drive Shield Center
2	03-027-244		Inverter Drive Shield Top
3	03-023-436		Inverter Drive Shield Rear Support
4	52-030100		5/16 x 3/4 Carriage Bolt, Grd. 2, Plt'd. (5 Used)
5	78-020049		5/16 Whiz Flange Locknut (5 Used)

WIDE CENTER SHIELD ASS'Y. 6-38 - ROW (03-082-178)

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-527		6-38 Inv. Drive Shield Center (2 Used)
2	03-027-244		Inverter Drive Shield Top (2 Used)
3	03-023-436		Inverter Drive Shield Rear Support (2 Used)
4	52-030100		5/16 x 3/4 Carriage Bolt, Grd. 2, Plt'd. (10 Used)
5	78-020049		5/16 Whiz Flange Locknut (5 Used)

HYDRAULIC CYLINDER

3" Bore x 8" Stroke

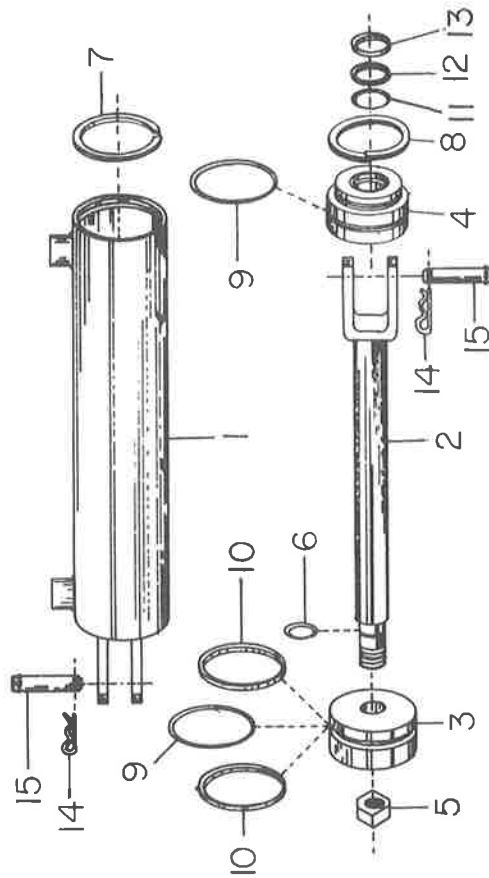

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	05-061-004		Cylinder Body
2	03-061-006		Piston Rod w/Clevis
3	03-061-022		Piston
4	05-061-005		Piston Rod Guide
5	03-061-007	(-1982)	7/8" - 14 N.F. Hex Jam Nut
	03-061-037	(1983-)	7/8" - 14 N.F. Hex Center Locknut
*6	03-061-009		O-Ring 3/4" I.D. x 7/8" O.D.
*7	05-061-006		Retaining Ring, Internal - 3"
*8	05-061-007		Retaining Ring, External - 2-5/8"
*9	03-061-032		O-Ring 2-5/8" I.D. x 3" O.D. (2 Used)
*10	03-061-031		Back-Up Washer 2-5/8" I.D. x 3" O.D. x 3/32 (2 Used)
*11	03-061-010		O-Ring 1-1/8" I.D. x 1-3/8" O.D.
*12	03-061-011		Back-up Washer, 1-1/8 I.D. x 1-3/8" O.D. x 1/16
*13	03-061-012		Rod Wiper, 1-1/8
14	03-061-018		Clevis Pin Clip (2 Used)
15	03-061-017		Clevis Pin (2 Used)


*Seal Kit (05-061-003)

HOSE BUNDLE FRONT MOUNTED COULTER

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
16	05-059-001	(-1984)	3/8" Hydraulic Hose (120") (2 Used per Cyl.) (Not Shown)
	03-059-002	(1985-)	3/8" Hydraulic Hose (120") w/1/2" Ends

HYDRAULIC CYLINDER

2" Bore x 8" Stroke x 1-1/8" Dia. Rod

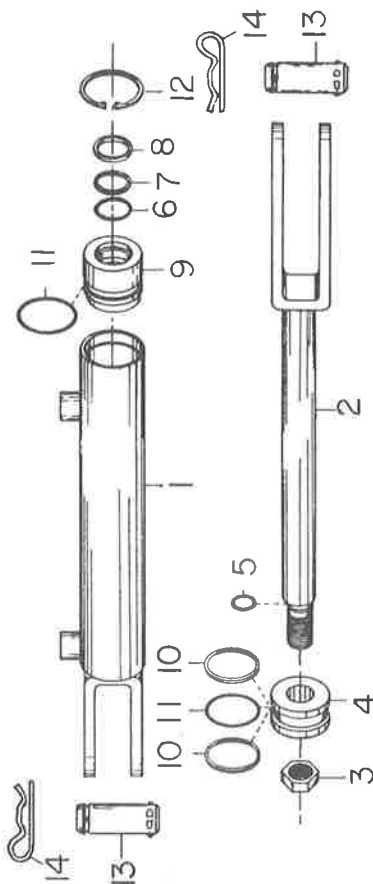

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-061-005	(-1984)	Cylinder Body w/ 3/8" Ports
	03-061-039	(1985-)	Cylinder Body w/1/2" Ports
2	03-061-006		Piston Rod w/Clevis
3	03-061-007	(-1982)	7/8 N.F. - 14 Hex Jam Nut
	03-061-037	(1983-)	7/8 N.F. - 14 Hex Center Locknut
4	03-061-008		Piston
*5	03-061-009		O-Ring 3/4" I.D. x 7/8" O.D.
*6	03-061-010		O-Ring 1-1/8 x 1-3/8 O.D.
*7	03-061-011		Back-up Washer 1-1/8 I.D. x 1-3/8 O.D.
*8	03-061-012		Rod Wiper 1-1/8
9	03-061-013		Piston Rod Guide
*10	03-061-014		Back-Up Washer 1-5/8 I.D. x 2 O.D. x 3/32 (2 Used)
*11	03-061-015		O-Ring 1-5/8 I.D. x 2 O.D. (2 Used)
*12	03-061-016		Retaining Ring Internal - 2" (N5000)
13	03-061-017		Clevis Pin (2 Used)
14	03-061-018		Clevis Pin Clip (2 Used)

*Makes Up Seal Kit (03-061-002)


HOSE BUNDLE FRONT MOUNTED COULTER

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
15	05-059-001	(-1984)	3/8" Hydraulic Hose (120") (2 Used per Cyl.) (Not Shown)
	03-059-002	(1985-)	3/8" Hydraulic Hose (120") w/1/2" Ends

FRONT COULTER BUNDLE

17" COULTER
(03-082-054)

20" COULTER
(03-082-084)

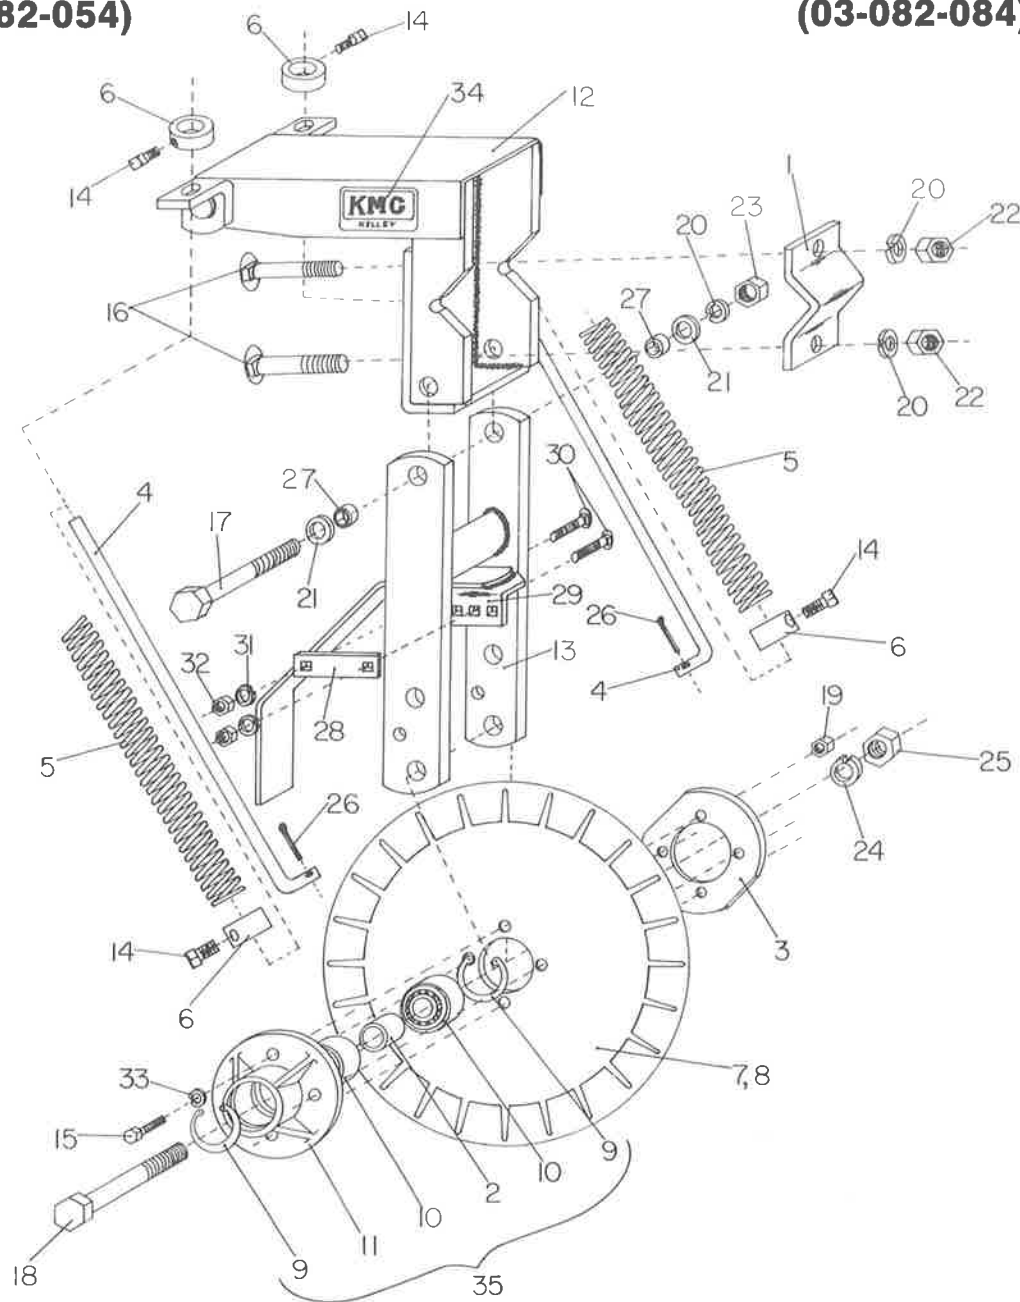

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	02-023-188		P.B. Clamp
2	04-024-069		Bearing Spacer, 3/8"
3	03-023-064		Coulter Flange
4	03-026-025		Spring Push Rod (2 Used)
5	03-050-008		Coulter Spring (2 Used)
6	03-050-009		11/16 Adj. Collar (4 Used)
7	03-050-010		Dura Flute Coulter, 17"
8	03-050-042		Dura Flute Coulter, 20"
9	04-050-078		Retaining Ring 2-3/64 Internal (2 Used)
10	04-051-004		3/4 Cylindrical Bearing (Ext. 205) (2 Used)


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
11	03-057-014		Coulter Hub
12	03-080-180	(-1984)	Coulter Fork Bracket
	03-080-537	(1985-)	Coulter Bracket '85
13	03-080-181		Coulter Fork
14	54-010200		1/2" x 5/8" Sq. Hd. Cuppoint Setscrew (4 Used)
15	48-090170		3/8" x 1 1/2" Capscrew, Grd. 5, (4 Used)
16	52-030950		5/8 x 5 Carriage Bolt, Plt'd. (2 Used)
17	48-091150		5/8 x 5 1/2 Capscrew, Grd. 5
18	48-010750		3/4 x 5 Capscrew (Axle)
19	72-010050		3/8 Locknut, Grd. "B", Plt'd. & Waxed (4 Used)
20	66-010300		5/8 Lockwasher, Plt'd. (3 Used)
21	62-010250		5/8 Flatwasher, Plt'd. (2 Used)
22	68-010300		5/8 Hex Nut, Plt'd. (2 Used)
23	72-020050		5/8 Locknut, Grd. "C", Plt'd. & Waxed
24	66-010350		3/4 Lockwasher
25	68-010350		3/4 Hex Nut, Plt'd.
26	76-010100		3/16 x 1 1/2 Cotter Pin (2 Used)
27	04-024-001		Pivot Bushing (2 Used)
28	03-023-228		Disc Shield Bracket
29	03-080-244		Disc Shield
30	52-030350		3/8 x 1 1/2 Carriage Bolt, Plt'd. (2 Used)
31	66-010150		3/8 Lockwasher, Plt'd. (2 Used)
32	68-010150		3/8 Hex Nut, Plt'd. (2 Used)
33	62-010050		5/16 Flatwasher, Plt'd. (4 Used)
34	03-050-040		KMC Decal
*35	04-081-014		Coulter Hub Ass'y.

*Hub Ass'y. (04-081-014) Made Up of #9, #10, #11, #2.

4 & 6-ROW COULTER BRACKET



(03-082-156)

(03-082-196)

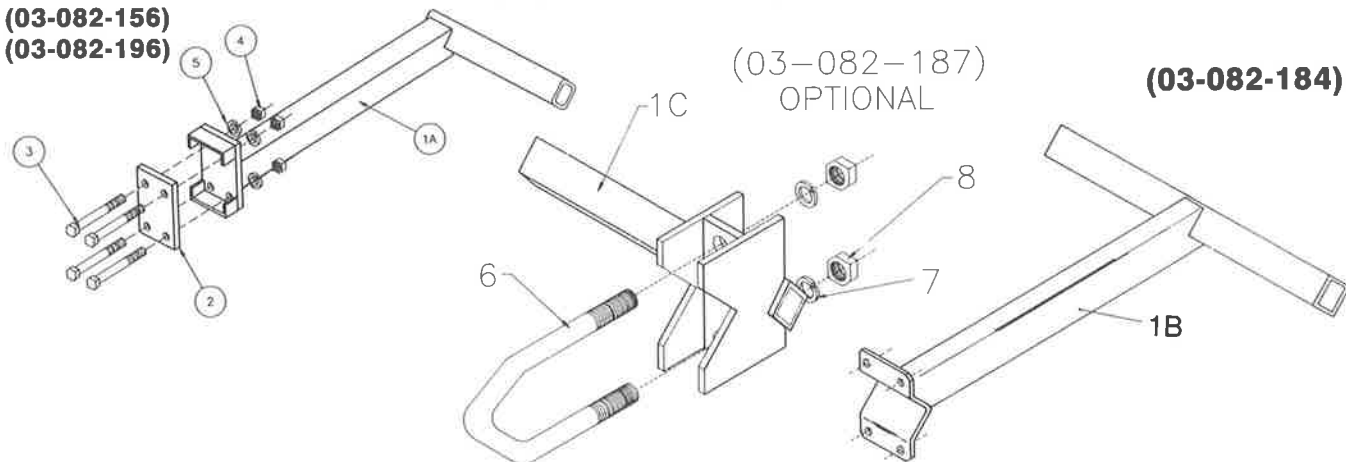

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION	-156	-184	-187	-196
1A	03-080-473	(-1992)	4-Row Vine Cutter Bracket	(2)	-	-	-
	03-080-610	(1993-)	Bracket, 4-Row Vine Cutter	-	-	-	(1)
1B	03-080-536	(1985-)	6-Row Coulter T-Bracket	-	(1)	-	-
1C	03-080-549		(6R) Dual Wheel V.C. Bracket	-	-	(1)	-
2	03-080-352	(-1992)	Plow Standard Cap	(2)	-	-	-
	03-023-571	(1993-)	Plate, Shank Bracket	-	-	-	1
3	48-090985	(-1992)	Capscrew, 5/8 x 2 3/4 Hex Hd. G. 5 Plt'd.	(8)	-	-	-
	48-100075	(1993-)	Capscrew, 3/4 x 7 1/2 Grd. 5 Plt'd.	-	-	-	4
4	68-010300	(-1992)	Hex Nut, 5/8 Plt'd.	(8)	-	-	-
	68-010350	(1993-)	Hex Nut, 3/4 Plt'd.	-	-	-	4
5	66-010300	(-1992)	Lockwasher 5/8 Plt'd.	(8)	-	-	-
	66-010350	(1993-)	Lockwasher, 3/4 Plt'd.	-	-	-	4
6	04-050-005		"Vee" "U"-Bolt 3/4 x 6 5/16 x 5 11/16	-	-	(1)	-
7	66-010350		Lockwasher, 3/4 Plt'd.	-	-	(2)	-
8	68-010350		Hex Nut, 3/4 Plt'd.	-	-	(2)	-

2-ROW COULTER BAR (03-082-161)

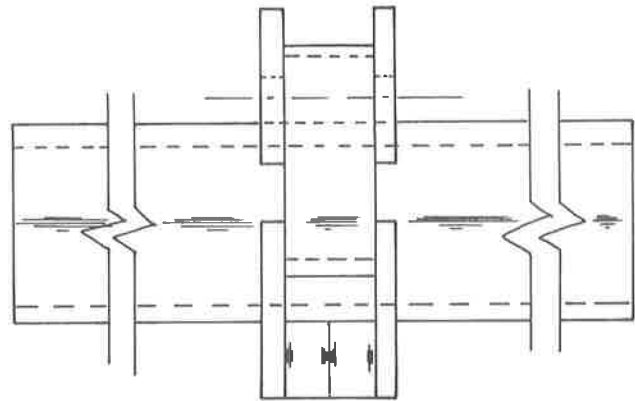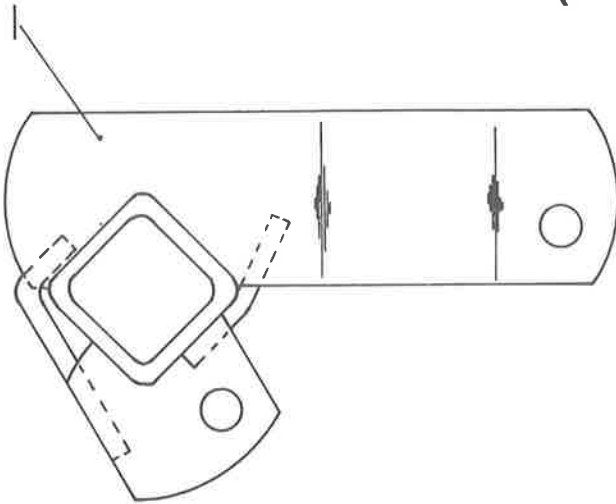


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-479		Coulter Bar (2-Row)

MOUNTING BRACKETS


*** Long
(03-082-164)**

**Short
(03-082-167)**

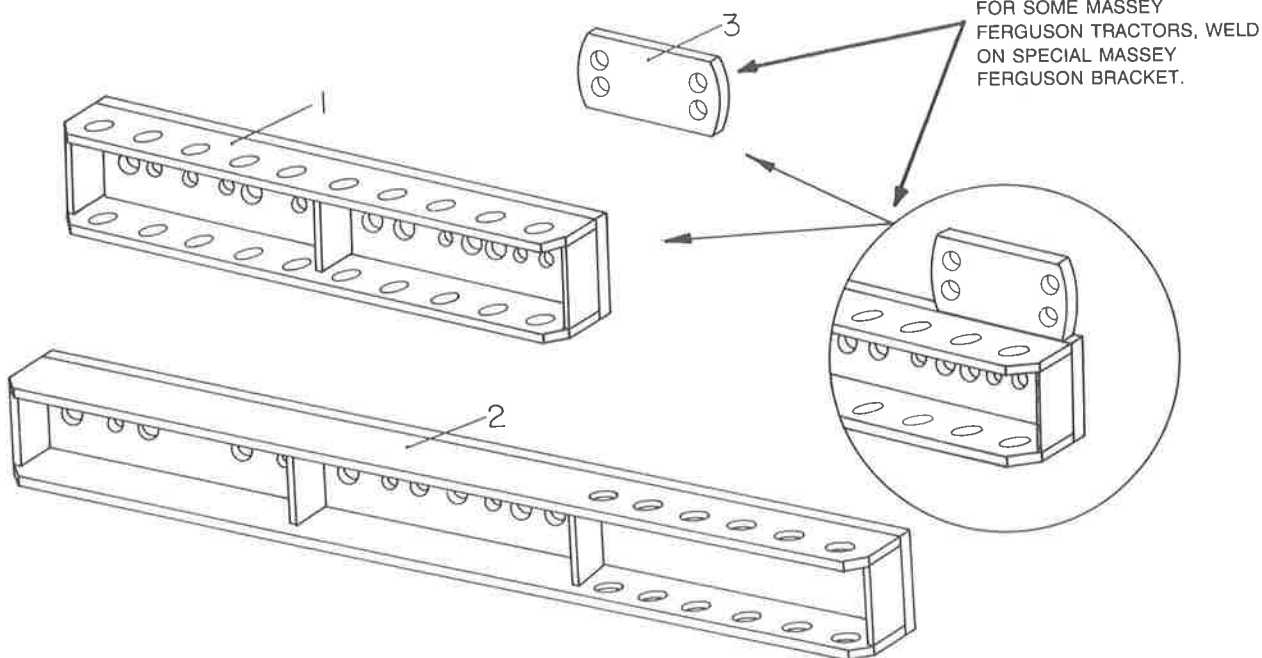


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-487	Or	Mounting Bracket (2 Used)
*2	03-080-484		Mounting Bracket, Long (2 Used)
3	03-023-226		M.F. Bracket (2 Used)

SUPPORT ARM BUNDLE (03-082-163)

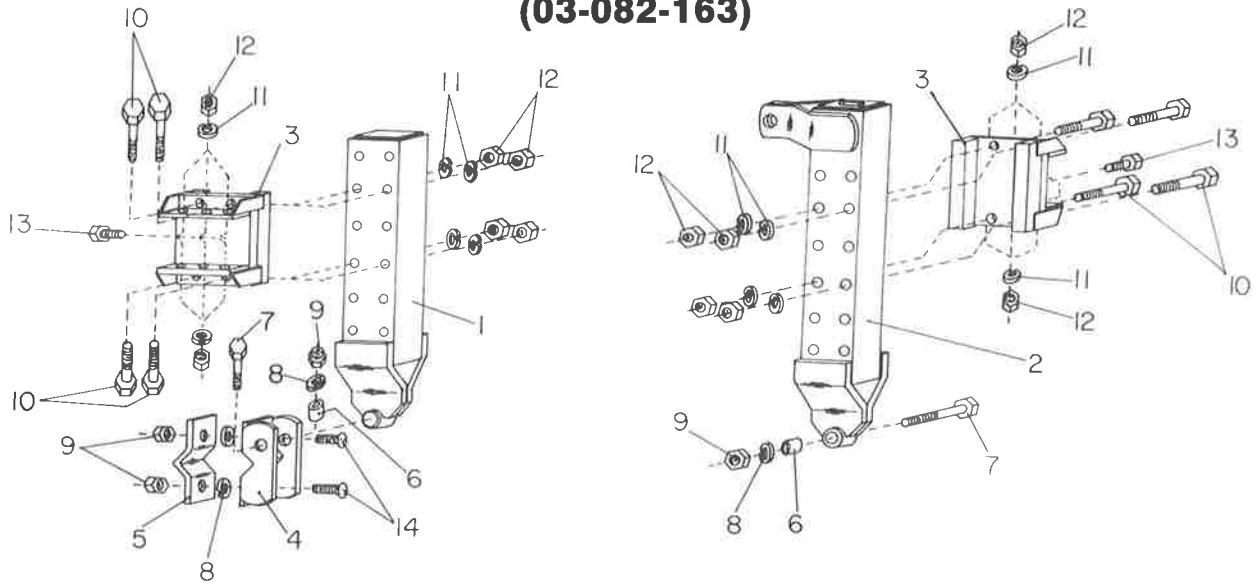


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-482		Support Arm Lt.
2	03-080-483		Support Arm Rt.
3	03-080-481		Adjustable Bracket (2 Used)
4	03-080-243		Tube Pivot Bracket
5	02-023-188		'73 P.B. Clamp
6	03-024-113		Tube Pivot Bushing (2 Used)
7	48-091000		5/8" x 3" Capscrew, Grd. 5 Plt'd. (2 Used)
8	66-010300		5/8" Lockwashers, Plt'd. (4 Used)
9	68-010300		5/8 Hex Nut, Plt'd. (4 Used)
10	48-090700		1/2 x 3/4 Capscrew, Grd. 5, Plt'd. (8 Used)
11	66-010250		1/2" Lockwashers, Plt'd. (20 Used)
12	68-010250		1/2" Hex Nuts, Plt'd. (20 Used)
13	48-090595		1/2" x 1 1/2 Capscrew, Grd. 5, Plt'd. (12 Used)
14	52-030850		5/8" x 2 1/2 Carriage Bolt, Plt'd. (2 Used)

VINE CUTTER STEP (03-082-195)

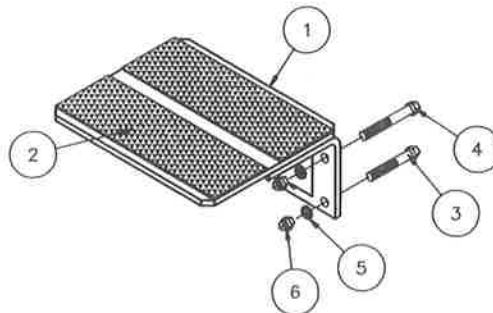


ITEM	PART NO.	SERIAL NO. OR YR.	DESCRIPTION	QTY.
1	03-080-583		Step (Vine Cutter)	1
2	03-050-104		Non-Skid Tape (4 x 12 Long)	2
3	48-090650		Capscrew, 1/2 x 3 Grd. 5 Plt'd.	2
4	48-040370		Capscrew, 1/2 x 3 1/2 Grd. 2 Plt'd.	2
5	66-010250		Lockwasher, 1/2	4
6	68-010250		Hex Nut, 1/2 Plt'd.	4

ADAPTOR BRACKET (MF 2705, MF 2675)

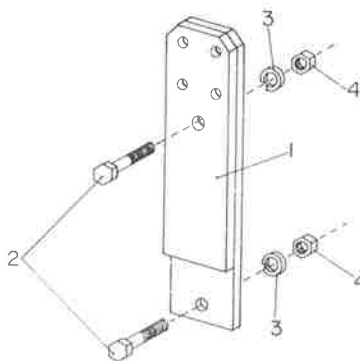


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-488		Adaptor Brkt. (MF 2705, MF 2675) (2 Used)
2	48-091350		3/4 x 2 1/2 Capscrew, Grd. 5, Plt'd. (4 Used)
3	66-010350		3/4 Lockwashers, Plt'd. (4 Used)
4	68-010350		3/4 Hex Nut, Plt'd. (4 Used)

M.F. ADAPTOR BRACKET (2805, 2745)

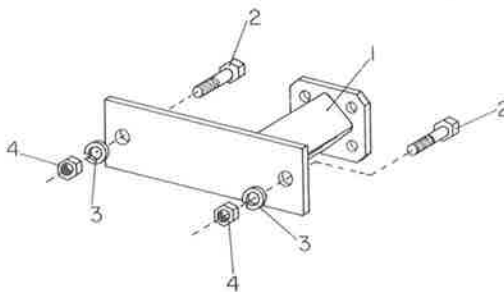


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-486		Adaptor Bracket (2 Used)
2	48-091350		3/4" x 2 1/2" Capscrew, Grd. 5, Plt'd. (4 Used)
3	66-010350		3/4" Lockwasher, Plt'd. (4 Used)
4	68-010350		3/4" Hex Nut, Plt'd. (4 Used)

M.F. BRACKET (1150,1155)

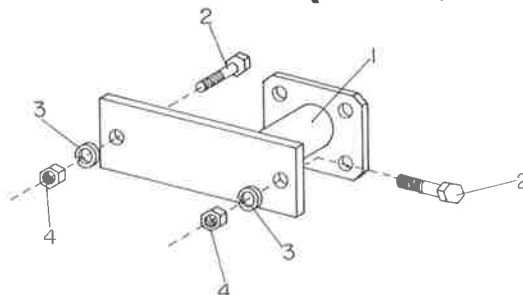


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-485		M.F. Bracket (1150, 1155) (2 Used)
2	48-091350		3/4 x 2 1/2 Capscrew, Grd. 5, Plt'd. (4 Used)
3	66-010350		3/4" Lockwasher, Plt'd. (4 Used)
4	68-010350		3/4" Hex Nut, Plt'd. (4 Used)

MAST-VINE LIFTER (03-082-182)

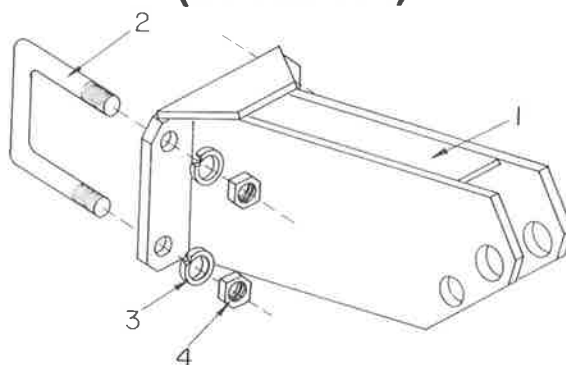


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-529		Vine Lifter Mast
2	14-050-018		"U"-Bolts, 7/8 x 5 $\frac{3}{4}$ x 4-15/16 (2 Used)
3	66-010400		Lockwasher, 7/8 (4 Used)
4	68-010400		Hex Nut, 7/8 (4 Used)

LOWER HITCH-VINE LIFTER (03-082-181)

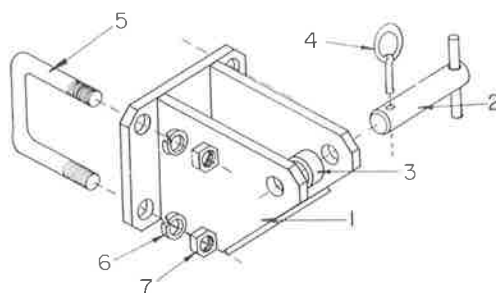


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-080-528		Lower Hitch, Vine Lifter (2 Used)
2	03-050-088		1-1/8 Hitch Pins (2 Used)
3	06-024-021		Cat. II Spacer (2 Used)
4	02-050-002		Klick Pin (2 Used)
5	14-050-018		"U"-Bolt, 7/8 x 5 $\frac{3}{4}$ x 4-15/16 (4 Used)
6	66-010400		Lockwasher, 7/8" Plt'd. (8 Used)
7	68-010400		Hex Nut, 7/8" Plt'd. (8 Used)

6-ROW VINE LIFTER TOOL BAR

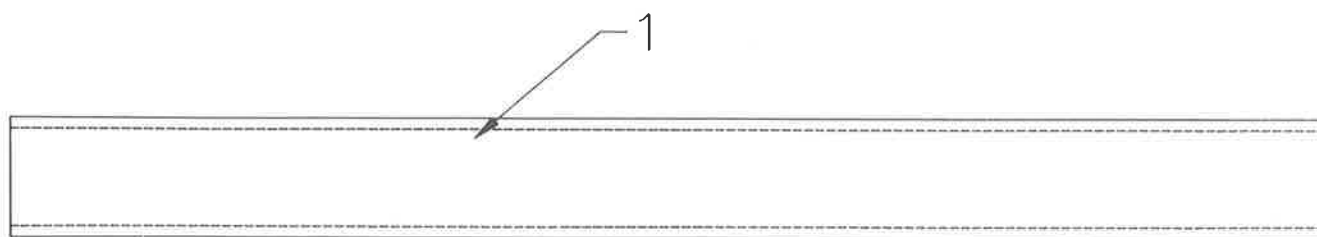

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	03-024-220		6-Row Vine Lifter Tool Bar


CULTIVATOR GAUGE WHEEL (1 X 3 SHANK) (04A82-076) (Lt. & Rt. In Bundle)

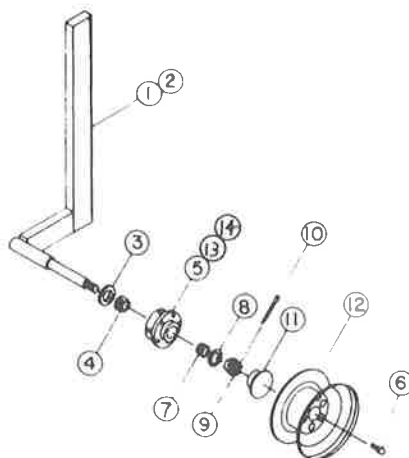

ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	04-080-087		Cultivator Gauge Wheel Arm, Lt. Q-888
2	04-080-088		Cultivator Gauge Wheel Arm, Rt., Q-888
3	02-056-011		Seal (16289CR) (2 Used)
4	02-051-041		Inner Bearing Cone Q-888 (JL69349) (2 Used)
5	02-058-033		6-Bolt Hub with Cups (Q-888) (2 Used)
6	02-058-004		Wheel Bolt, 1/2 x 1 N.F. (12 Used)
7	02-051-006		Outer Bearing Cone (LM67048) (2 Used)
8	02-050-019		Washer, 15/16 I.D. x 2 O.D. x .160 THK (2 Used)
9	68-030050		7/8 N.F. Slotted Hex Nut (2 Used)
10	76-010050		5/32 x 1 1/4 Extend Prong Sq. Cut Cotter Pin (2 Used)
11	02-058-005		Hub Cap (2 Used)
*12	02-058-008		Rim, 15 x 6 Wheel (2 Used)
13	02-051-040		Inner Brg. Cup (JL69310) (2 Used)
14	02-051-005		Outer Brg. Cup (LM 67010) (2 Used)


*02-058-008 Not included in this bundle.

1 x 3 SHANK BRACKET, 4 x 4 (04-082-056)

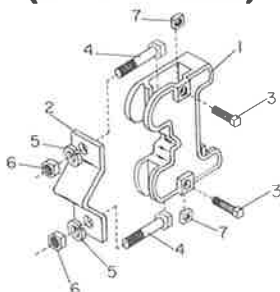


ITEM	PART NO.	SERIAL NO. OR YEAR	DESCRIPTION
1	04-057-027		1 x 3 Shank Bracket
2	02-023-167		Clamp Cap
3	54-010300		Setscrew, 5/8 x 1 1/2 Sq. Hd. Cuppt. (2 Used)
4	48-091475		Capscrew, 3/4 x 5 Grd. 5 Plt'd. (2 Used)
5	66-010350		Lockwasher, 3/4 Plt'd. (2 Used)
6	68-010350		Hex Nut, 3/4 Plt'd. (2 Used)
7	74-010100		Square Nut, 5/8 (2 Used)

5 X 5 COULTER (03-082-197)

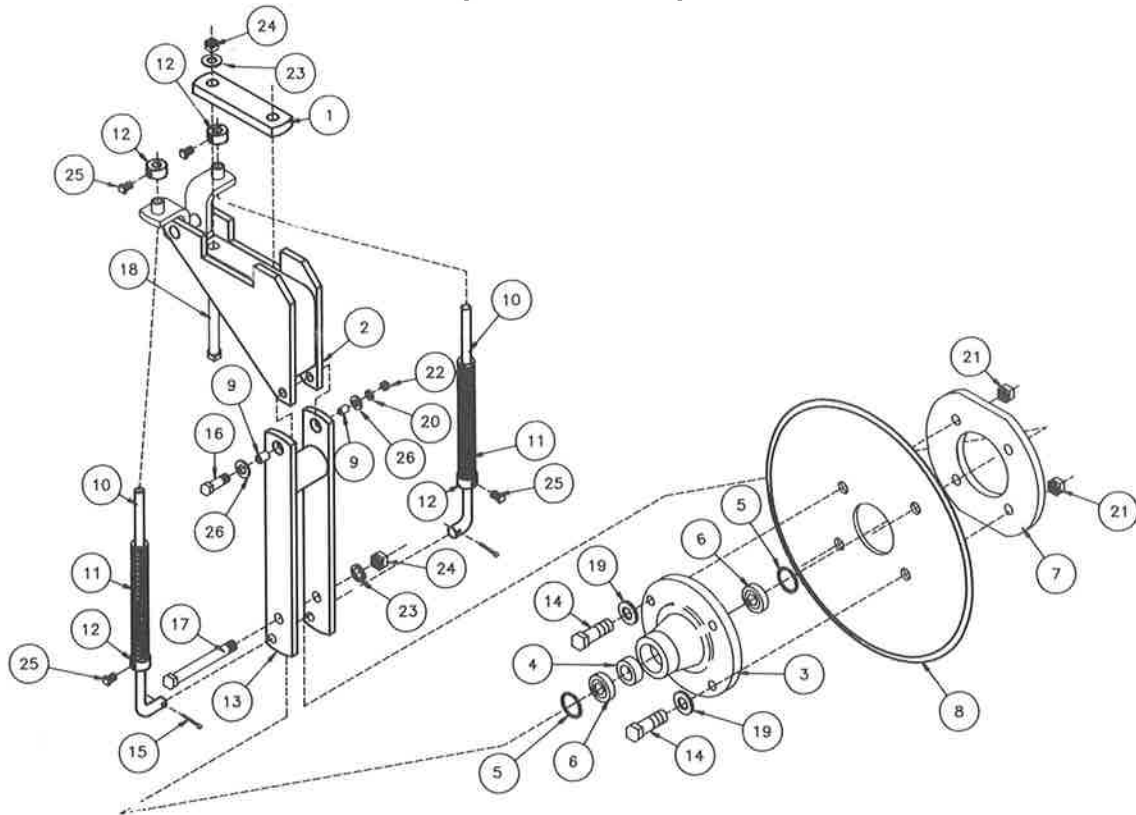

ITEM	PART NO.	SERIAL NO. OR YR.	DESCRIPTION	QTY.
1	36-023-027		Clamp, Coulter Bracket	1
2	03-080-606		Bracket, Coulter	1
3	03-057-014		Hub, Coulter	1
4	04-024-069		Spacer, 3/8 Bearing	1
5	04-050-078		Ring, Internal Retainer, 2 3/64	2
6	04-051-004		Bearing, 3/4 Ext. Cyl. (205)	2
7	03-023-064		Flange, Coulter	1
8	03-050-042		Coulter, Dura-Flute 20"	1
9	04-024-001		Bushing, Pivot	2
10	03-026-115		Rod, Spring Push	2
11	03-050-008		Spring, Coulter	2
12	03-050-009		Collar, 11/16 Adj.	4
13	03-080-620		Fork, Coulter	1
14	48-060100		Capscrew, 3/8 x 1 1/2 G. 5 Plt'd.	4
15	76-010100		Cotter Pin, 3/16 x 1 1/2	2
16	48-060350		Capscrew, 5/8 x 5 1/2 G. 5 Plt'd.	1
17	48-091475		Capscrew, 3/4 x 5 Grd. 5 Plt'd.	1
18	48-100075		Capscrew, 3/4 x 7 1/2 G. 5 Plt'd.	2
19	62-010050		Flatwasher, 5/16 Plt'd.	4
20	66-010300		Lockwasher, 5/8 Plt'd.	1
21	72-010050		Locknut, 3/8 Grd. "B" Plt'd. & Waxed	4
22	72-020050		Locknut, 5/8 Grd. "C" Plt'd. & Waxed	1
23	66-010350		Lockwasher, 3/4 Plt'd.	3
24	68-010350		Hex Nut, 3/4 Plt'd.	3
25	54-010200		Setscrew, 1/2 x 5/8 Sq. Hd. Cuppt.	4
26	62-010250		Flatwasher, 5/8 Plt'd.	2

6-ROW DOUBLE COULTER (03-082-198)

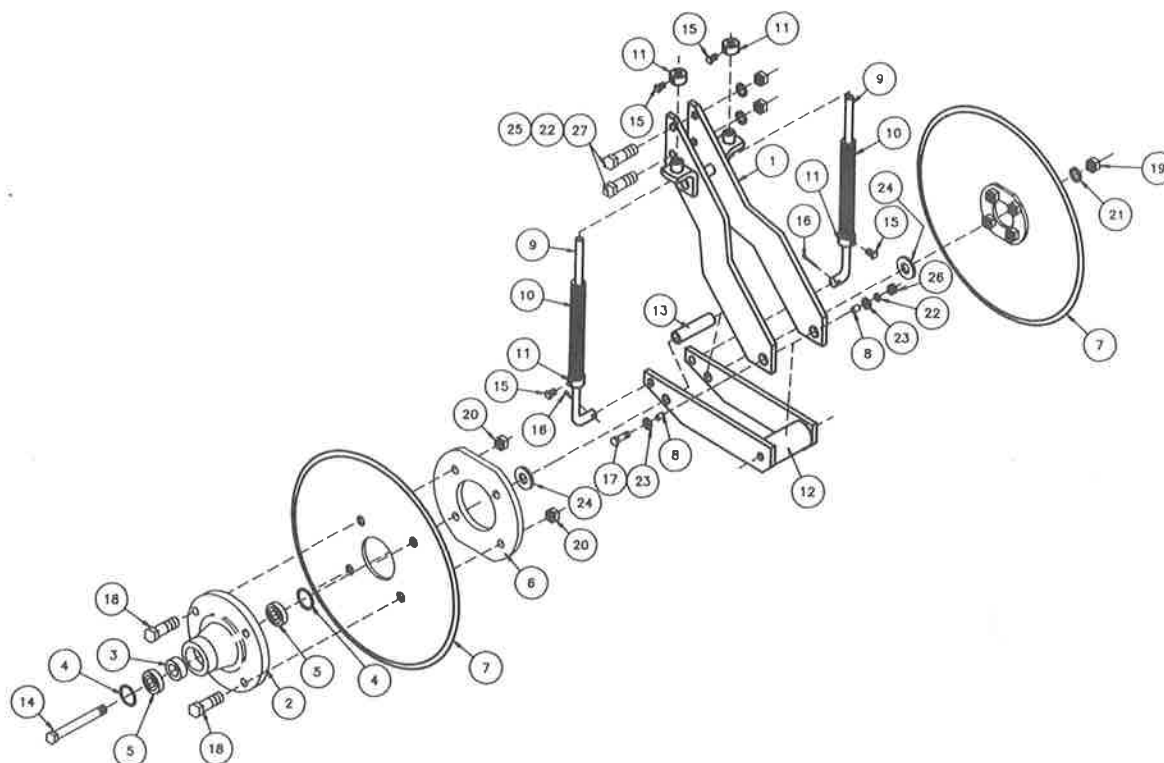

ITEM	PART NO.	SERIAL NO. OR YR.	DESCRIPTION	QTY.
1	03-080-626		Bracket, Dbl. Coulter	1
2	03-057-014		Hub, Coulter	2
3	04-024-069		Spacer, 3/8 Bearing	2
4	04-050-078		Ring, Internal Retainer 2-3/64	4
5	04-051-004		Bearing, 3/4 Ext. Cyl. (205)	4
6	03-023-064		Flange, Coulter	2
7	03-050-042		Coulter, Dura-Flute 20"	2
8	04-024-001		Bushing, Pivot	2
9	03-026-115		Rod, Spring Push	2
10	03-050-008		Spring, Coulter	2
11	03-050-009		Collar, 11/16 Adj.	4
12	03-080-627		Fork, Coulter	1
13	03-024-250		Spacer, Dbl. Coulter	1
14	48-100130		Capscrew, 3/4 x 13 Grd. 5 Plt'd.	1
15	54-010200		Setscrew, 1/2 x 5/8 Sq. Hd. Cuppt.	4
16	76-010100		Cotter Pin, 3/16 x 1 1/2	2
17	48-091235		Capscrew, 5/8 x 7 1/2 Grd. 5 Plt'd.	1
18	48-090150		Capscrew, 3/8 x 1 1/4 Grd. 5 Plt'd.	8
19	68-010350		Hex Nut, 3/4 Plt'd.	1
20	72-010050		Locknut, 3/8 Grd. "B" Plt'd. & Waxed	8
21	66-010350		Lockwasher, 3/4 Plt'd.	1
22	66-010300		Lockwasher, 5/8 Plt'd.	3
23	62-020040		Flatwasher, 5/8 Plt'd. SAE	2
24	04-050-014		Washer, 3/16 x 1 1/4 x 49/64	2
25	68-010300		Hex Nut, 5/8 Plt'd.	2
26	72-020050		Locknut, 5/8 Grd. C.	1
27	48-091060		Capscrew, 5/8 x 4 Grd. 5 Plt'd.	2