


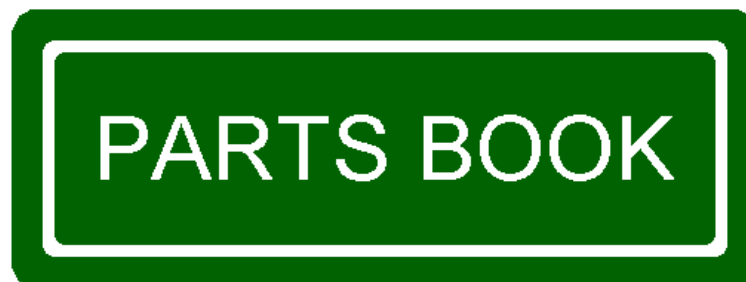

**2-ROW AND 4-ROW
PEANUT
DIGGER-SHAKER-INVERTER
(4-31, 4-36, 4-38 & 4-40)**

(FOR MACHINES PRIOR TO 2002)



03-SERIES

KELLEY MANUFACTURING CO.

80 Vernon Drive / Zip 31794
P.O. Drawer 1467 / Zip 31793
Tifton, GA

Tel: 229-382-9393
Toll Free: 1-800-444-5449
Fax: 229-382-5259
Email Address: info@kelleymfg.com


PART NO. 03-PB-02
Printing Date: JUNE 2002

TABLE OF CONTENTS

HITCH COMPONENTS, 2 & 4-ROW (PRIOR TO 1994)	2-3
COMER GEAR BOXES, 2 & 4-ROW (1986-1992)	4-5
COMER GEAR BOXES, 2 & 4-ROW (1993-1998)	6-7
BONDIOLI & PAVESI GEAR BOXES, 2 & 4-ROW (1999-)	8
DRIVELINES, 2 & 4-ROW (PRESENT 2-ROW & PRIOR 1994 ON 4-ROW)	9
DRIVELINES, 2 & 4-ROW (1995-)	10-11
MAIN FRAME, 2-ROW	11
MAIN FRAME, 4-ROW	12
RATTLER FRAME AND COMPONENTS, 2 & 4-ROW (PRIOR TO 1990)	13
RATTLER FRAME AND COMPONENTS, 2, 4-31, 4-36, 4-38 & 4-40 (1991-)	14
3 WHEEL DIRT KNOCKER	15
2-ROW DRIVE TRAIN COMPONENTS	16-17
4-ROW DRIVE TRAIN COMPONENTS	18-19
GAUGE WHEELS, 5X8, 8X8, & 8X10	20-21
SPRING LOADED COULTER, 2-ROW	22
CENTER COULTER VINE HOLD DOWN	23
CENTER COULTER, 4-ROW (1994-)	24-25
MAST COULTER	26-27
2, 4-31, 4-36, 4-38, & 4-40 PLOW STANDARD	28-29
AUST. CENTER TRIP SHANK	30
26" RIGID V-SHANK	31
LT & RT CYLINDER INVERTER COMPONENTS	32-33
CENTER INVERTER BUNDLE, 4-36 & 4-38	34-35
LT & RT CYLINDER INVERTER COMPONENTS, 4-31	36-37
CENTER INVERTER COMPONENTS, 4-31	38-39
#1 VINE GUIDE ROD, 4-ROW	40
LT & RT INVERTER BELT IDLER	40
CYLINDER INVERTER FENDER, 2 & 4-ROW	41
SLOW MOVING VEHICLE KIT	42
SHIELDS, 2 & 4-ROW	42-46
COULTER BRACKET, 4-ROW	47
FRONT COULTER BUNDLE	48-49
COULTER BAR, 2-ROW	50
SUPPORT ARM BUNDLE	50
MOUNTING BRACKETS	51
VINE CUTTER STEP	51
ADAPTER BRACKETS	52
MAST-VINE LIFTER	53
LOWER HITCH-VINE LIFTER	53
VINE LIFTER TOOL BAR	53
LT & RT CULTIVATOR GAUGE WHEEL (1X3 SHANK)	54
1X3 SHANK BRACKET, 4X4	54
COULTER, 5 X 5	55
COULTER, 2 X 4	56-57
EXTENSION, 2 & 4-ROW	58-59
COULTER BRACKET & FORK	60
22 1/4" V-SHANK	61
HYDRAULIC CYLINDER, 2 X 8	62
HYDRAULIC CYLINDER, 3 X 8	63
4R LIGHT KIT	64

2-ROW HITCH COMPONENTS


(-1994)

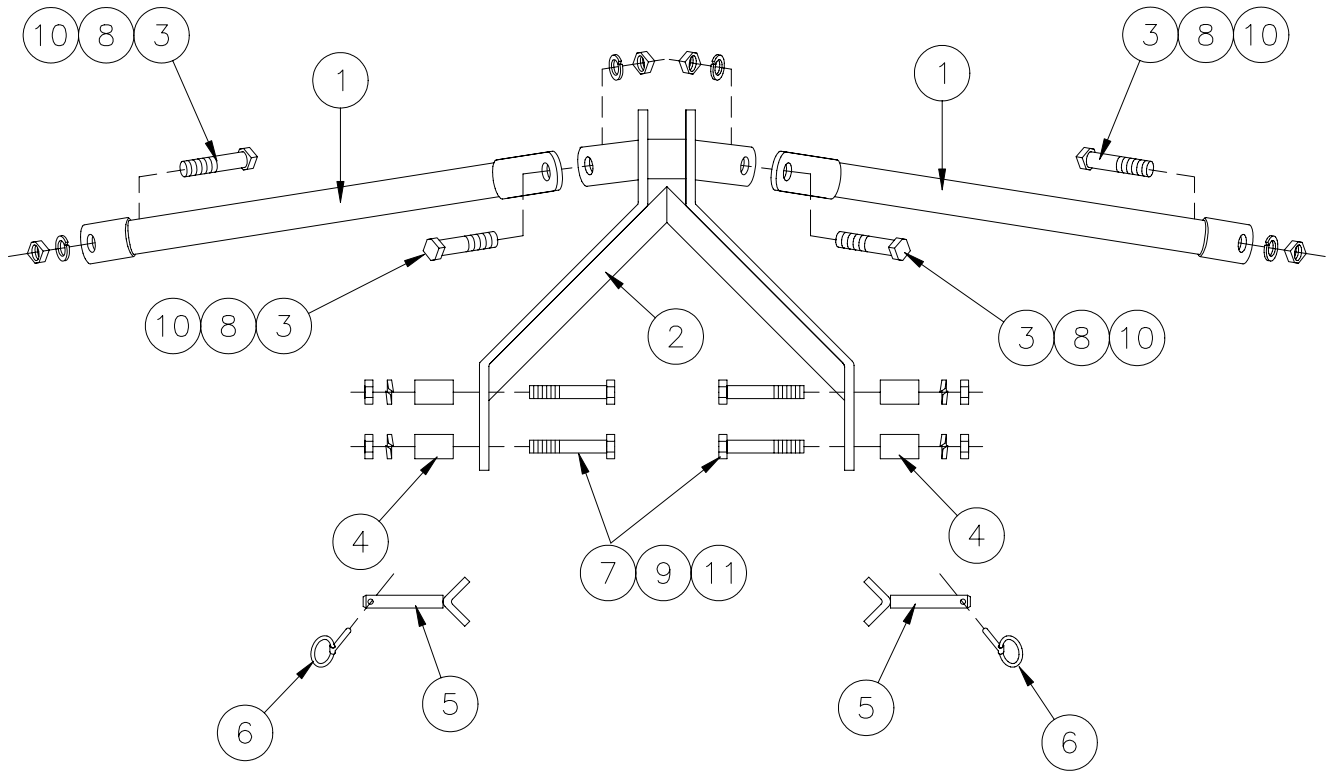

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-373	(-1982)	TENSION PIPE (2-ROW)	(1)
	03-023-463	(1983-1994)	TENSION STRAP (2-ROW)	(2)
2	03-080-353	(1994)	A-FRAME	(1)
3	48-091550	(1994)	CAPSCREW, 7/8 X 2 1/2 G5 PLT	(4)
4	03-024-143	(1994)	SPACER, LOWER HITCH	(4)
5	03-050-088	(1994)	HITCH PIN, 1 1/8	(2)
6	02-050-002	(1994)	KLIK PIN, 7/16 X 1 3/4	(2)
7	48-091450	(1994)	CAPSCREW, 3/4 X 4 1/2 G5 PLT	(4)
8	66-010400	(1994)	LOCKWASHER, 7/8 PLT	(4)
9	66-010350	(1994)	LOCKWASHER, 3/4 PLT	(4)
10	68-010400	(1994)	HEX NUT, 7/8 PLT	(4)
11	68-010350	(1994)	HEX NUT, 3/4 PLT	(4)

4-ROW HITCH COMPONENTS

(Used on Machines Prior to 1994)

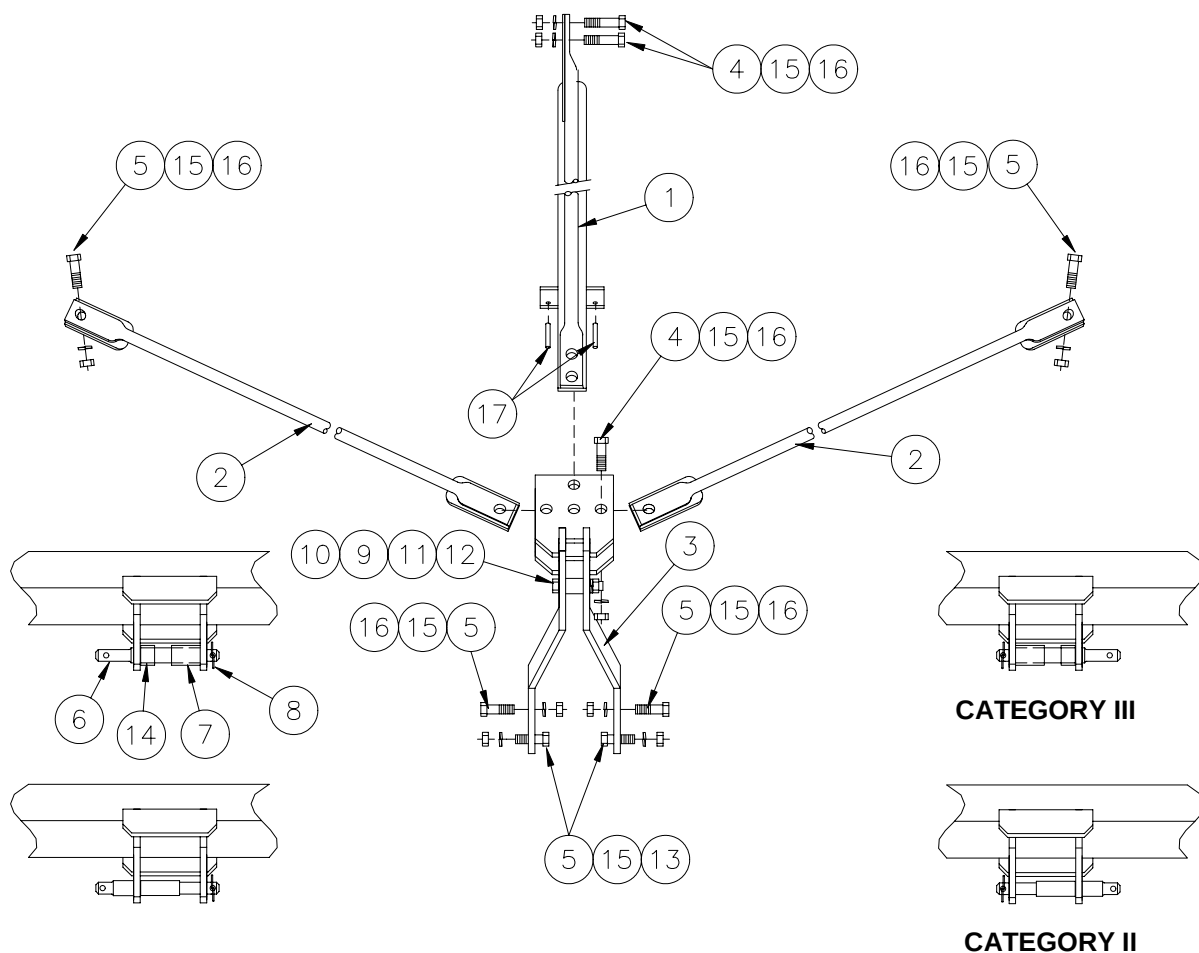


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-475		TENSION PIPE, CENTER	1
2	03-080-332		TENSION PIPE, OUTSIDE	1
3	03-080-474		MAST, 4R CAT II & III	1
4	48-091350		CAPSCREW, 3/4 X 2 1/2 G5 PLT	6
5	48-091300		CAPSCREW, 3/4 X 2 1/4 G5 PLT	6
6	03-026-126		STEP HITCH PIN	2
7	05-024-010		SPACER, CAT III	2
8	02-050-002		KLIK PIN, 7/16 X 1 3/4	2
9	02-024-004		MAST SPACER	1
10	48-100530		SCREW, 1 X 4 UNFIN G5 PLT	1
11	66-010450		LOCKWASHER, 1 PLT	1
12	70-010250		JAM NUT, 1"	1
13	70-010150		JAM NUT, 3/4"	2
14	06-024-022		SPACER, 1 X 1 1/2	1
15	66-010350		LOCKWASHER, 3/4	12
16	68-010350		HEX NUT, 3/4	10
17	03-050-026		ROLL PIN, 1/4 X 2	2


540 RPM & 1000 RPM COMER GEAR BOXES (1986-1992)

4-ROW (540 RPM)
(03-054-066)

4 & 6-ROW (1000 RPM)
(03-054-062)

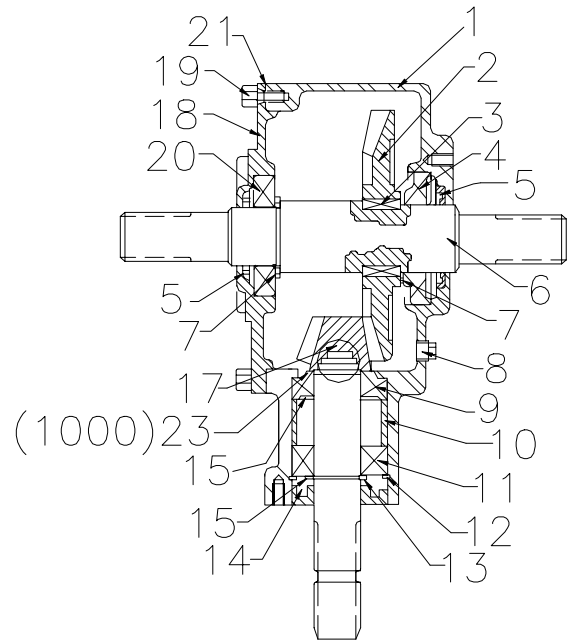


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	540	1000
1	03-054-034		CASTING	1	1
2	03-054-067		GEAR (540 RPM)	1	-
	03-054-072		GEAR & PINION (1000 RPM)	-	1
3	03-054-036		PARALLEL KEY A (10 X 8 X 30)	1	1
4	03-054-037		BEARING, (30208)	1	1
5	03-054-038		OIL SEAL (40 X 62 X 7)	2	2
6	03-054-068		SHAFT, 1 1/4 Z19	1	-
	03-054-061		SHAFT, 1 1/4 Z19	-	1
7	03-054-040		SHIM (40.3 X 51.5)	2	2
8	03-054-041		PLUG 1/4 GAS	1	1
9	27-051-004		BEARING (30207)	1	1
10	03-054-069		SPACER	1	1
11	03-051-006		BEARING 96207)	1	1
12	27-050-009		SNAP RING, (72 UNI7437)	1	1
13	27-050-008		SNAP RING, (35 UNI7435)	1	1
14	03-054-070		OIL SEAL (35 X 72 X 10)	1	1
15	27-050-007		SHIM (35.3 X 40)	2	2
16	27-050-014		OIL FILTER PLUG	1	1
17	03-054-071		PINION (540 RPM)	1	-
	03-054-072		PINION & GEAR (1000 RPM)	-	1
18	03-054-051		COVER (540 RPM)	1	1
19	03-054-052		BOLT (M2 X20)	4	4
20	03-054-057		BEARING (6208)	-	1
21	03-054-053		GASKET	1	1
22	27-050-013		PLUG (3/8" GAS)	1	1
23	03-054-056		SHIM	-	1

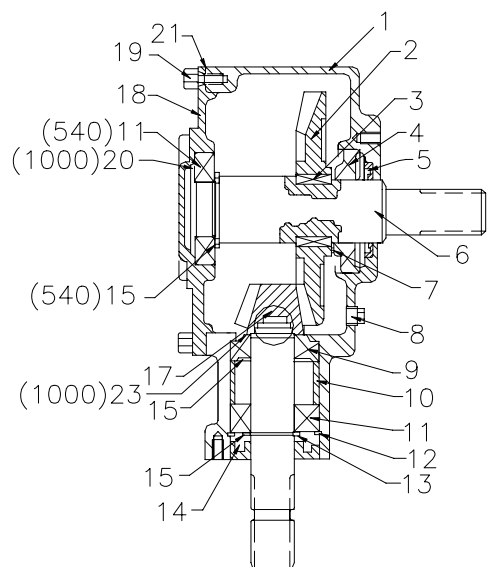

540 RPM & 1000 RPM COMER GEAR BOXES (1986-1992)

2-ROW (540 RPM)
(03-054-060)


2-ROW (1000 RPM)
(03-054-063)

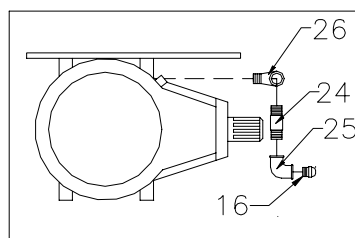

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	540	1000
1	03-054-034		CASTING	1	1
2	03-054-067		GEAR (540 RPM)	1	-
	03-054-072		GEAR & PINION (1000 RPM)	-	1
3	03-054-036		PARALLEL KEY A (10 X 8 X 30)	1	1
4	03-054-037		BEARING, (30208)	1	1
5	03-054-038		OIL SEAL (40 X 62 X 7)	2	2
6	03-054-073		SHAFT, 1 1/4 Z19	1	-
	03-054-064		SHAFT, 1 1/4 Z19	-	1
7	03-054-040		SHIM (40.3 X 51.5)	2	2
8	03-054-041		PLUG 1/4 GAS	1	1
9	27-051-004		BEARING (30207)	1	1
10	03-054-069		SPACER	1	1
11	03-051-006		BEARING 96207)	1	1
12	27-050-009		SNAP RING, (72 UNI7437)	1	1
13	27-050-008		SNAP RING, (35 UNI7435)	1	1
14	03-054-070		OIL SEAL (35 X 72 X 10)	1	1
15	27-050-007		SHIM (35.3 X 40)	2	2
16	27-050-014		OIL FILTER PLUG	1	1
17	03-054-071		PINION (540 RPM)	1	-
	03-054-072		PINION & GEAR (1000 RPM)	-	1
18	03-054-074		COVER (1000 RPM)	1	-
	03-054-051		COVER (540 RPM)	-	1
19	03-054-052		BOLT (M2 X20)	4	4
20	03-054-057		BEARING (6208)	-	1
21	03-054-053		GASKET	1	1
22	27-050-013		PLUG (3/8" GAS)	1	1
23	03-054-056		SHIM	-	1
24	03-059-003		3/8 X 2 NIPPLE SCH 40	1	1
25	03-059-004		ELBOW, 90° 3/8 PIPE SCH 40	1	1
26	03-059-005		STREET ELL, 09° 3/8 PIPE SCH 40	1	1

2R (COMER) GEAR BOX**540 (03-054-075) 1000 (03-054-076)****4R (COMER) GEAR BOX****540(03-054-077) 1000 (03-054-078)**

(1993-1998)


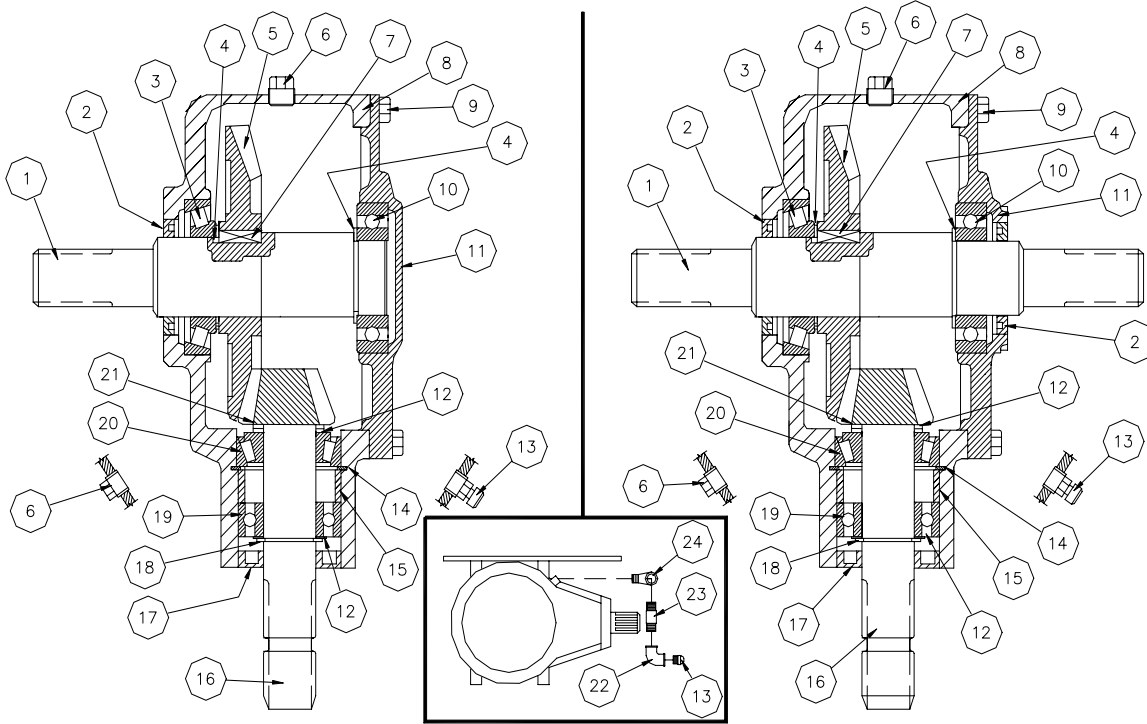


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-075	-076	-077	-078
1	03-054-079	(1993-1998)	SHAFT	1	1	-	-
	03-054-088	(1993-1998)	SHAFT	-	-	1	1
2	03-054-038	(1993-1998)	SEAL, OUTPUT	1	1	2	2
3	03-054-037	(1993-1998)	BEARING, TAPERED	1	1	1	1
4	03-054-040	(1993-1998)	SHIM	2	2	2	2
5	03-054-080	(1993-1998)	GEAR, Z36, M4, 35	1	-	1	-
	03-054-087	(1993-1998)	BEVEL COUPLING W/PINION	-	1	-	1
6	27-050-013	(1993-1998)	PLUG, 3/8 GAS	2	2	2	2
7	03-054-081	(1993-1998)	PARALLEL KEY B12 X 8 X 30	1	1	1	1
8	03-054-082	(1993-1998)	CASING	1	1	1	1
9	03-054-083	(1993-1998)	BOLT, 10 X 25, 8.8.	8	8	8	8
10	03-054-057	(1993-1998)	BEARING 6208	1	1	1	1
11	03-054-084	(1993-1998)	COVER	1	1	-	-
	03-054-089	(1993-1998)	COVER	-	-	1	1
12	27-050-007	(1993-1998)	SHIM	2	2	2	2
13	27-050-014	(1993-1998)	PLUG, OIL FILTER	1	1	1	1
14	27-050-009	(1993-1998)	CIRCLIP, INTERNAL	1	1	1	1
15	03-054-085	(1993-1998)	SPACER	1	1	1	1
16	03-054-086	(1993-1998)	PINION SHAFT, Z12 M 4.35	1	1	1	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-075	-076	-077	-078
17	03-054-010	(1993-1998)	SEAL, OIL	1	1	1	1
18	03-050-180	(1993-1998)	SNAP RING, 35 UNI7436	1	1	1	1
19	03-051-029	(1993-1998)	BEARING 6207	1	1	1	1
20	03-051-030	(1993-1998)	BEARING 32207	1	1	1	1
21	03-050-109	(1993-1998)	SHIM, 35.3 X 1.3	1	1	1	1
22	03-059-003	(-1994)	3/8 x 2 NIPPLE SCH 40	(1)	(1)	-	-
23	03-059-004	(-1994)	90 ELBOW 3/8" PIPE SCH 40	(1)	(1)	-	-
24	03-059-005	(-1994)	90 ST.ELL 3/8" PIPE SCH 40	(1)	(1)	-	-

2R (B&P) GEAR BOX**540 (03-054-090) 1000 (03-054-091)****4R (B&P) GEAR BOX****540(03-054-092) 1000 (03-054-093)**

(1999-)

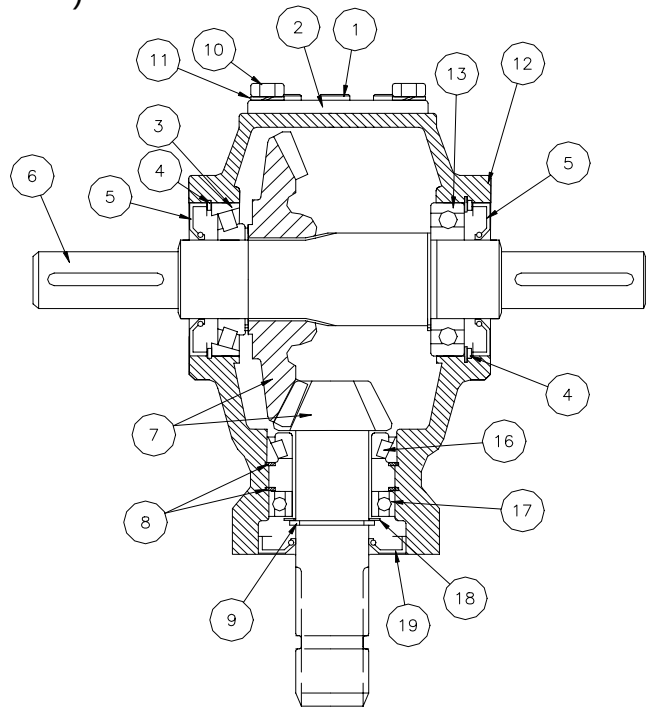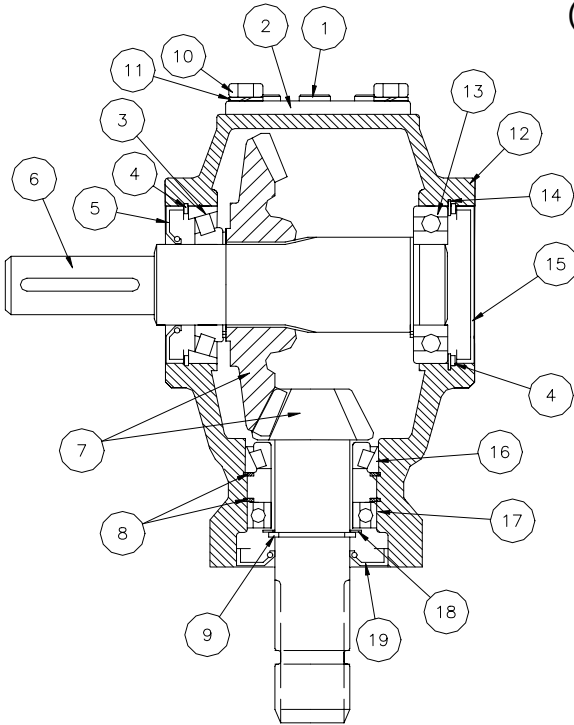


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-090	-091	-092	-093
1	03-054-094		PLUG	1	1	1	1
2	03-054-095		CAP, HOUSING	1	1	1	1
3	03-054-096		BEARING (354401040)	1	1	1	1
4	33-054-097		CIRCLIP	2	2	2	2
5	03-054-098		SEAL (355008040)	1	1	1	1
6	03-054-099		SHAFT, 2R	1	1	-	-
	03-054-114		SHAFT, 4R	-	-	1	1
7	03-054-100		GEAR SET, 540	1	-	1	-
	03-054-113		GEAR SET, 1000	-	1	-	1
8	03-054-101		CIRCLIP (338000072)	1	1	1	1
9	03-054-102		RETAINING RING	1	1	1	1
10	03-054-103		CAPSCREW	4	4	4	4
11	03-054-104		WASHER	4	4	4	4
12	03-054-105		HOUSING	1	1	1	1
13	03-054-106		BEARING (354101040)	1	1	1	1
14	03-054-107		SHIM (340I08000)	1	1	1	1
15	03-054-108		CAP, END	1	1	-	-
16	03-054-109		BEARING (354401035)	1	1	1	1
17	03-054-110		BEARING (354101035)	1	1	1	1
18	03-054-111		SHIM (340E03500)	1	1	1	1
19	03-054-112		SEAL (355029035)	1	1	1	1

USED ON PRESENT 2-ROW & PRIOR TO 1994 ON 4-ROW

(2-ROW) 1 3/8-540 DRIVELINE `86
(03-055-122)

(4-ROW) 1 3/8-1000 DRIVELINE `86
(03-055-123)

(4-ROW) 1 3/4-1000 DRIVELINE `86**
(03-055-124) (Used on 4R Machines Prior to 1994)

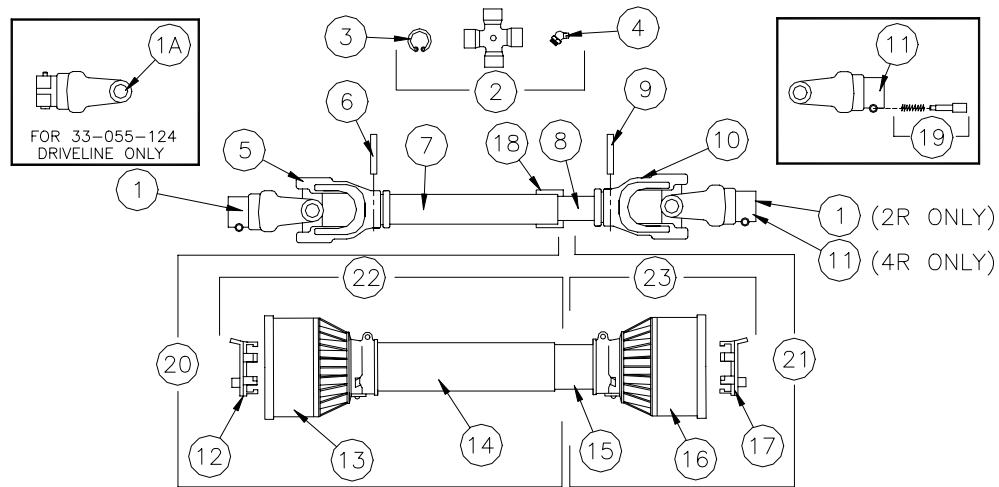


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-122	-123	-124
1	03-055-078		1 3/8-6 (540) TRACTOR YOKE	2	-	-
	03-055-007		1 3/8 (1000) TRACTOR YOKE	-	1	-
	03-055-076		1 3/4 (1000) TRACTOR YOKE	-	-	1
2	03-055-075		CROSS JOURNAL ASSY	2	2	2
3	03-055-080		CIRCLIP	8	8	8
4	03-055-100		GREASE NIPPLE	2	2	2
5	03-055-081		OUTER TUBE YOKE	1	1	1
6	03-055-101		FLEXIBLE PIN	1	1	1
7	03-055-082		OUTER SHAFT	1	1	1
8	03-055-083		INNER SHAFT	1	1	1
9	03-055-103		FLEXIBLE PIN	1	1	1
10	03-055-084		INNER TUBE YOKE	1	1	1
11	03-055-078		1 3/8-6 (540) TRACTOR TOKE	-	1	1
12	03-055-089		O BEARING 3-4	1	1	1
13	03-055-087		OUTER SHIELD CONE	1	1	1
14	03-055-091		OUTER SHIELD TUBE	1	1	1
15	03-055-092		INNER SHIELD TUBE	1	1	1
16	03-055-088		INNER SHIELD CONE	1	1	1
17	03-055-090		I BEARING 3-4	1	1	1
18	03-055-102		RING NUT	1	1	1
19	03-055-098		COMPLETE PUSH BUTTON	1	2	2
20	03-055-070		SHIELD TRACTOR HALF, 1 3/8-6	1	-	-
	03-055-126		SHIELD TRACTOR HALF, 1 3/8-1000	-	1	-
	03-055-127		SHIELD TRACTOR HALF, 1 3/4-1000	-	-	1
21	03-055-125		SHIELD IMP HALF, 1 3/8-6	1	1	1
22	03-055-093		TRACTOR HALF SHIELD W/RETAINER	1	1	1
23	03-055-094		IMP HALF SHIELD W/ RETAINER	1	1	1

1 3/8-540 DRIVELINE
(03-055-137)(1995-)

1 3/4-1000 DRIVELINE
(03-055-139)(1995-)


1 3/8-540 DRIVELINE
(03-055-138)(1995-)

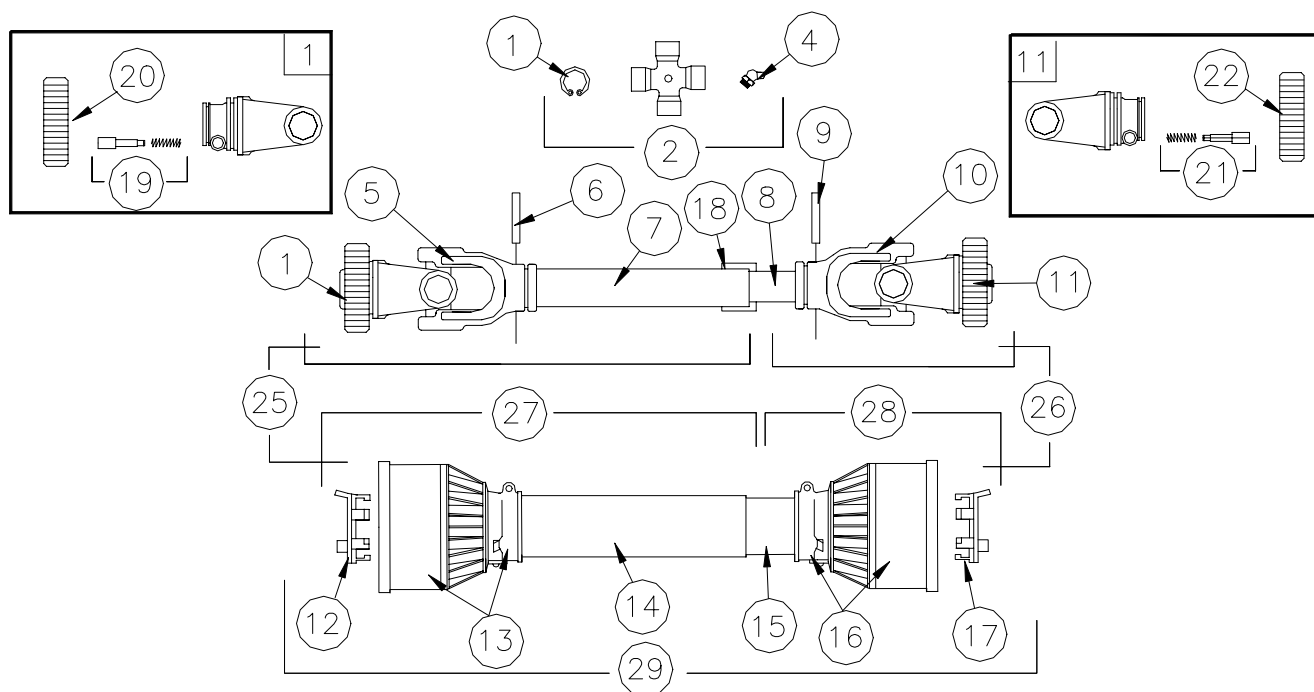

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-137	-138	-139
1	03-055-140		YOKE, RS	1	-	-
	03-055-156		YOKE, RS	-	1	-
	03-055-159		YOKE, RS	-	-	1
2	03-055-075		CROSS JOURNAL ASSY	2	2	2
3	03-055-080		CIRCLIP	8	8	8
4	03-055-100		GREASE NIPPLE	2	2	2
5	03-055-081		OUTER TUBE YOKE	1	1	1
6	03-055-101		FLEXIBLE PIN	1	1	1
7	03-055-141		CARDAN TUBE	1	1	1
8	03-055-142		CM CARDAN TUBE	1	1	1
9	03-055-103		FLEXIBLE PIN	2	2	2
10	03-055-084		INNER TUBE YOKE	8	8	8
11	03-055-143		YOKE, RS	2	2	2
12	03-055-089		O BEARING 3-4	1	1	1
13	03-055-144		O CONE SET F3-4	1	1	1
14	03-055-145		CM SAFETY TUBE	1	1	1
15	03-055-146		SAFETY TUBE	1	1	1
16	03-055-147		I CONE SET F3-4	1	1	1
17	03-055-090		I BEARING 3-4	1	1	1
18	03-055-102		RING NUT	1	-	-
19	03-055-098		COMPLETE PUSH BUTTON	1	1	-
	33-055-184		COMPLETE PUSH BUTTON	-	-	1


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-137	-138	-139
20	03-055-148		SLEEVE	1	1	-
	03-055-160		SLEEVE	-	-	1
21	03-055-098		COMPLETE PUSH BUTTON	1	1	1
22	03-055-148		SLEEVE	8	8	8
25	03-055-151		HALF SHAFT, 1 3/8-6 (540) W/SHIELD	1	-	-
	03-055-158		HALF SHAFT, 1 3/8-21 (1000) W/SHIELD	-	1	-
	03-055-162		HALF SHAFT, 1 3/4-20 (1000) W/SHIELD	-	-	1
26	03-055-152		HALF SHAFT, 1 3/8-6 IMP W/SHIELD	1	1	1
27	03-055-153		HALF SAFETY SHIELD	1	1	1
28	03-055-154		HALF SAFETY SHIELD	1	1	1
29	03-055-155		SAFETY SHIELD	1	1	1

2-ROW MAIN FRAME

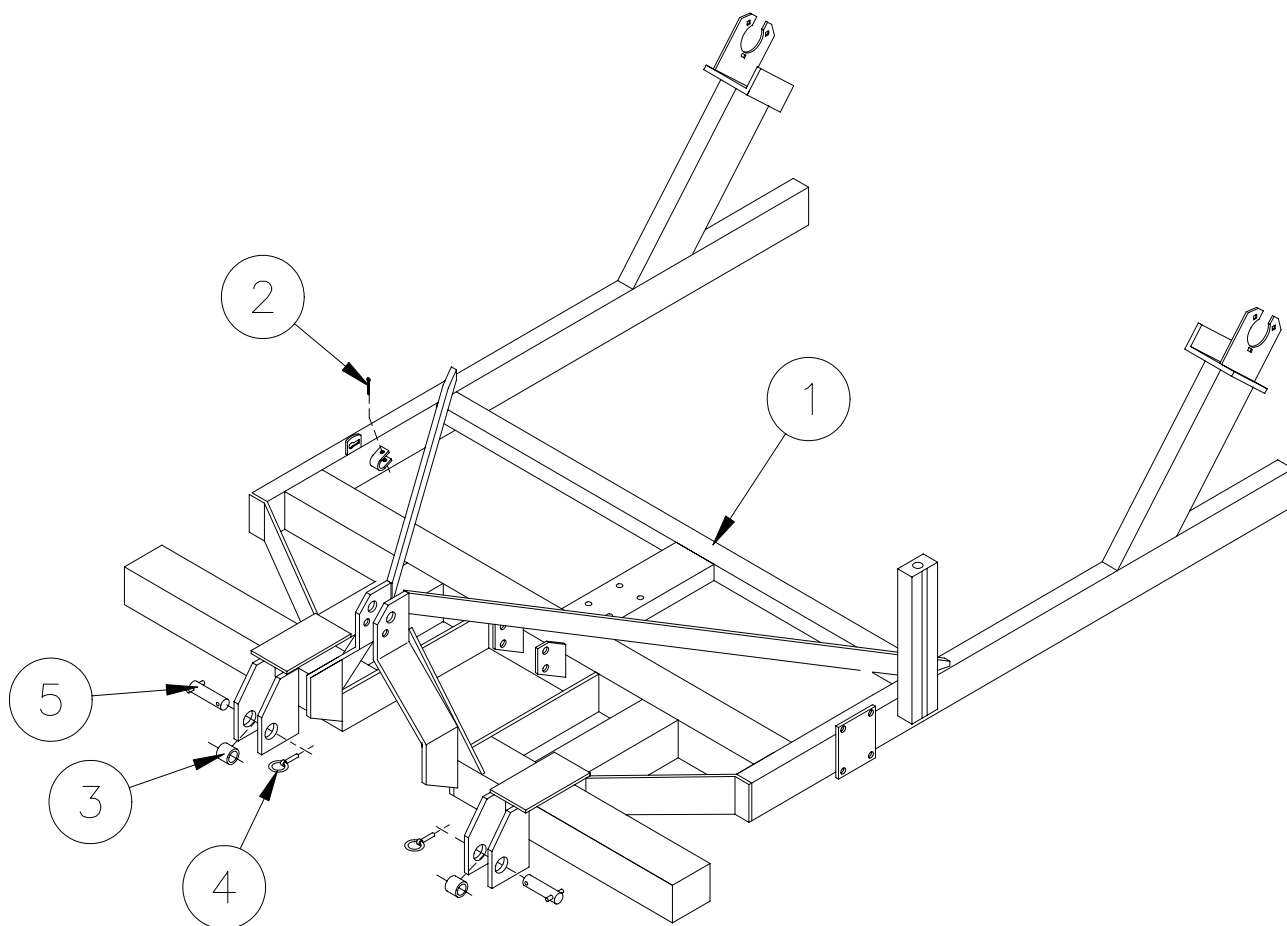

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-315	(1986-1994)	MAIN FRAME	(1)
	03-080-618	(1995-1999)	MAIN FRAME, (2-ROW)	(1)
	03-080-754	(2000-)	MAIN FRAME, 2000	1
2	76-010150		COTTER PIN, 3/16 X 2	2
3	06-024-021		SPACER, CAT. II	2
4	02-050-002		KLIK PIN, 7/16 X 1 1/4	2
5	03-050-088		HITCH PIN, 1 1/8	2


4-ROW MAIN FRAME

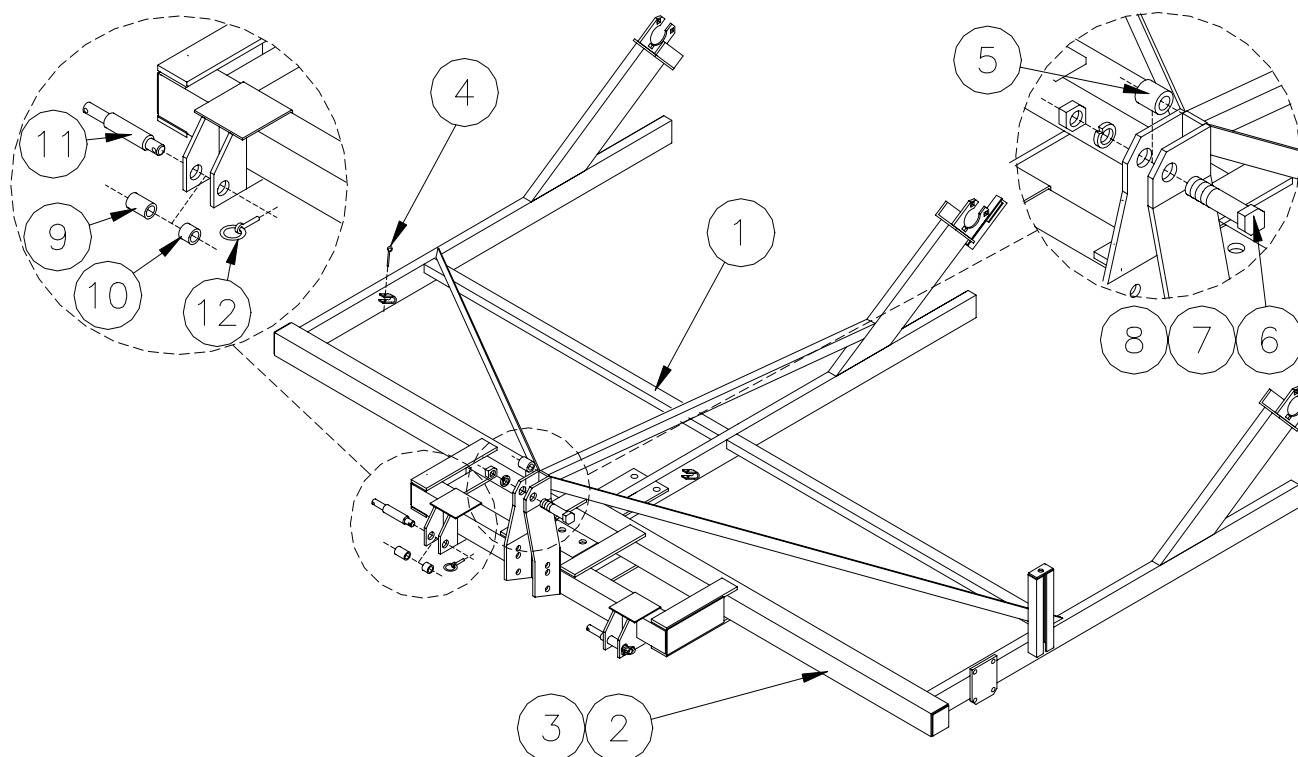

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	4-31	4-36 4-38	4-40
1	03-080-763		MAIN FRAME, 4-31	1	-	-
	03-080-463	(1980-1990)	MAIN FRAME (4-ROW)	-	(1)	-
	03-080-575	(1991-1993)	MAIN FRAME, (4-ROW)	-	(1)	-
	03-080-615	(1994-1999)	MAIN FRAME, (4-ROW)	-	(1)	-
	03-080-755	(2000-)	MAIN FRAME, 2000 4R	-	1	-
	03-080-692	(-1999)	MAIN FRAME, 4-40	-	-	(1)
	03-080-766	(2000-)	MAIN FRAME, 2000 4-40	-	-	1
2	02-050-053		KMC DECAL	2	2	2
3	02-050-078		WARNING DECAL	1	1	1
4	76-010150		COTTER PIN, 3/16 X 2	2	2	2
5	02-024-004		SPACER, 8 X 10	1	1	1
6	48-100600		CAPSCREW, 1 X 5 G5 PLT	1	1	1
7	66-010450		LOCKWASHER, 1 PLT	1	1	1
8	68-010450		HEX NUT, 1 PLT	1	1	1
9	05-024-010		SPACER, CAT. III	2	2	2
10	06-024-022		SPACER, CAT, III	2	2	2
11	03-026-126		PIN, STEP HITCH	2	2	2
12	02-050-002		KLIK PIN, 7/16 X 1 3/4	2	2	2


2 & 4-ROW RATTLER FRAME AND COMPONENTS

(Prior to 1990)

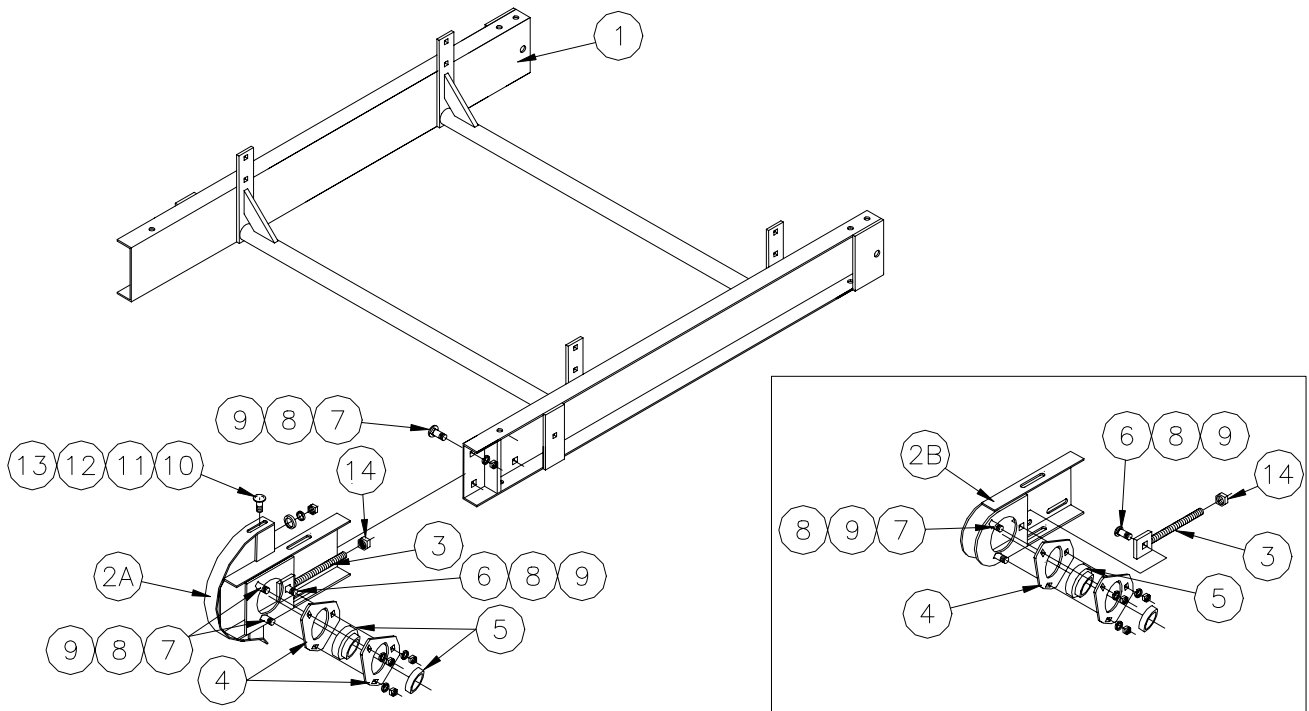

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R
1	03-080-469	(-1982)	FRAME, 4R RATTLER	(1)	(2)
	03-080-498	(1983-1990)	FRAME, '83 RATTLER	(1)	(2)
2A	03-080-200	(-1990)	SKID SHOE, LT	(1)	-
	03-080-201	(-1990)	SKID SHOE, RT	(1)	-
2B	03-080-466	(-1990)	SKID SHOE, 4R	-	(4)
3	03-080-025	(-1990)	IDLER ADJUSTMENT	(2)	(4)
4	03-051-003	(-1982)	FLANGE, #62 MS 3H	(4)	-
	03-051-020	(1983-1990)	FLANGE, #62 MSTR 3H	(4)	(8)
5	03-051-026	(-1990)	BEARING, WO/LOCKING COLLAR	(2)	(4)
	03-051-025	(-1990)	LOCKING COLLAR	(2)	(4)
6	52-030300	(-1990)	CARRIAGE SCREW, 3/8 X 1 G2 PLT	(2)	(4)
7	52-030200	(-1990)	CARRIAGE SCREW, 3/8 X 3/4 G2 PLT	(12)	(24)
8	66-010150	(-1990)	LOCKWASHER, 3/8 PLT	(14)	(28)
9	68-010150	(-1990)	HEX NUT, 3/8 PLT	(14)	(28)
10	52-030100	(-1990)	CARRIAGE SCREW, 5/16 X 3/4 G2 PLT	(2)	-
11	62-010050	(-1990)	FLATWASHER, 5/16 PLT	(2)	-
12	66-010100	(-1990)	LOCKWASHER, 5/16 PLT	(2)	-
13	68-010100	(-1990)	HEX NUT, 5/16 PLT	(2)	-
14	68-010250	(-1990)	HEX NUT, 1/2 PLT	(2)	-



2, 4-31, 4-36, 4-38 & 4-40 RATTLER FRAME AND COMPONENTS (1991-)

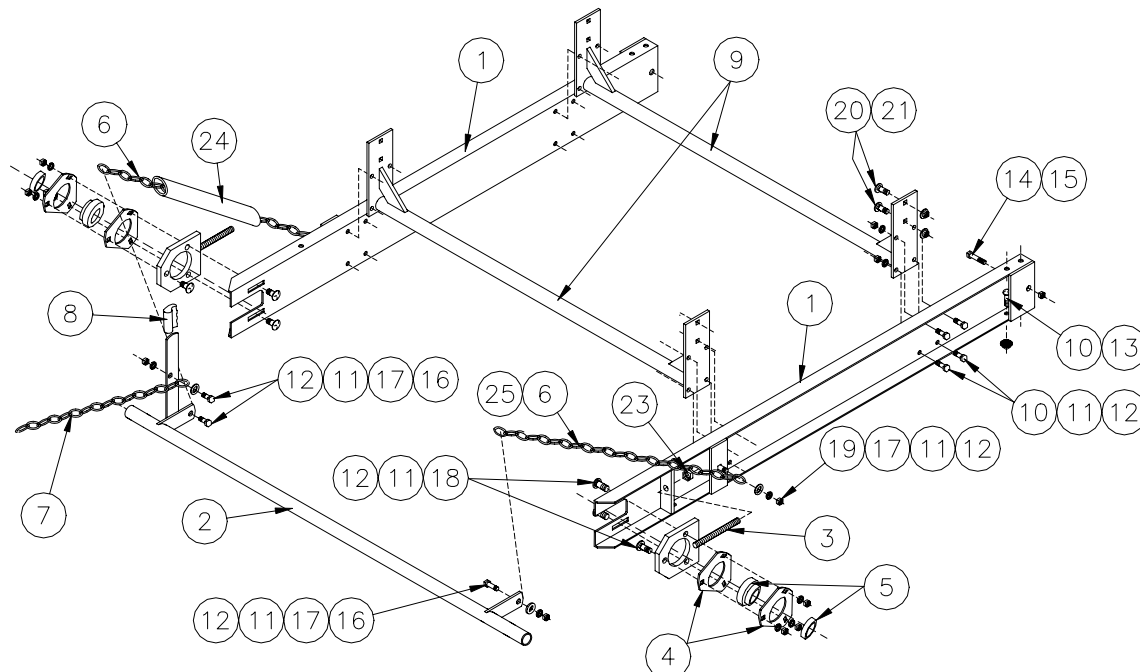

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4-31	4-36, 4-38, 4-40
1	03-080-561		RATTLER SIDE	2	4	4
2	03-080-127	(-1994)	RATTLER ADJ PIPE	(1)	-	-
	03-080-330		RATTLER ADJ PIPE, 4-36 LT	-	-	1
	03-080-331		RATTLER ADJ PIPE, 4-36 RT	-	-	1
3	03-080-559		BLOCK IDLER	2	4	4
4	03-051-020		FLANGE, #62 MSTR 34	4	8	8
5	03-051-027		BEARING, 1 3/16 EXT W/COLLAR	2	4	4
6	03-050-092		CHAIN 5/0 MACH STR (23 LINKS)	2	4	4
7	03-050-093		CHAIN 5/0 MACH STR (16 LINKS)	1	2	2
8	03-050-019		PLASTIC HANDLE GRIP	1	2	2
9	03-080-558		RATTLER BRACE	2	-	4
10	48-090100		CAPSCREW, 3/8 X 1 G5 PLT	16	32	48
11	66-010150		LOCKWASHER, 3/8 PLT	24	48	54
12	68-010150		HEX NUT, 3/8 PLT	24	48	54
13	78-020300		WHIZ NUT, 3/8 PLT	8	-	16
14	48-090650		CAPSCREW, 1/2 X 3 G5 PLT	2	-	4
15	72-010100		LOCKNUT, 1/2 G"B" PLT & WAXED	2	-	4
16	48-090150		CAPSCREW, 3/8 X 1 1/4 G5 PLT	2	-	4
17	62-010100		FLATWASHER, 3/8 PLT	5	10	10
18	52-050045		CARRIAGE SCREW, 3/8 X 1 1/2 G5 PLT	6	12	12
19	52-050040		CARRIAGE SCREW, 3/8 X 1 1/4 G5 PLT	2	-	4
20	52-030100		CARRIAGE SCREW, 5/16 X 3/4 G5 PLT	8	-	16
21	78-020049		WHIZ NUT, 5/16	8	-	16
*22	03-024-190	(2002)	RATTLER PIVOT SPACER	(2)	-	(4)
23	68-010250		HEX NUT, 1/2 PLT	4	2	4
24	03-024-252		GUARD, CHAIN	4	2	4


* THIS ITEM IS NOW WELDED INTO THE RATTLER SIDE FRAME.

3 WHEEL DIRT KNOCKER

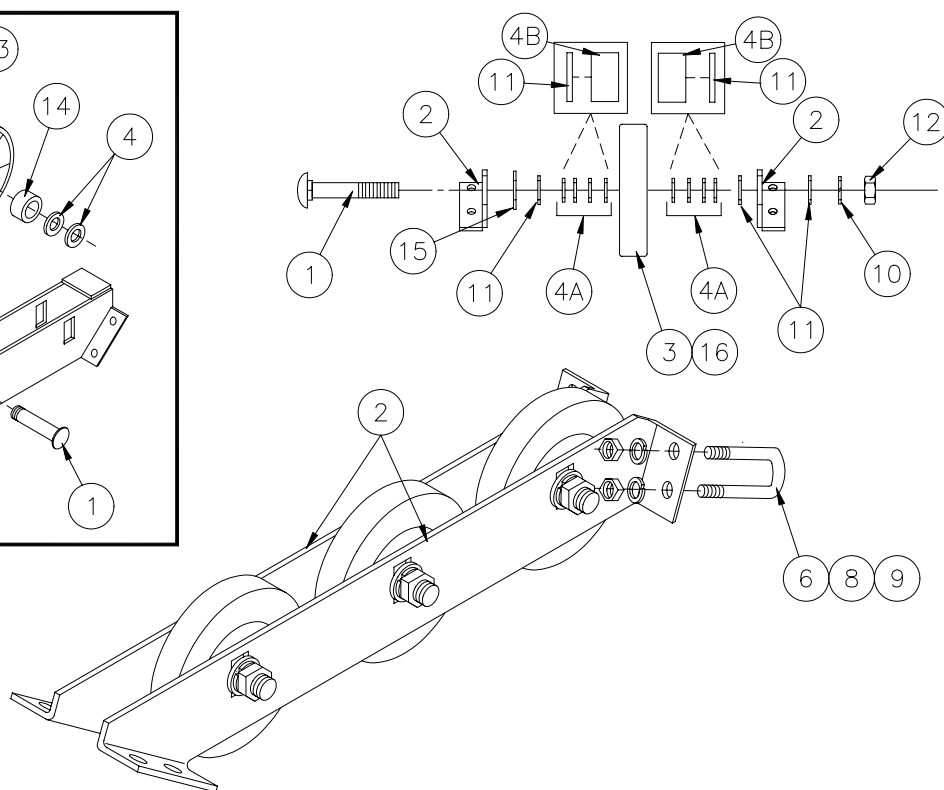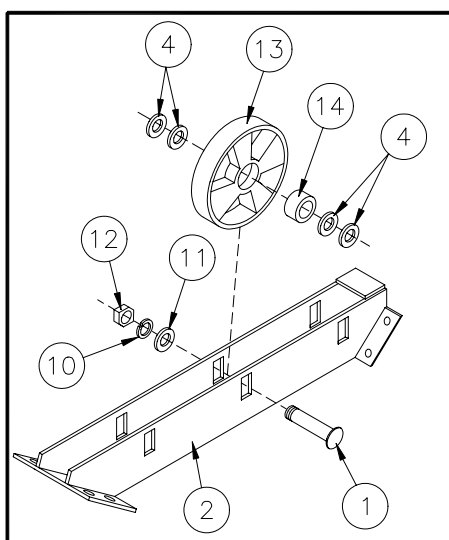

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-050-039	(-1982)	CARRIAGE BOLT, 3/4 X 3 1/4 SHORT SQ.	(3)
	04-050-011	(1983-1990)	CARRIAGE BOLT, 3/4 X 4 1/4	(3)
	52-050448	(1991-)	CARRIAGE BOLT, 3/4 X 4 1/4 G"5"	3
2	03-080-140	(-1982)	DIRT KNOCKER SUPPORT	(1)
	03-023-464	(1983-)	DIRT KNOCKET SUPPORT	2
3	03-081-016	(-1982)	KNOCKER WHEEL ASSEMBLY	(3)
	03-050-083	(1983-)	7" KNOCKER WHEEL ASSY	3
	04-051-004		BEARING, 3/4 EXT	3
4	03-050-028	(-1982)	WASHER, 1 1/4 X 3/4	(12)
	03-050-028	(1983-)	WASHER, 1 1/4 X 3/4	12
4A	04-050-014	(1983-1984)	WASHER, 1 1/4 X 3/4 X 3/16	(21)
4B	03-050-086	(1985-1997)	KNOCKER WHEEL SPACER	(6)
6	03-050-025		"U"-BOLT	4
8	68-010150		HEX NUT, 3/8 PLT	8
9	66-010150		LOCKWASHER, 3/8 PLT	8
10	66-010350		LOCKWASHER, 3/4 PLT	3
11	62-010300		FLATWASHER, 3/4 PLT	9
12	70-010150	(-1990)	JAM NUT, 3/4 PLT	(3)
	68-010350	(1991-)	HEX NUT, 3/4 PLT	3
13	03-057-013	(-1982)	KNOCKER WHEEL	(3)
14	03-051-015	(-1982)	BEARING, 3/4" CYL	(6)
15	62-010370	(1983-1982)	FLATWASHER, 1" STD	(3)
	62-020050	(1991-)	FLATWASHER, 1" SAE	3


2-ROW DRIVE TRAIN COMPONENTS

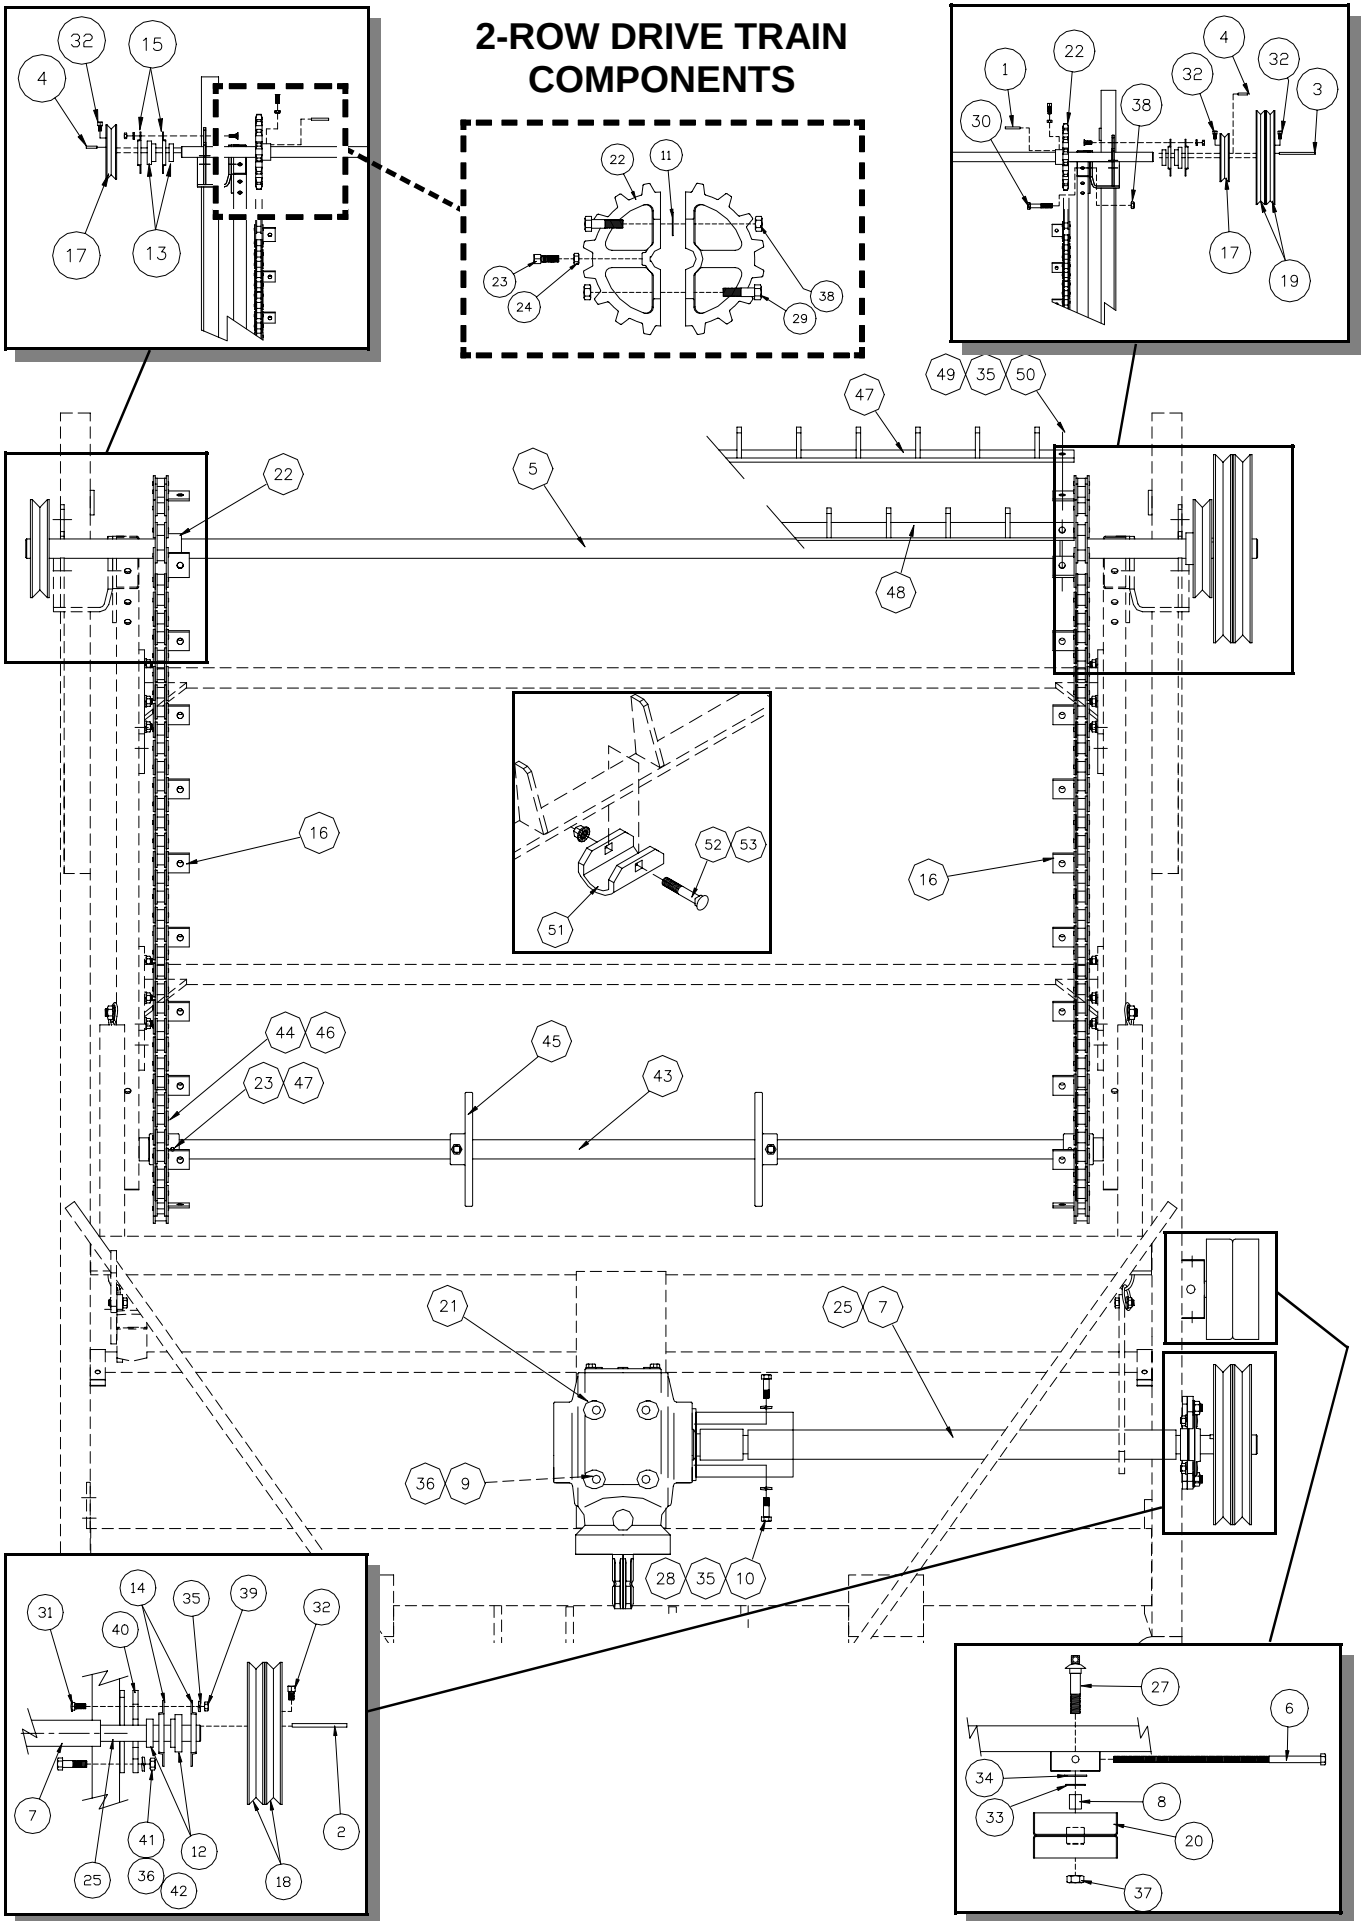

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-026-016		KEY, 1/4 X 2	2
2	03-026-017		KEY, 1/4 X 2 11/16	1
3	03-026-033		KEY, 1/4 X 4 7/8	1
4	03-026-042		KEY, 1/4 X 1 9/16	1
5	03-026-184		DRIVE SHAFT, REAR 2R	1
6	03-050-053		CAPSCREW, 1/2-13 X 16	1
7	03-050-048		PLASTIC PIPE, 1 1/2 X 28 5/8	1
8	03-050-085		SPACER, 3/4 X 1 1/8	1
9	48-090592		CAPSCREW, 1/2 X 1 1/4 G5 PLT	4
10	48-090090		CAPSCREW, 3/8 X 3/4 G5 PLT	2
11	03-050-098		WASHER, 1.375 X 17/32 X .042	2
12	03-051-002		BEARING, 1 3/16 W/COLLAR	1
13	03-051-016		BEARING, 1 1/4 W/COLLAR	2
14	03-051-020		FLANGE, 62 MSTR 3-HOLE	2
15	03-051-024		FLANGE, 72 MSTR 3-HOLE	4
16	03-052-045		CHAIN, CA-557-80	2
17	03-053-030		SHEAVE	2
18	03-053-036		SHEAVE	2
19	03-053-037		SHEAVE	2
20	03-053-039		PULLEY, IDLER	1
21	03-054-090		GEAR BOX, 2R (540) B&P	1
22	03-057-011		SPROCKET	2
23	54-010105		SETSCREW, 3/8 X 7/8 SQ HD	6
24	70-010050		JAM NUT, 3/8 PLN	2
25	03-080-010		JACKSHAFT, 236"	1
26	03-080-331		RATTLER, 436" RT ADJUSTING	1
27	03-080-206		BOLT, 3/4" IDLER	1
28	03-080-586		SHIELD, COUPLING	1
29	48-090596		CAPSCREW, 1/2 X 1 3/4 G5 PLT	4
30	48-090650		CAPSCREW, 1/2 X 3 G5 PLT	2
31	52-050035		CARRIAGE SCREW, 3/8 X 1 G5 PLT	9
32	54-010050		SETSCREW, 3/8 X 1/2 SQ HD CUPPT	12
33	62-010300		FLATWASHER, 3/4 STD PLT	1
34	62-010370		FLATWASHER, 1 STD PLT	1
35	66-010150		LOCKWASHER, 3/8 PLT	13
36	66-010250		LOCKWASHER, 1/2 PLT	8
37	68-010350		HEX NUT, 3/4-10 PLT	1
38	72-010100		LOCKNUT, 1/2 G"B" PLT	6
39	68-010150		HEX NUT, 3/8 PLT	9
40	03-023-784		PLATE, BEARING MOUNT	1
41	68-010250		HEX NUT, 1/2 PLT	4

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
42	48-090595		CAPSCREW, 1/2 X 1 1/2 G5 PLT	4
43	03-026-074	(-1990)	FRONT SHAFT	(1)
	03-026-175	(1991-)	FRONT SHAFT	1
44	03-057-007		IDLER, 70 FRONT CHAIN	4
45	03-057-003		IDLER, FRONT BAR	4
46	03-050-026		HEAVY PIN, 1/4 X 2	4
47	33-080-531		RATTLER BAR, LT	10
48	33-080-532		RATTLER BAR, RT	10
49	48-090150		CAPSCREW, 3/8 X 1 1/4 G5 PLT	40
50	72-010050		LOCKNUT, 3/8	40
51	03-027-077		KNOCKER PADS	20
52	52-050050		CARRIAGE SCREW, 3/8 X 2 1/4 G5 PLT	10
53	78-020300		LOCKNUT, 3/8 WHIZ FLANGE	10

4-ROW DRIVE TRAIN
COMPONENTS

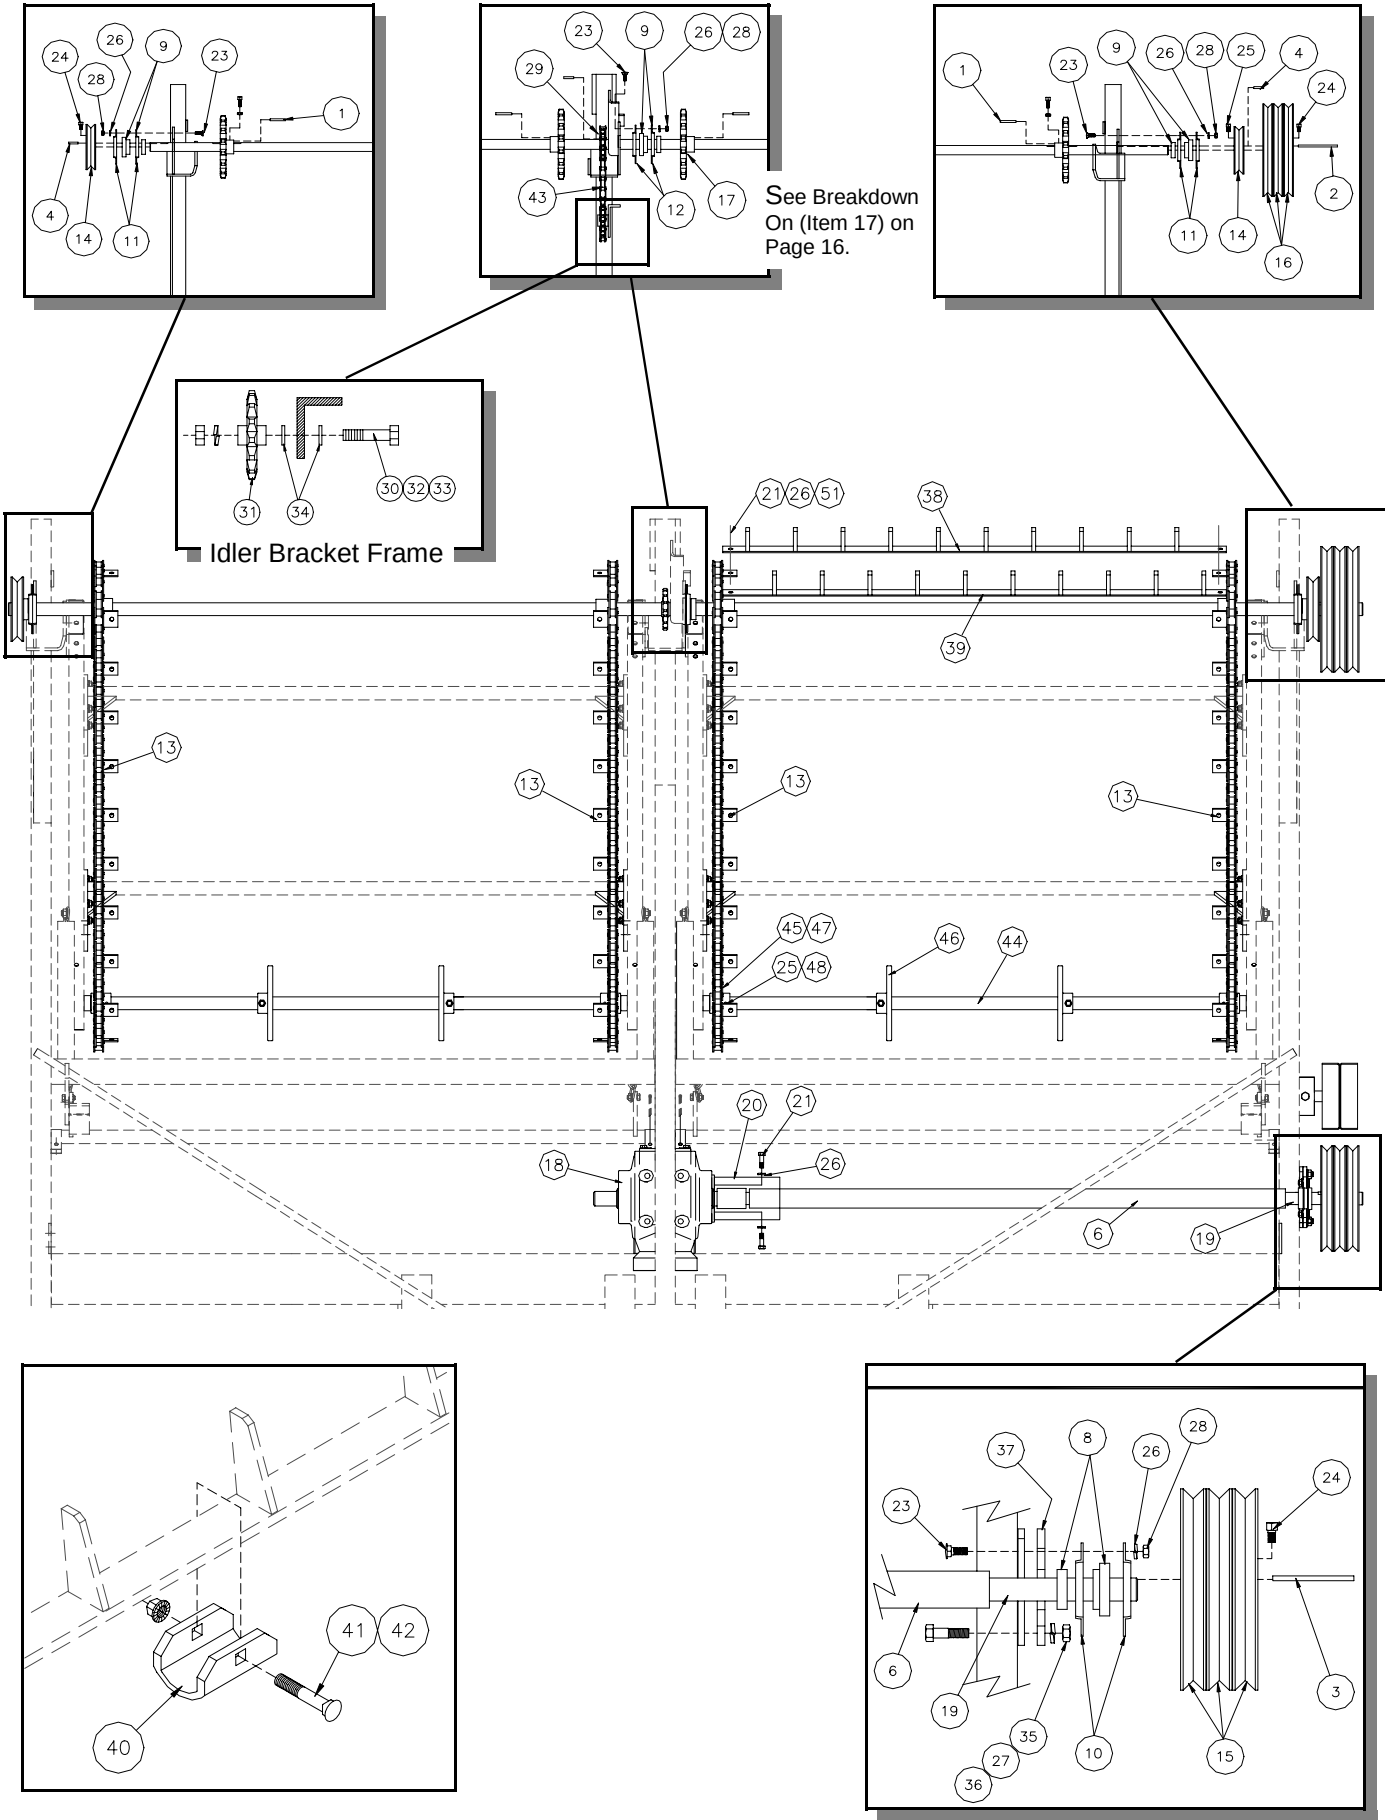

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	4-31	4-36 4-38	4-40
1	03-026-016		KEY, 1/4 X 2	4	4	4
2	03-026-033		KEY, 1/4 X 4 7/8	1	-	2
3	03-026-095		KEY, 1/4 X 4	1	2	-
4	03-026-138		KEY, 1/4 X 1 1/4	3	1	2
5	03-026-227		SHAFT, 4-31 REAR	1	-	-
	03-026-142	(-1990)	RATTLER DRIVE SHAFT, LT (4R)	-	(1)	-
	03-026-143	(-1990)	RATTLER DRIVE SHAFT, LT (4R)	-	(1)	-
	03-026-176	(1991-)	DRIVE SHAFT, REAR	-	1	-
	03-026-183		DRIVE SHAFT, 4-40 REAR	-	-	2
6	03-050-119		SHIELD, 4-31 JACKSHAFT	1	-	-
	03-050-081		JACKSHAFT SHIELD, (4R)	-	1	1
7	03-050-091	(-1998)	CAPSCREW, M-12 (1.75) X 30MM	(4)	(4)	(4)
	48-090590	(1999-)	CAPSCREW, 1/2 X 1 G5 PLT	4	4	4
8	03-051-002		BEARING, 1 3/16 W/COLLAR	1	1	1
9	03-051-016		BEARING, 1 1/4 W/COLLAR	3	3	4
10	03-051-020		FLANGE, 62 MSTR 3-HOLE	2	2	4
11	03-051-024		FLANGE, 72 MSTR 3-HOLE	4	4	4
12	03-051-023		FLANGE, 72 MSTR 3-HOLE	2	2	4
13	03-052-051		CHAIN, CA-557 80 (PAIR)	-	2	2
	03-052-045		CHAIN, CA-557 80	4	-	-
	03-052-002		ATTACH LINK (CA550-A4)	-	-	-
	03-052-003		COUPLER LINK (CA550)	-	-	-
	03-052-007		ROLLER LINK (CA550)	-	-	-
	03-052-008		HALF LINK (CA500)	-	-	-
14	03-053-030		SHEAVE	2	2	2
15	03-053-036		SHEAVE	3	3	4
16	03-053-037		SHEAVE	3	3	4
17	03-057-012	(-1984)	7" BELT IDLER W.O./BEARING	-	(2)	-
	03-081-017	(-1994)	7" BELT IDLER W/BEARING	-	(2)	-
	03-053-039	(1995-)	PULLEY, IDLER	1	1	2
18	03-054-062	(1985-1992)	GEAR BOX , 1000 RPM (4-ROW)	-	(1)	(1)
	03-054-078	(1993-1998)	GEAR BOX, 1000 RPM (4-ROW)	-	(1)	(1)
	03-054-093	(1999-)	GEAR BOX, 4R 1000 (B&P)	1	1	1
19	03-080-727		JACKSHAFT, 4-31	1	-	-
	03-080-461	(1980-1990)	JACKSHAFT, (4R) (COMER BOX)	-	(2)	-
	03-080-462	(1991-)	JACKSHAFT, (4-ROW)	-	1	-
	03-080-698		JACKSHAFT, (4-40)	-	-	2
20	03-080-450	(-1990)	COUPLING SHIELD	-	(2)	-
	03-080-546	(1991-1992)	COUPLING SHIELD, 3 3/4 I.D.	-	(2)	-
	03-080-586	(1993-)	SHIELD, COUPLING	1	2	2

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	4-31	4-36 4-38	4-40
21	48-090150		CAPSCREW, 3/8 X 1 1/4 G5 PLT	84	84	86
22	48-090650		CAPSCREW, 1/2 X 3 G5 PLT	2	2	2
23	52-050035		CARRIAGE SCREW, 3/8 X 1 G5 P	11	11	11
24	54-010050		SETSCREW, 3/8 X 1/2 SQ HD	17	17	17
25	54-010150		SETSCREW, 3/8 X 7/8 SQ HD	5	9	5
26	66-010150		LOCKWASHER, 3/8 REG	95	95	97
27	66-010250		LOCKWASHER, 1/2 REG	8	8	8
28	68-010150		HEX NUT, 3/8 PLT	95	95	95
29	03-052-044		SPROCKET, 60B13 1.25	1	1	1
30	48-090984		CAPSCREW, 5/8 X 2 1/2 G5 PLT	1	1	1
31	03-052-012		SPROCKET, IDLER	1	1	1
32	66-010300		LOCKWASHER, 5/8 PLT	1	1	1
33	68-010300		HEX NUT, 5/8 PLT	1	1	1
34	04-050-013		FLATWASHER, 5/8 HARDENED	2	2	2
35	48-090595		CAPSCREW, 1/2 X 1 1/2 G5 PLT	4	4	4
36	68-010250		HEX NUT, 1/2 PLT	4	4	4
37	03-023-784		PLATE, BEARING MOUNT	1	1	1
38	03-080-531		RATTLER BAR, LT	20	20	20
39	03-080-532		RATTLER BAR, RT	20	20	20
40	03-027-077		KNOCKER PADS	20	20	20
41	52-050500		CARRIAGE SCREW, 3/8 X 2 1/4 G5	20	20	20
42	78-020300		LOCKNUT, 3/8 WHIZ FLANGE	20	20	20
43	03-052-043		CHAIN (#60-71)	1	2	2
	03-052-037		OFFSET LINK, #60	-	-	-
	03-052-018		CONN. LINK, #60	-	-	-
44	03-026-199		SHAFT, FRONT 6-31	2	-	-
	03-026-074	(-1990)	FRONT SHAFT	-	(2)	(2)
	03-026-175	(1991-)	FRONT SHAFT	-	2	2
45	03-057-007		IDLER, 70 FRONT CHAIN	4	4	4
46	03-057-003		IDLER, FRONT BAR	4	4	4
47	03-050-026		HEAVY PIN, 1/4 X 2	4	4	4
48	70-010050		JAMNUT, 3/8 NC	4	8	4
49	03-053-031		V-BELT, HC-72	2	2	2
50	03-053-040		V-BELT, HC-156.2	1	1	1
51	72-010050		LOCKNUT, 3/8 HEX	80	80	80


GAUGE WHEEL

5 X 8 (2-ROW)
(03-082-028) (-1990)

8 X 8 (2-ROW)
(03-082-192) (1991-)

8 X 10
(03-082-019)

8 X 8 (FRONT MOUNTED)
(03-082-222)

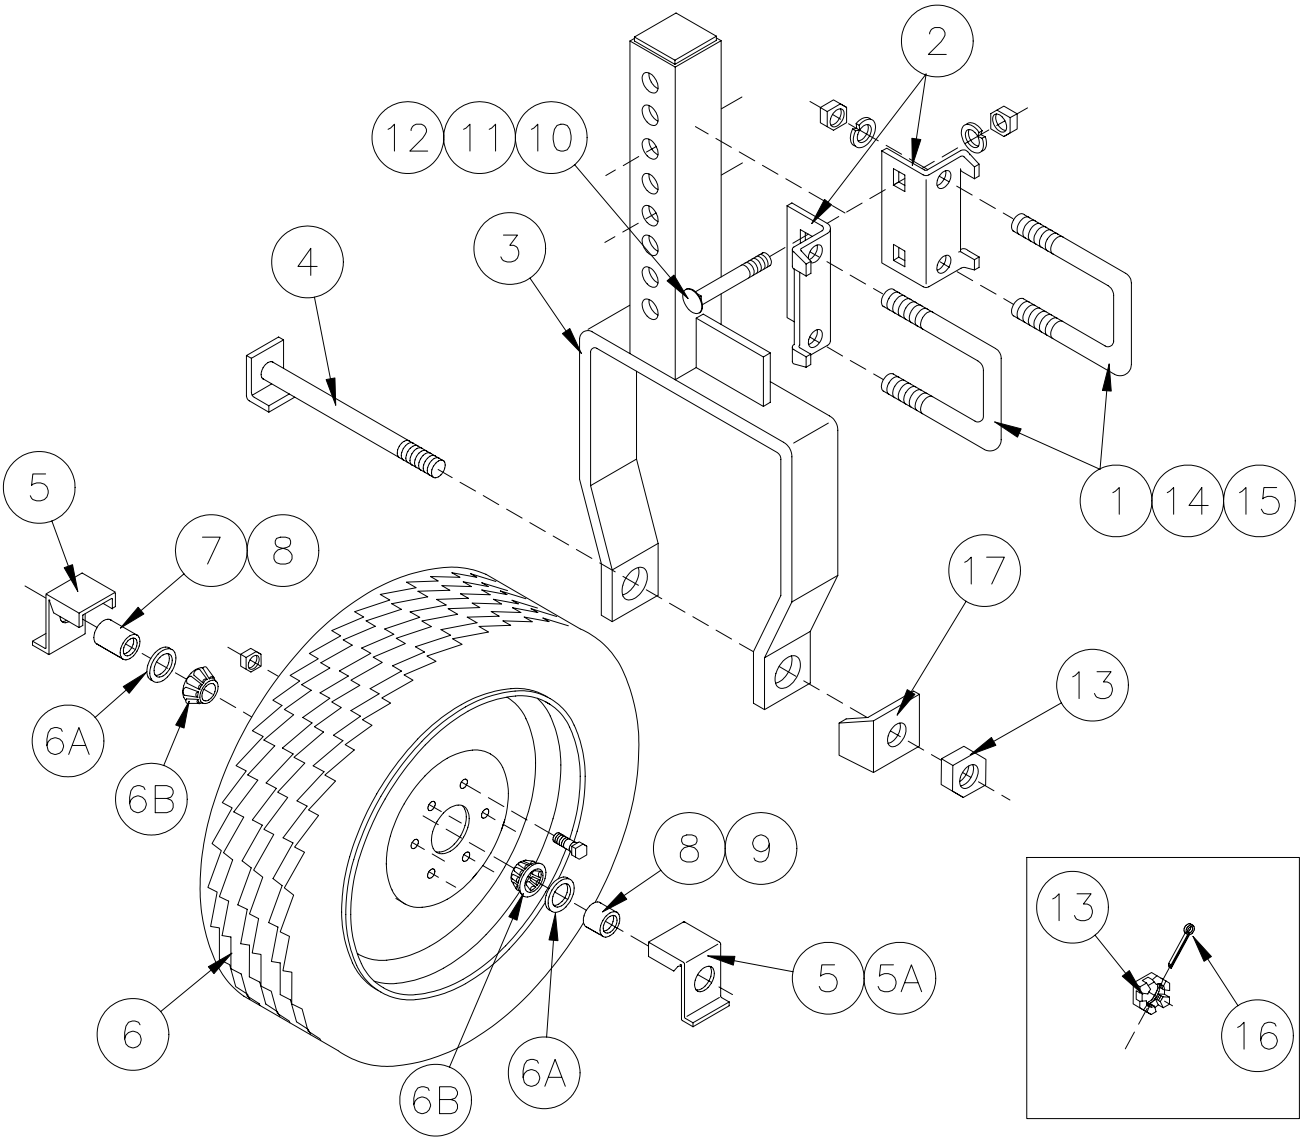

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	5X8	(8X8) -192	(8X8) -222	8X10
1	03-050-001		WHEEL POST "U" BOLT	(2)	2	2	2
2	03-027-044		WHEEL POST BRACKET	(2)	2	2	2
3	03-080-054	(-1990)	WHEEL FORK (5X8)	(1)	-	-	-
	03-080-060		WHEEL FORK (8X10)	-	1	1	1
4	03-080-059	(-1983)	WHEEL SPINDLE (5X8)	(1)	-	-	-
	03-080-508	(1984-1990)	WHEEL AXLE (5X8)	(1)	-	-	-
	02-080-019	(-1983)	WHEEL SPINDLE (8X10)	-	(1)	-	-
	03-080-507	(1984-)	WHEEL AXLE (8X10)	-	1	1	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	5X8	(8X8) -192	(8X8) -222	8X10
5	03-027-160	(-1990)	GAUGE WHEEL BRG SHIELD	(2)	-	-	-
	03-027-161		GAUGE WHEEL BRG SHIELD	-	1	1	1
5A	03-027-252		WHEEL SHIELD SHORT	-	1	1	1
6	03-058-001	(-1982)	TIRE, (5X8)	(1)	-	-	-
	03-058-002	(-1982)	TUBE, (5X8)	(1)	-	-	-
	03-058-006	(1983-1990)	TIRE, 5.70 TUBELESS WWHEEL	(1)	-	-	-
	03-058-005		TIRE, TUBELESS	(1)	-	-	-
	01-058-003		WHEEL, 8" W/CUPS	(1)	-	-	-
6 ^ ^	03-058-007		TIRE, TUBELESS (8X10)	-	-	-	1
	02-058-012		TIRE, TUBELESS	-	-	-	1
	02-058-014		WHEEL, 10X6 (5-BOLT)	-	-	-	1
	03-058-008		HUB, CAST W/CUPS	-	-	-	1
	03-058-009		BOLT, 1/2 X 7/8 NF	-	-	-	5
6 + +	21-058-003		WHEEL, W/TIRE 18X8.5X8	-	1	1	-
	21-058-002		TIRE, 18X8.5X8	-	1	1	-
	01-058-003		WHEEL, 8" W/CUPS	-	1	1	-
6A	02-056-007		SEAL (NAT. 204029X)	(2)	2	2	2
6B	02-051-015		BEARING CONE (L44643)	(2)	2	2	2
7	02-024-004		SPACER (8X10)	-	1	1	1
8	03-024-030		SPACER (5X8)	(2)	-	-	-
9	02-024-005		SPACER (8X10) LONG	-	1	1	1
10	52-050100		CARRIAGE SCREW, 3/8 X 3 G5 PLT	(2)	2	2	2
11	66-010150		LOCKWASHER, 3/8 PLT	(2)	2	2	2
12	68-010150		HEX NUT, 3/8 PLT	(2)	2	2	2
13	68-030100	(-1983)	HEX NUT, 1 SLOTTED	(1)	-	-	-
	70-010250	(1984-)	JAM NUT, 1	(1)	1	1	1
14	66-010300	(-1983)	LOCKWASHER, 5/8 PLT	(4)	-	-	-
	66-010250	(1984-)	LOCKWASHER, 1/2 PLT	(4)	4	4	4
15	68-010300	(-1983)	HEX NUT, 5/8 PLT	(4)	-	-	-
	68-010250	(1984-)	HEX NUT, 1/2 PLT	(4)	4	4	4
16	76-010150	(-1983)	COTTER PIN, 3/16 X 2	(1)	(1)	(1)	-
17	11-027-014	(1984-)	PLATE, NUT STOP	(1)	1	1	1

* Items make up 03-058-006 (5 x 8) Tire mounted on wheel with cups.

^ Items make up 03-058-007 (8 x 10) Tire mounted on rim.

+ Items make up 21-058-003 (8 x 8) Tire mounted on rim.

✓

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-023-064		COULTER FLANGE	1
2	04-024-069		BEARING SPACER, 3/8"	1
3	04-024-001		PIVOT BUSHING	2
4	03-026-115		SPRING PUSH ROD	2
5	03-050-008		COULTER SPRING	2
6	03-050-009		COLLAR, 11/16 ADJ	4
7	03-050-010		DURA FLUTE COULTER, 17"	1
8	04-050-078		RETAINING RING, 2 3/64 INT	2
9	62-010050		FLATWASHER, 5/16 PLT	4
10	04-051-004		BEARING, 3/4 CYL	2
11	03-057-014		COULTER HUB	1
12	03-080-319		COULTER FORK	1
13	03-080-320		SPRING COULTER ARM	1
14	04-081-014		COULTER HUB ASSY	1
15	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	4
16	52-030800		CARRIAGE SCREW, 5/8 X 2 PLT	4
17	48-010750		CAPSCREW, 3/4 X 5 (AXLE)	1
18	72-010050		LOCKNUT, 3/8 G"B" PLT & WAXED	4
19	68-010300		HEX NUT, 5/8 PLT	6
20	68-010350		HEX NUT, 3/4 PLT	1
21	66-010300		LOCKWASHER, 5/8 PLT	6
22	66-010350		LOCKWASHER, 3/4 PLT	1
23	62-010250		FLATWASHER, 5/8 PLT	2
24	76-010100		COTTER PIN, 3/16 X 1 1/2	2
25	48-060100		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4


CENTER COULTER VINE HOLD DOWN

*(03-082-190)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
26	03-080-547		CENTER COULTER HOLD DOWN, LT	1
27	03-080-548		CENTER COULTER HOLD DOWN, RT	1


* Can be used on (03-081-070 & 03-082-157) coulters.

4-ROW CENTER COULTER (03-081-105) (1994-)

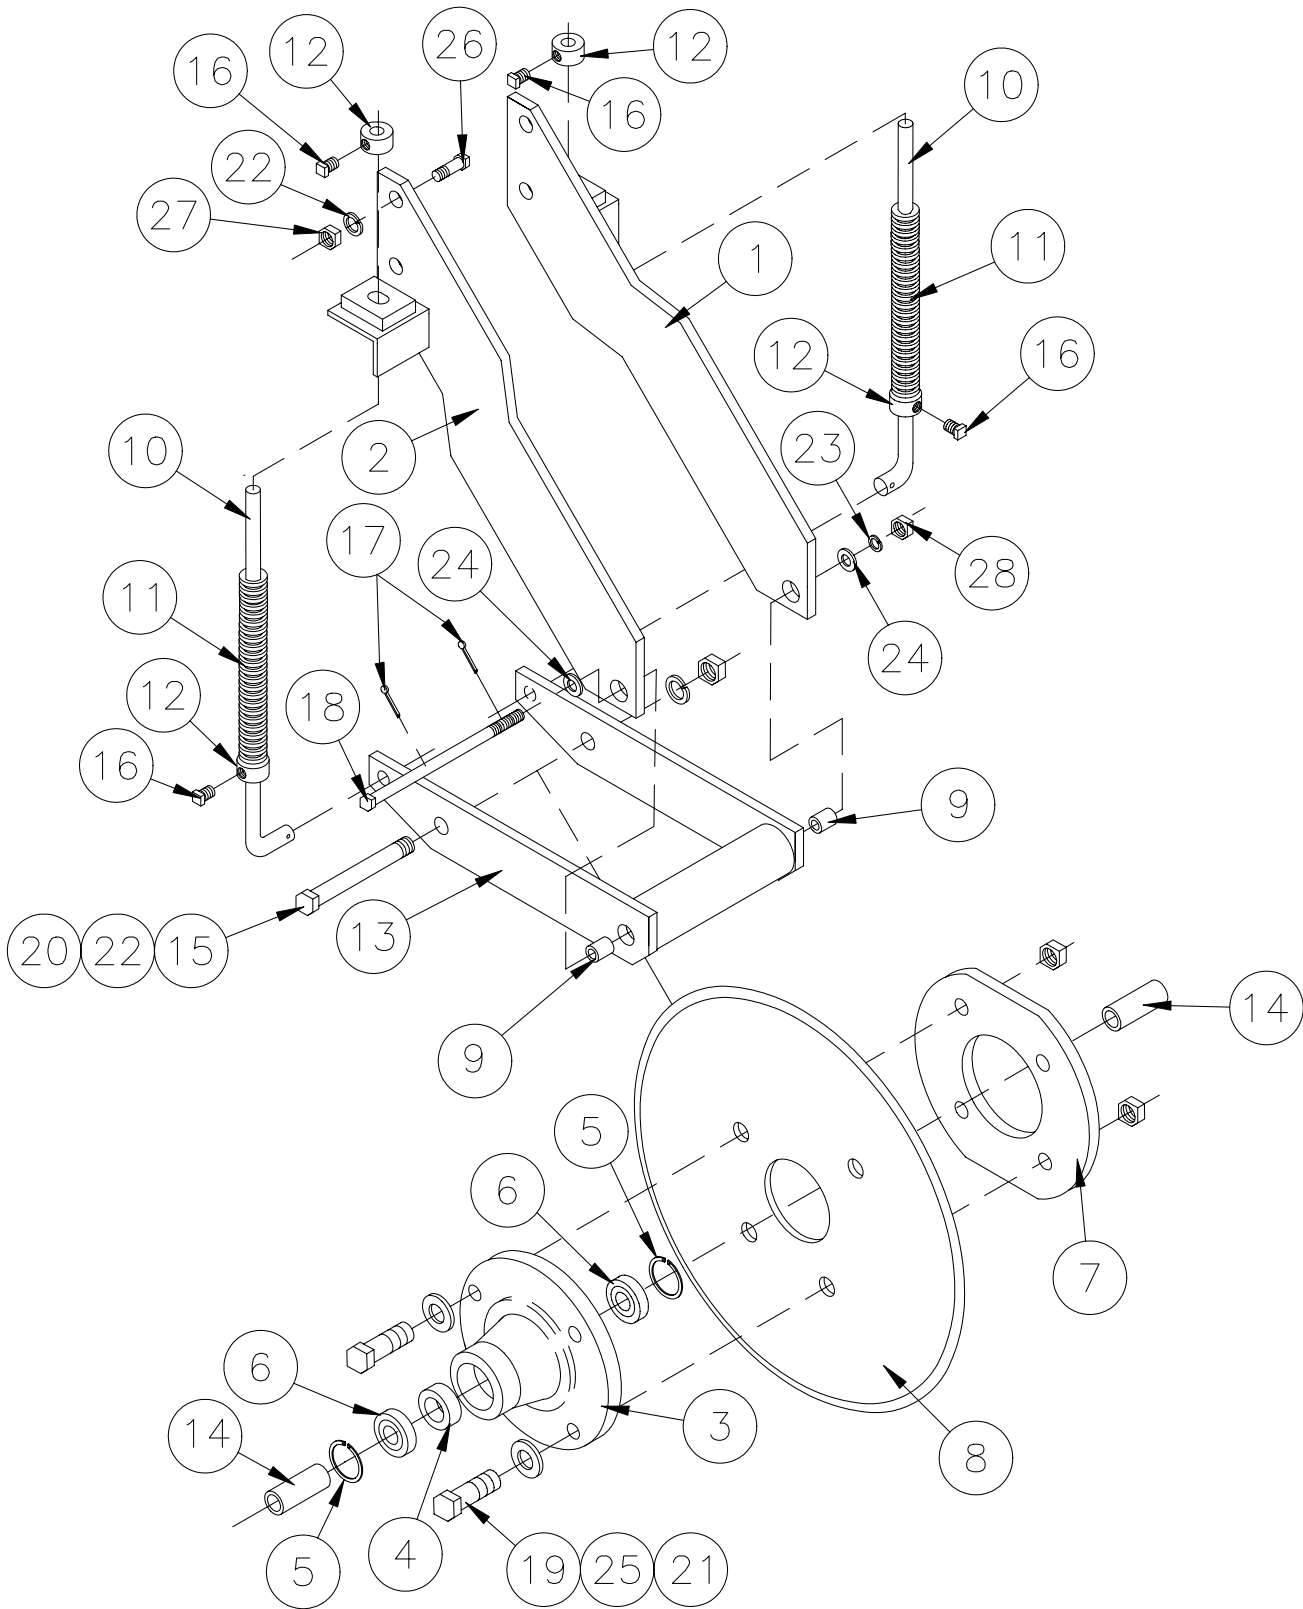

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-611		SUPPORT, LT 4R COULTER	1
2	03-080-612		SUPPORT, RT 4R COULTER	1
3	03-057-014		HUB, COULTER	1
4	04-024-069		SPACER, 3/8 BEARING	1
5	04-050-078		RING, 2 3/64 INTERNAL RETAINER	2
6	04-051-004		BEARING, 3/4 EXT. CYL (205)	2
7	03-023-064		FLANGE, COULTER	1
8	03-050-042		COUTLER, 20" DURA-FLUTE	1
9	04-024-001		BUSHING, PIVOT	2
10	03-026-115		ROD, SPRING PUSH	2
11	03-050-008		SPRING, COULTER	2
12	03-050-009		COLLAR, 11/16 ADJ	4
13	03-080-619		FORK, COULTER	1
14	03-024-236		SPACER, BEARING	2
15	48-100110		CAPSCREW, 3/4 X 1 G5 PLT	1
16	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	1
17	76-010100		COTTER PIN, 3/16 X 1 1/2	2
18	48-091268		CAPSCREW, 5/8 X 12 G5 PLT	1
19	48-060100		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
20	68-010350		HEX NUT, 3/4 PLT	1
21	72-010050		LOCKNUT, 3/8 G"B" PLT & WAXED	4
22	66-010350		LOCKWASHER, 3/4 PLT	5
23	66-010300		LOCKWASHER, 5/8 PLT	1
24	62-020040		FLATWASHER, 5/8 SAE PLT	2
25	62-010050		FLATWASHER, 5/16 PLT	4
26	48-091275		CAPSCREW, 3/4 X 2 G5 PLT	4
27	70-010150		JAM NUT, 3/4 PLN	4
28	72-020050		LOCKNUT, 5/8 G"C" PLT	1






MAST COULTER
(03-082-157)

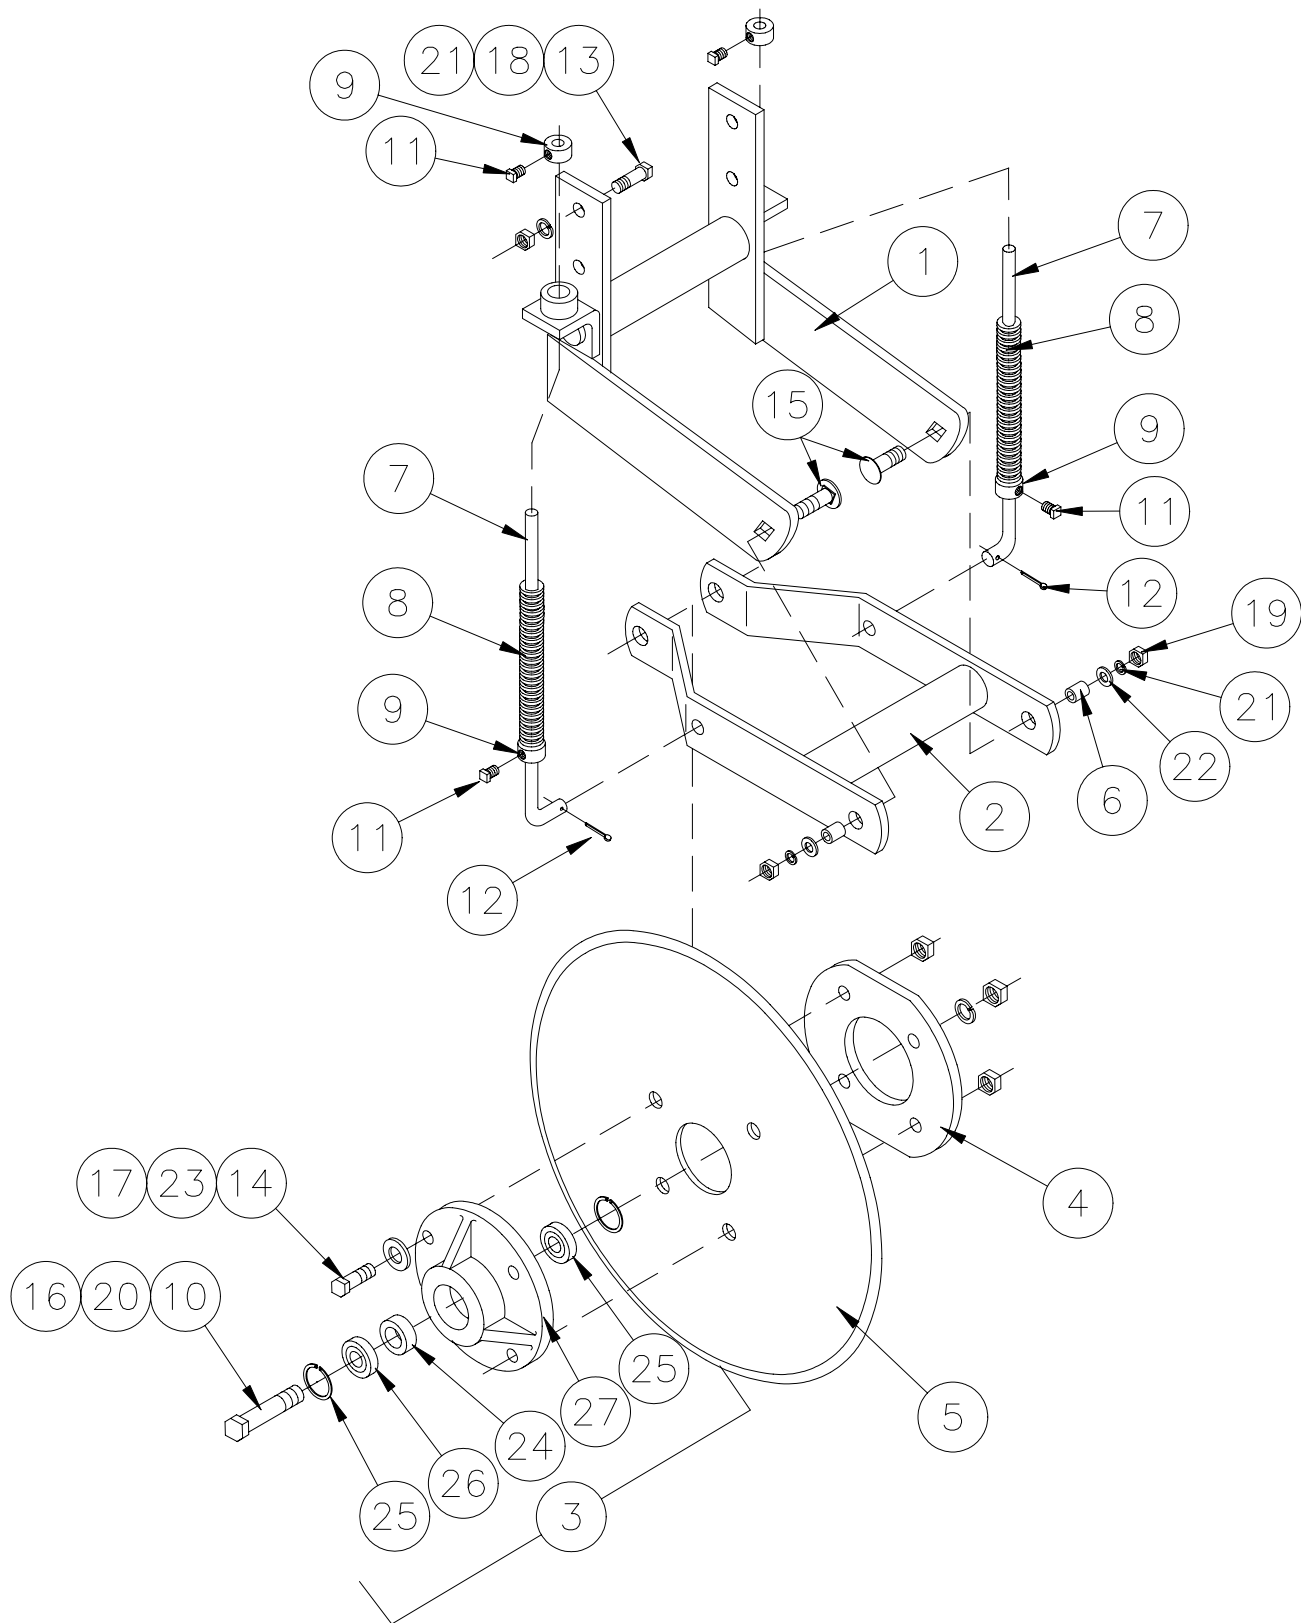

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-470		BRACKET, MAST COULTER	1
2	03-080-472		FORK, MAST COULTER	1
3	04-081-014		HUB, 1977	1
4	03-023-064		FLANGE, COULTER	1
5	03-050-042		DURA-FLUTE COULTER, 20"	1
6	04-024-001		BUSHING, PIVOT	2
7	03-026-115		ROD, SPRING PUSH	2
8	03-050-008		SPRING, COULTER	2
9	03-050-009		COLLAR, 11/16 ADJ	4
10	48-010750		CAPSCREW, 3/4 X 5 G5 PLN	1
11	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	4
12	76-010100		COTTER PIN, 3/16 X 1 1/2	2
13	48-090920		CAPSCREW, 5/8 X 1 3/4 G5 PLT	2
14	48-060100		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
15	52-030800		CARRIAGE SCREW, 5/8 X 2 PLT	2
16	68-010350		HEX NUT, 3/4 PLT	1
17	72-010050		LOCKNUT, 3/8 G"B" PLT & WAXED	4
18	70-010140		JAM NUT, 5/8 PLT	2
19	68-010300		HEX NUT, 5/8 PLT	2
20	66-010350		LOCKWASHER, 3/4 PLT	1
21	66-010300		LOCKWASHER, 5/8 PLT	4
22	62-010250		FLATWASHER, 5/8 PLT	2
23	62-010050		FLATWASHER, 5/16 PLT	4
*24	04-024-069		SPACER, 3/8 BEARING	1
*25	04-050-078		RING, 2 3.64 INTERNAL RETAINER	2
*26	04-051-004		BEARING 3/4 EXT CYL (205)	2
*27	03-057-014		HUB, COULTER	1

*These items make up item #3 (04-081-014)


2, 4-31, 4-36, 4-38 & 4-40 PLOW STANDARD

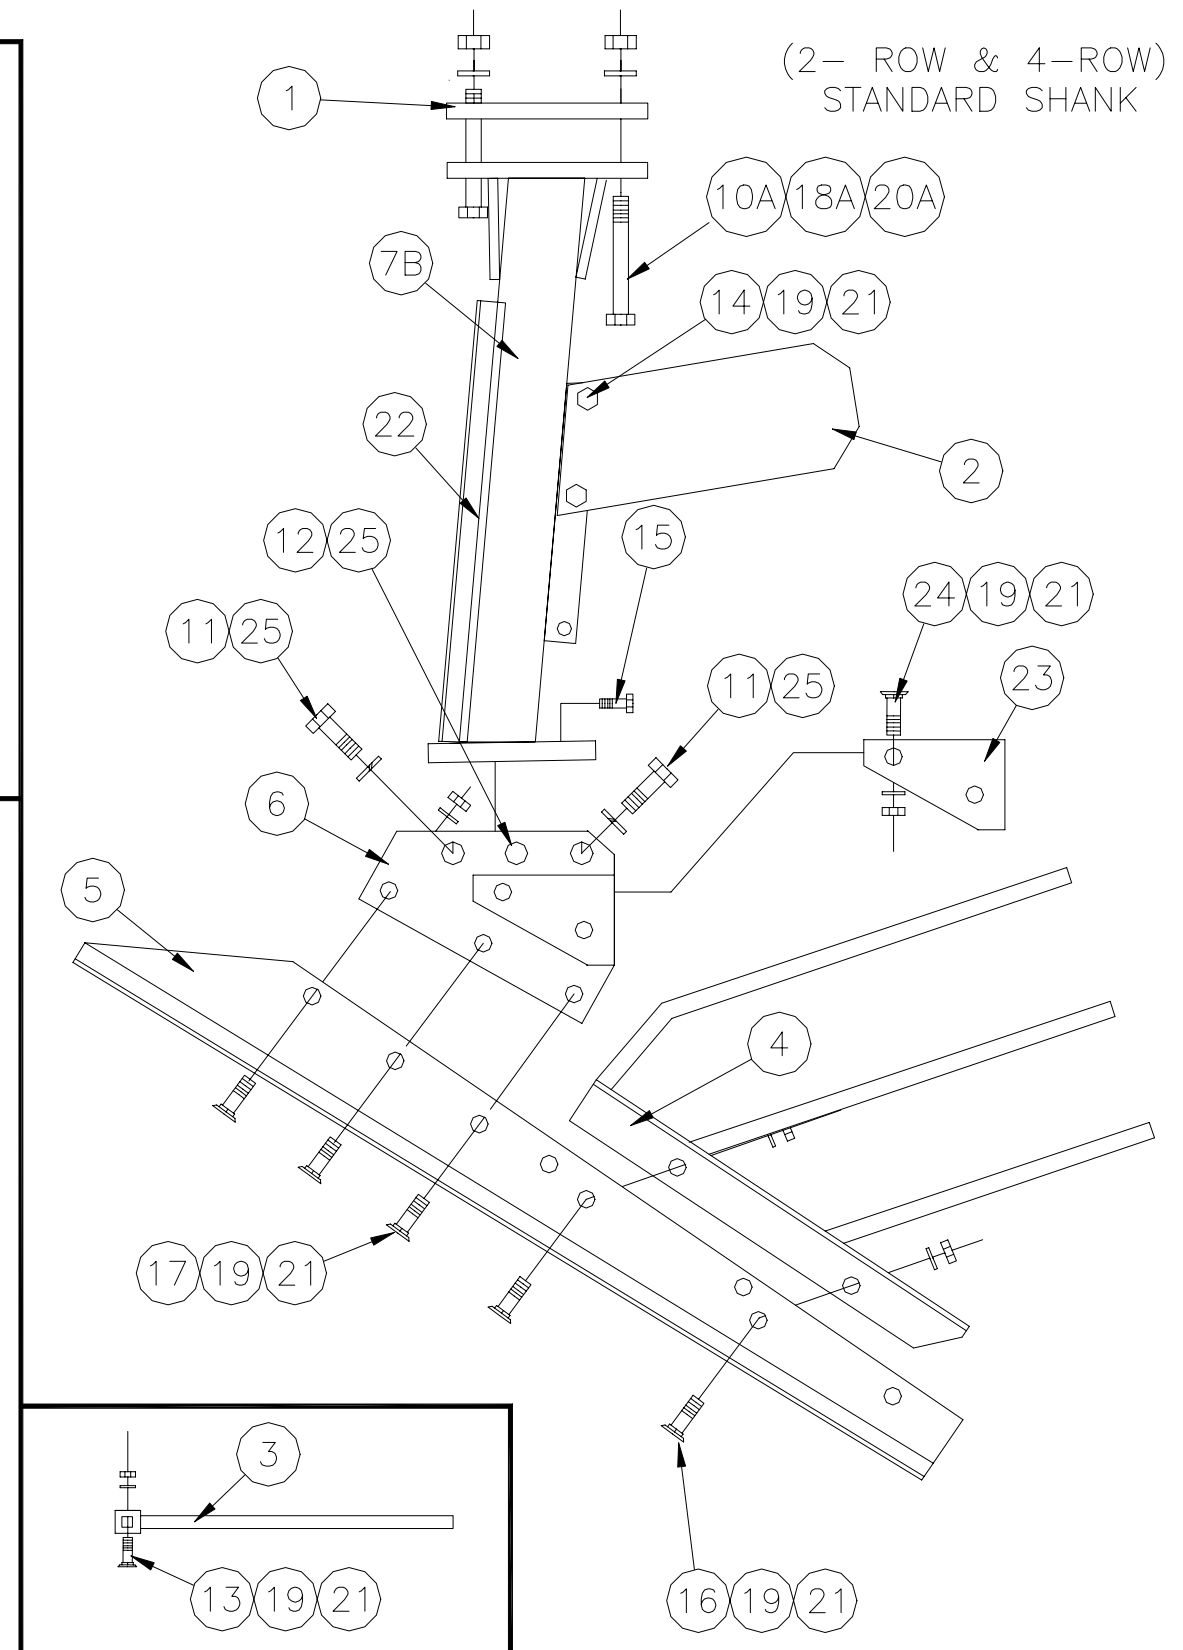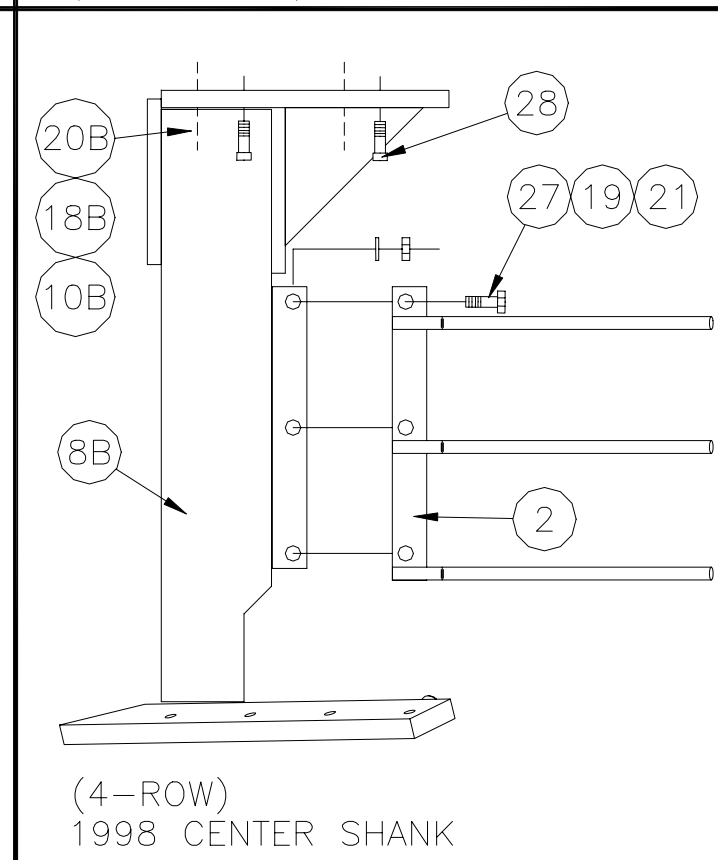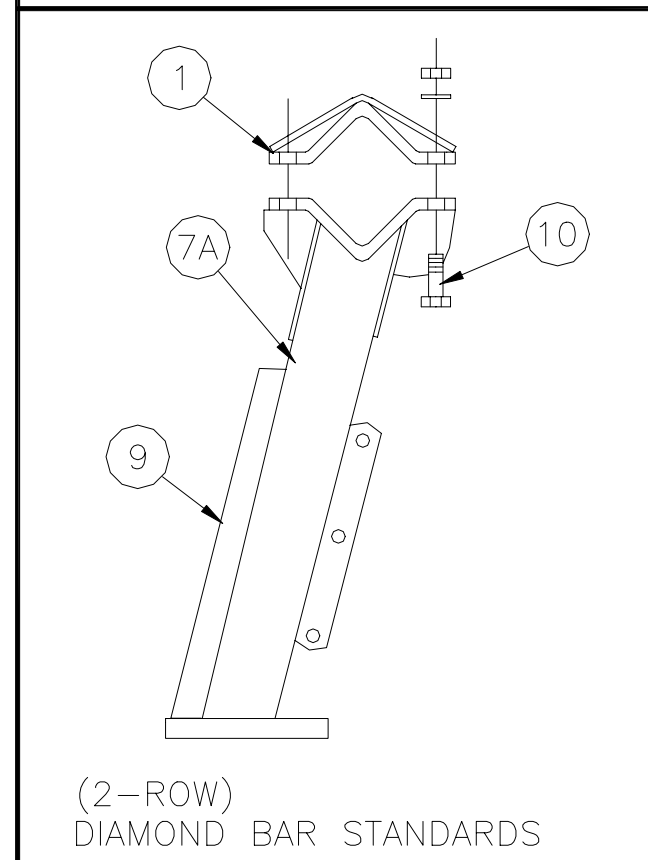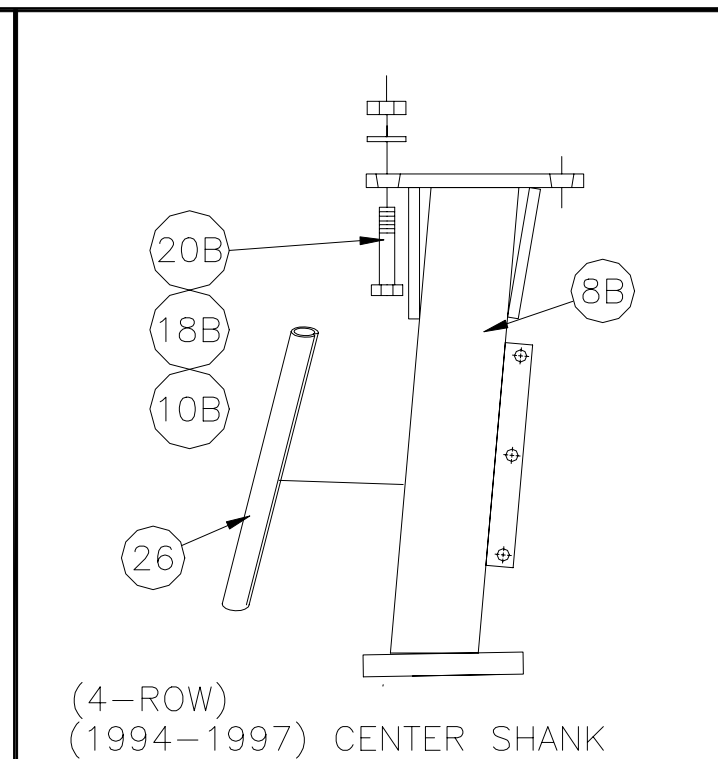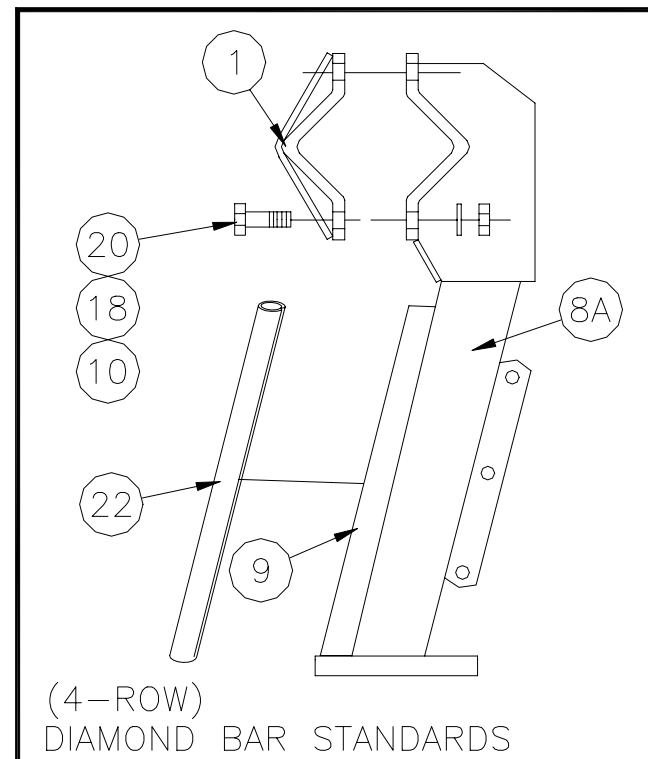

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4-31	4-36 4-38	4-40
1	03-080-560	(-1993)	PLOW STANDARD CLAMP	(2)	-	(4)	-
	03-023-672	(1994-)	CAP, SHANK	2	2	2	2
2	03-027-105		PLOW STANDARD SHIELD	2	2	2	2
	03-027-277	(-1997)	SHIELD, PLOW STD CENTER LT	-	-	(1)	-
	03-080-694	(1998-)	SUPPORT, PLOW STD CENTER LT	-	1	1	1
	03-027-278	(-1997)	SHIELD, PLOW STD CENTER RT	-	-	(1)	-
	03-080-695	(1998-)	SUPPORT, PLOW STD CENTER RT	-	1	1	1
	03-080-227	(-1982)	VINE DEFLECTOR ROD	(2)	-	(4)	-
4	03-080-014		21" CUT ROD, LT	OPT	-	OPT	-
	03-080-015		21" CUT ROD, RT	OPT	-	OPT	-
	03-080-071		26" CUT ROD, LT	1	2	2	2
	03-080-072		26" CUT ROD, RT	1	2	2	2
	03-080-220		30" CUT ROD, LT	OPT	-	OPT	-
	03-080-221		30" CUT ROD, RT	OPT	-	OPT	-
	03-080-834		ROD, 2002 LT CUT	1	1	1	1
	03-080-835		ROD, 2002 RT CUT	1	1	1	1
5	03-081-068		BLADE, 3/8" X 5" X 42" (PAIR)	1	1	1	1
	03-081-104		BLADE, CENTER (PAIR)	-	-	(1)	1
	03-081-160		BLADES, PAIR 26" CTR	-	-	1	-
	03-081-104I		BLADE, 6-31 CENTER	-	1	-	-
	03-081-160I		BLADE, 26" CENTER (31)	-	1	-	-
6	03-027-109		21" CUT FROG, LT	OPT	-	OPT	-
	03-027-110		21" CUT FROG, RT	OPT	-	OPT	-
	03-027-111	(-1990)	26" CUT FROG, LT	(1)	-	(2)	-
	03-023-533	(1991-)	26" CUT FROG, LT	1	1	1	1
	03-027-273	(-1997)	FROG, LT 4-ROW CENTER	-	-	(4)	-
	03-027-112	(-1990)	26" CUT FROG, RT	(1)	-	(2)	-
	03-023-534	(1991-)	26" CUT FROG, RT	1	1	1	1
	03-027-274	(-1997)	FROG, RT 4-ROW CENTER	-	-	(1)	-
	03-080-218		30" CUT FROG, LT	OPT	-	OPT	-
	03-080-219		30" CUT FROG, RT	OPT	-	OPT	-
7A	03-080-224	(-1993)	PLOW STANDARD	(2)	-	-	-
7B	03-080-605	(1994-)	SHANK	2	2	2	2
8A	03-080-309	(-1993)	PLOW STANDARD	-	-	(4)	-
8B	03-080-607	(1994-1997)	CENTER SHANK	-	-	(1)	-
	03-080-693	(1998-2001)	SHANK	-	1	(1)	1
	03-080-832	(2002-)	SHANK, 26" RIGID	-	-	1	-
9	03-027-106		WEAR SHIELD	(2)	-	(4)	-
10	48-090985	(1983-1993)	CAPSCREW, 5/8 X 2 3/4 G5 PLT	(8)	-	(16)	-


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4-31	4-36 4-38	4-40
10A	48-100075	(1994-)	CAPSCREW, 3/4 X 7 1/2 G5 PLT	8	8	8	8
10B	48-091550	(1994-)	CAPSCREW, 7/8 X 2 1/2 G5 PLT	-	4	4	4
11	48-090930		CAPSCREW, 5/8 X 1 1/2 G5 PLT	4	4	4	4
12	48-090910		CAPSCREW, 5/8 X 1 1/4 G5 PLT	2	6	6	6
13	52-030250	(-1982)	CARRIAGE SCREW, 3/8 X 1 PLT	(2)	-	(4)	-
14	52-030300	(-1984)	CARRIAGE SCREW, 3/8 X 3/4 PLT	(4)	-	(8)	-
	48-090090	(1985-)	CAPSCREW, 3/8 X 3/4 PLT	4	6	8	6
15	48-090590		CAPSCREW, 1/2 X 1 G5 PLT	4	4	8	4
16	60-010050	(-1982)	PLOW BOLT, 3/8 X 1 G2	(4)	-	(8)	-
	60-020050	(1983-)	PLOW BOLT, 3/8 X 1 1/4 G5	4	8	8	8
17	14-050-030		PLOW BOLT, 3/8 X 1 1/2 G8 PLT	6	14	14	14
18	66-010300	(1983-1993)	LOCKWASHER, 5/8 PLT	(8)	-	(16)	-
18A	66-010350	(1994-)	LOCKWASHER, 3/4 PLT	8	8	8	8
18B	66-010400		LOCKWASHER, 7/8 PLT	-	4	4	4
19	66-010150		LOCKWASHER, 3/8 PLT	18	40	40	40
20	68-010300	(1983-1993)	HEX NUT, 5/8 PLT	(8)	(16)	-	-
20A	68-010350	(1994-)	HEX NUT, 3/4 PLT	8	8	8	8
20B	68-010400		HEX NUT, 7/8 PLT	-	4	4	4
21	68-010150		HEX NUT, 3/8 PLT	18	40	40	40
22	03-024-211		PLASTIC SHIN GUARD	2	2	2	2
23	03-027-258		26" FROG SLIDE	2	2	2	2
	03-027-259		30" FROG SLIDE	2	-	2	-
	03-027-275	(-1997)	SLIDE, 4-ROW CENTER	-	-	(2)	-
24	60-020060		PLOW BOLT, 3/8 X 1 1/2 G5 PLT	4	4	4	4
25	66-010595		WASHER, 5/8 EXT TOOTH	6		6	
26	03-024-253		GUARD, CENTER 4ROW	-	1	1	1
27	48-060050		CAPSCREW, 3/8 X 1 1/4 G5 PLN	-	2	-	-
28	54-010275		SETSCREW, 5/8 X 1 SQ HD CUPPT	-	4	4	4

AUST. CENTER TRIP SHANK
(03-081-131)

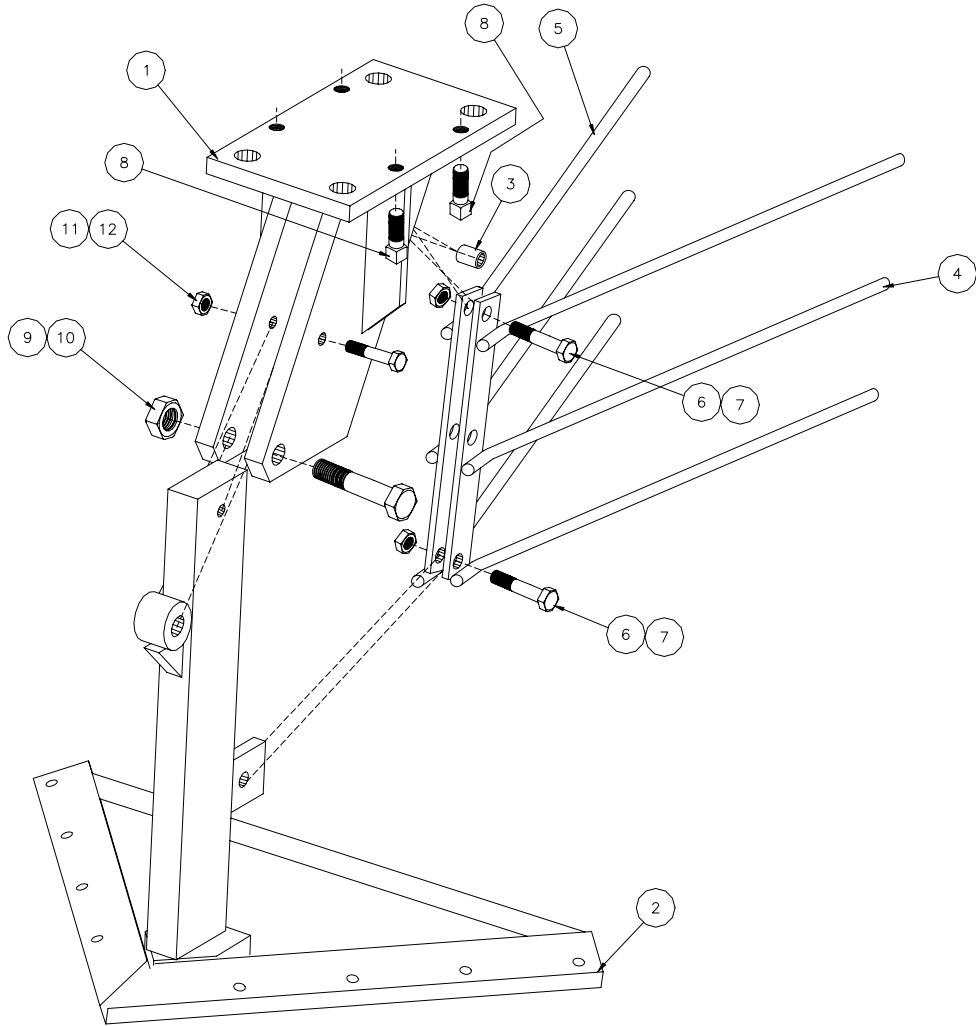


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-131	-162
1	03-080-709		MOUNT, '97 TRIP SHANK	1	1
2	03-080-710		SHANK, '97 CTR TRIP	1	-
	03-080-833		SHANK, 26" TRIP	-	1
3	03-024-301		ROLLER, TRIP SHANK	1	1
4	03-080-694		SUPPORT, PLOW STD CENTER LT	1	1
5	03-080-695		SUPPORT, PLOW STD CENTER RT	1	1
6	48-090185		CAPSCREW, 3/8 X 1 3/4 G5 PLT	2	2
7	72-010050		LOCKNUT, 3/8 PLT	2	2
8	54-010275		SETSCREW, 5/8 X 1 SQ HD CUPPT	4	4
9	48-091450		CAPSCREW, 3/4 X 4 1/2 G5 PLT	1	1
10	72-010150		LOCKNUT, 3/4 PLT	1	1
11	48-090550		CAPSCREW, 7/16 X 3 1/2 G5 PLT	1	1
12	72-010075		LOCKNUT, 7/16 PLT	1	1

26" RIGID V-SHANK
(03-082-161)

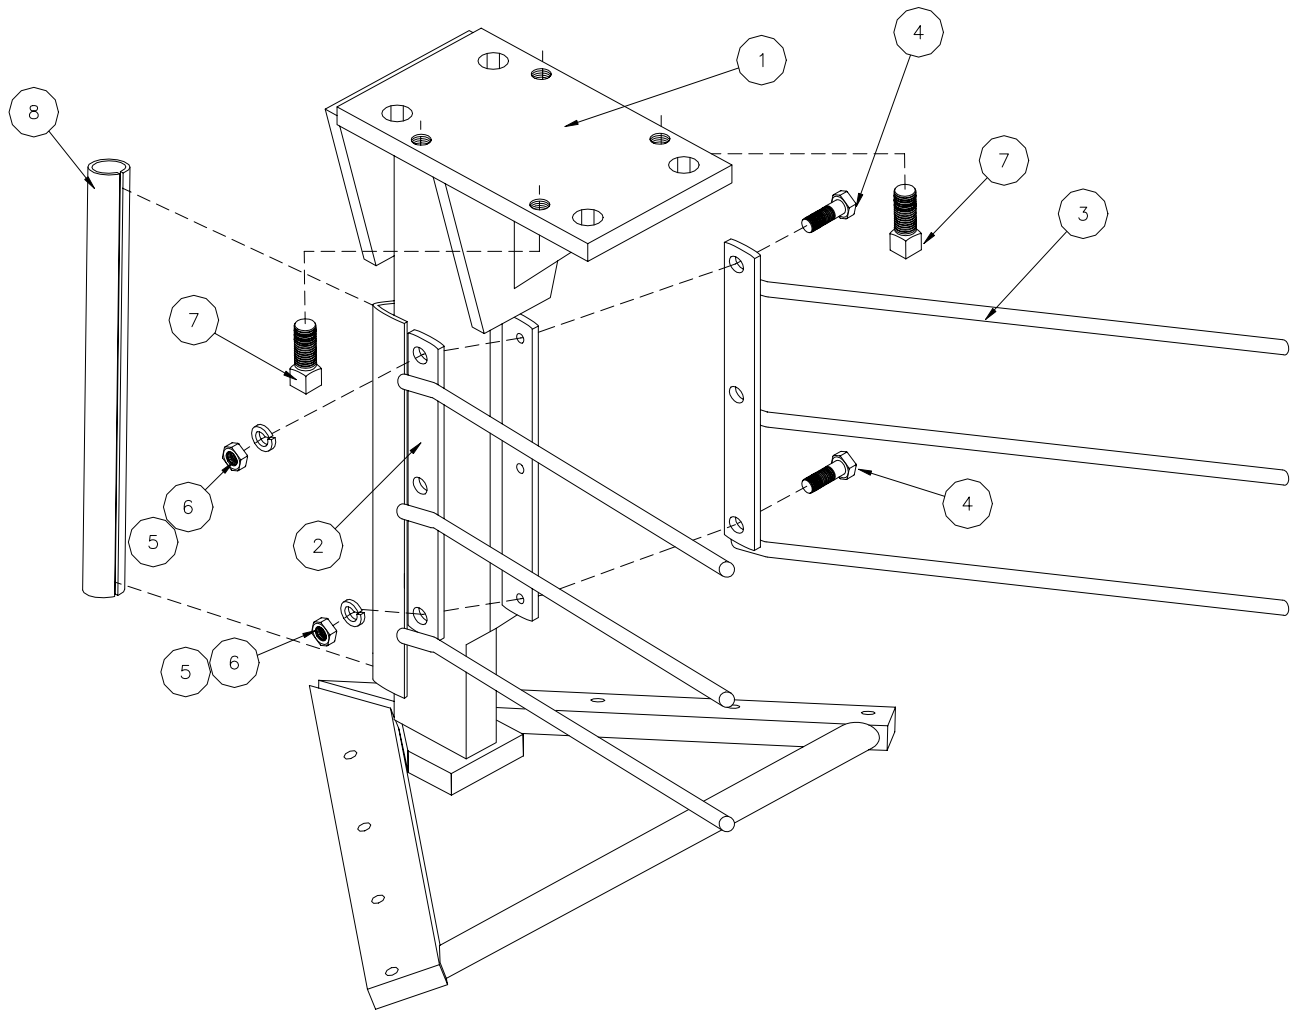

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-832		WELDMENT, RIGID SHANK	1
2	03-080-694		SUPPORT, PLOW STD. CENTER LT	1
3	03-080-695		SUPPORT, PLOW STD. CENTER RT	1
4	48-060050		CAPSCREW, 3/8 X 1 1/4 G5 PLT	2
5	66-010150		LOCKWASHER, 3/8 PLT	2
6	68-010150		HEX NUT, 3/8 PLT	2
7	54-010275		SETSCREW, 5/8 X 1 SQ HD CUPPT	2
8	03-024-253		GUARD, CENTER 4-R	1



**LT & RT CYLINDER INVERTER COMPONENTS
(2 & 4-36 ROW OUTSIDES) & (4-40 ROW OUTSIDES) (4-40 LT & RT INSIDES)**

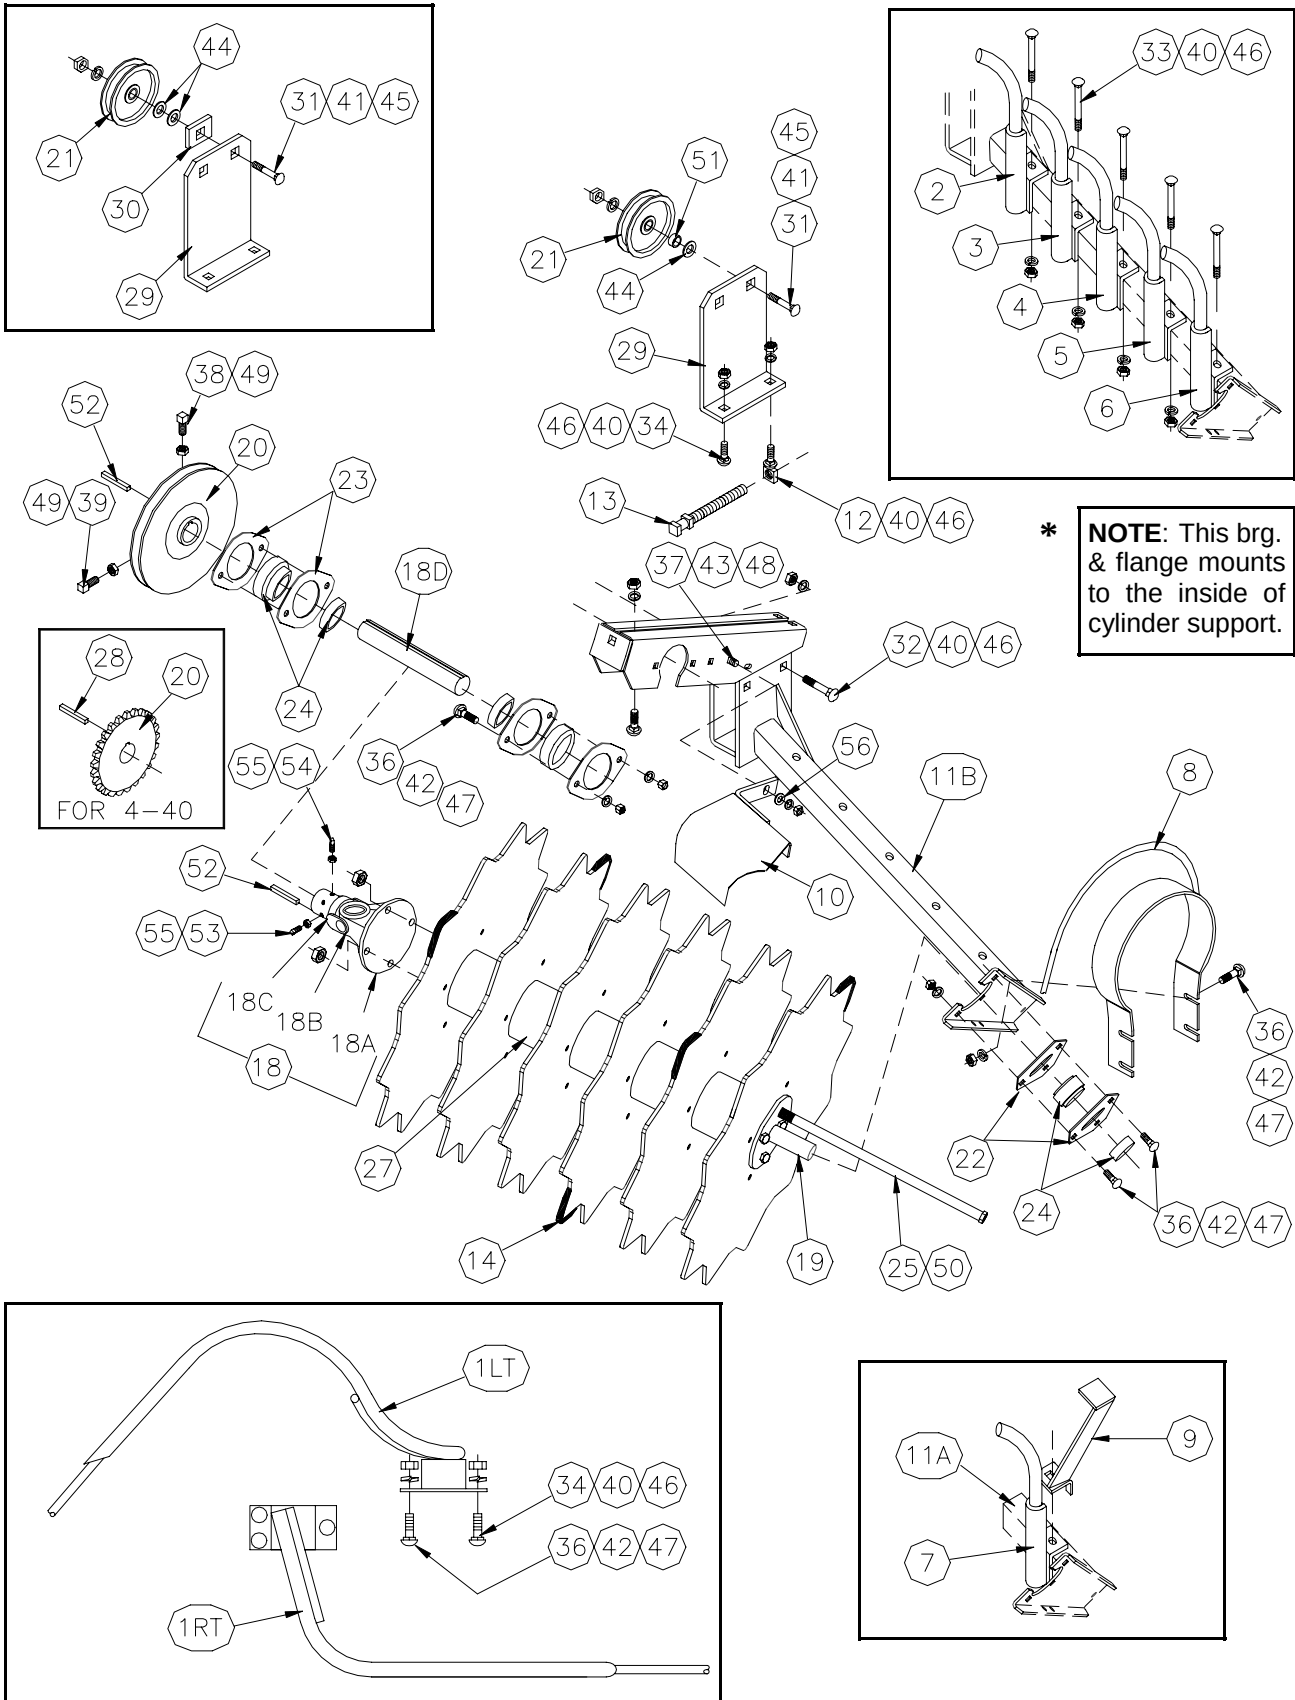

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R & 4-40		4-40 INSIDE	
					LT	RT	LT	RT
1	03-080-269	(-1991)	#1 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-270	(-1991)	#1 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-579	(1992-)	#1.92 VINE GUIDE, LT	1	1	-	1	-
	03-080-580	(1992-)	#1.92 VINE GUIDE, RT	1	-	1	-	1
2	03-080-290	(-1990)	#2 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-291	(-1990)	#2 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-565	(1991-)	#2.91 VINE GUIDE, LT	1	1	-	1	-
	03-080-566	(1991-)	#2.91 VINE GUIDE, RT	1	-	1	-	1
3	03-080-292	(-1990)	#3 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-293	(-1990)	#3 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-567	(1991-)	#3.91 VINE GUIDE, LT	1	1	-	1	-
	03-080-568	(1991-)	#3.91 VINE GUIDE, RT	1	-	1	-	1
4	03-080-294	(-1990)	#4 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-295	(-1990)	#4 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-569	(1991-)	#4.91 VINE GUIDE, LT	1	1	-	1	-
	03-080-570	(1991-)	#4.91 VINE GUIDE, RT	1	-	1	-	1
5	03-080-296	(-1983)	#5 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-297	(-1983)	#5 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-513	(1984-1990)	#5.84 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-514	(1984-1990)	#5.84 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-571	(1991-)	#5.91 VINE GUIDE, LT	1	1	-	1	-
	03-080-572	(1991-)	#5.91 VINE GUIDE, RT	1	-	1	-	1
6	03-080-357	(-1983)	#6 VINE GUIDE, LT	(1)	(1)	-	-	-
	03-080-358	(-1983)	#6 VINE GUIDE, RT	(1)	-	(1)	-	-
	03-080-538	(1984-)	#6.85 VINE GUIDE, LT	1	1	-	1	-
	03-080-539	(1994-)	#6.85 VINE GUIDE, RT	1	-	1	-	1
7	03-080-299	(1993)	#7 VINE GUIDE ROD	(1)	(1)	(1)	-	-
8	03-080-300		BEARING COVER, & G. ROD, LT	1	1	-	1	-
	03-080-301		BEARING COVER, & G. ROD, RT	1	-	1	-	1
9	03-080-413	(-1983)	SCRAPER, LT	(6)	(6)	-	-	-
	03-080-414	(-1983)	SCRAPER, RT	(6)	-	(6)	-	-
10	03-080-247		"U"-JOINT SHIELD, LT	1	1	-	1	-
	03-080-248		"U"-JOINT SHIELD, RT	1	-	1	-	1
11A	03-080-267	(-1983)	CYLINDER SUPPORT, LT	(1)	(1)	-	-	-
	03-080-268	(-1983)	CYLINDER SUPPORT, RT	(1)	-	(1)	-	-
^11B	03-080-511	(1984-)	CYLINDER SUPPORT, '84 LT	1	1	-	1	-
	03-080-512	(1984-)	CYLINDER SUPPORT, '84 RT	1	-	1	-	1
*12	03-080-250		IDLER PUSH BOLT	2	1	1	-	-
*13	03-080-308		IDLER PUSH BOLT	2	1	1	-	-
14	03-080-359		"A" DISC	6	6	6	6	6
15	03-080-409	(-1990)	"B" DISC	(4)	(2)	(2)	-	-
16	03-080-410	(-1990)	"C" DISC	(4)	(2)	(2)	-	-
17	03-080-411	(-1990)	"D" DISC	(2)	(1)	(1)	-	-
18	03-055-064	(-1991)	SINGLE "U" JOINT	(2)	(1)	(1)	-	-
**	03-055-133	(1992-)	"U" JOINT SINGLE-35R	2	1	1	1	1
18A	03-055-018	(-1991)	FLANGE YOKE	(1)	(1)	(1)	-	-
	03-055-134	(1992-)	PLATE YOKE	1	1	1	1	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R & 4-40		4-40 INSIDE	
					LT	RT	LT	RT
18B	03-055-003	(-1991)	CROSS & BRG KIT	(1)	(1)	(1)	-	-
	03-055-135	(1992-)	KIT, 35R CROSS & BRG	1	1	1	1	1
18C	03-055-065	(-1991)	FITTING YOKE	(1)	(1)	(1)	-	-
	03-055-136	(1992-)	YOKE, 1 3/16	1	1	1	1	1
^18D	03-026-086		CYLINDER DRIVE SHAFT	1	1	1	1	1
19	03-080-412		'78 LOWER CYLINDER SHAFT	2	1	1	1	1
^20	03-053-029		SHEAVE, (1C-12.375, F-1.88 PS)	2	1	1	1	1
	03-080-600		SPROCKET, 60B25-1.188 (4-40)	-	-	-	1	1
*21	03-053-023		IDLER BEARING, 1 X 5 (.625)	2	1	1	-	-
22	03-051-003	(-1982)	BRG FLANGE 3H #62 M.S.	(4)	(2)	(2)	-	-
	03-051-020	(1983-)	BRG FLANGE 3H #62 MSTR	4	2	2	2	2
^23	03-051-022		BRG FLANGE 2H #62 M.S.	6	4	4	4	4
^24	03-051-002		1 3/16 BRG & COLLAR	6	3	3	3	3
*25	03-050-011		CAPSCREW, 3/8 X 25 G5 PLT	8	4	4	4	4
*26	03-050-077	(-1990)	ZIPNUT, 3/8 NC PLN	(8)	(4)	(4)	-	-
27	03-027-217	(-1983)	CYLINDER SPACE 78, 3 29/32	(12)	(6)	(6)	-	-
	03-024-198	(1984-)	INVERTER DISC SPACER, 4 45/64	10	5	5	5	5
28	03-026-042		KEY, 1/4 X 1 9/16 (4-40)	-	-	-	1	1
*29	03-023-251		IDLER BRACKET	2	1	1	-	-
30	03-023-018	(-1984)	IDLER WASHER	(2)	(1)	(1)	-	-
*31	52-030850		CARRIAGE BOLT, 5/8 X 2 1/2 PLT	2	1	1	-	-
32	52-050275		CARRIAGE BOLT, 1/2 X 3 1/2 PLT	4	2	2	2	2
33	52-050260		CARRIAGE BOLT, 1/2 X 3 1/4 PLT	10	5	5	5	5
*34	52-050123		CARRIAGE BOLT, 1/2 X 1 PLT	4	2	2	1	1
*35	52-010200		CARRIAGE BOLT, 1/2 X 1 PLN	(2)	(1)	(1)	-	-
^36	52-050035		CARRIAGE BOLT, 3/8 X 1 PLT	26	13	13	11	11
37	52-030150		CARRIAGE BOLT, 5/16 X 1 PLT	4	2	2	2	2
^38	54-010100		SETSCREW, 3/8 X 3/4	2	1	1	1	1
^39	54-010150		SETSCREW, 3/8 X 7/8	2	1	1	1	1
*40	66-010250		LOCKWASHER, 1/2 PLT	22	11	11	8	8
*41	66-010300		LOCKWASHER, 5/8 PLT	2	1	1	-	-
^42	66-010150		LOCKWASHER, 3/8 PLT	26	13	13	11	11
43	66-010100		LOCKWASHER, 5/16 PLT	4	2	2	2	2
*44	62-010250		FLATWASHER, 5/8 PLT	2	1	1	-	-
*45	68-010300		HEX NUT, 5/8 PLT	2	1	1	-	-
*46	68-010250		HEX NUT, 1/2 PLT	22	11	11	8	8
^47	68-010150		HEX NUT, 3/8 PLT	26	13	13	11	11
48	68-010100		HEX NUT, 5/16 PLT	4	2	2	2	2
^49	70-010050		JAM NUT, 3/8 PLT	2	2	2	2	2
^50	72-010050		LOCKNUT, 3/8 G"B" PLT	8	4	4	4	4
*51	03-050-087		INVERTER BELT SPACER	2	1	1	-	-
^52	03-026-138		KEY, 1/4 X 1 1/4	(2)	(1)	(1)	1	1
	03-026-016		KEY, 1/4 X 2	2	2	2	1	1
53	54-010180		SETSCREW, 7/16 X 7/8 SQ HD	2	1	1	1	1
54	54-010190		SETSCREW, 7/16 X 1 SQ HD	2	1	1	2	2
55	70-010071		JAM NUT, 7/16	4	2	2	3	3
56	62-010050		FLATWASHER, 5/16	2	1	1	2	2
57	78-020300		FLANGENUT, 3/8 WHIZ	4	4	4	4	4


4-ROW CENTER INVERTER BUNDLE
(4-36 & 4-38 ONLY)

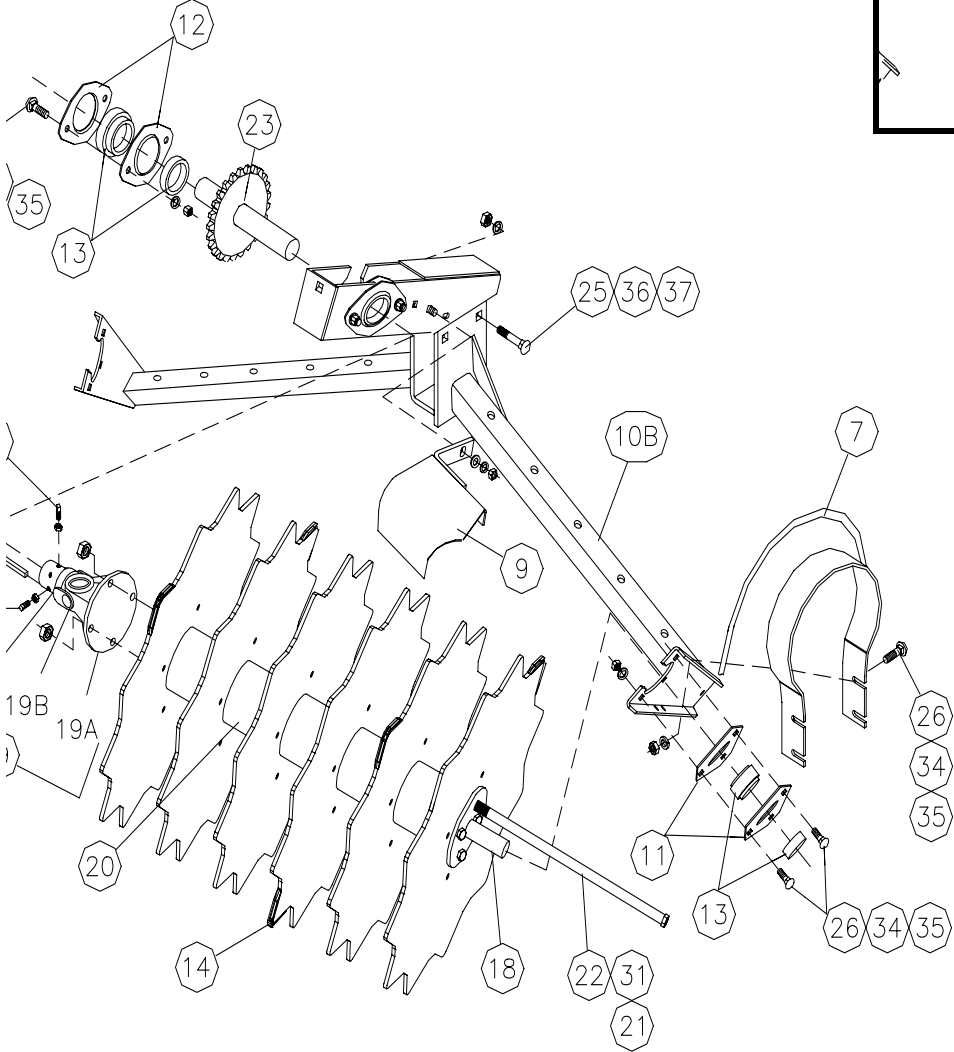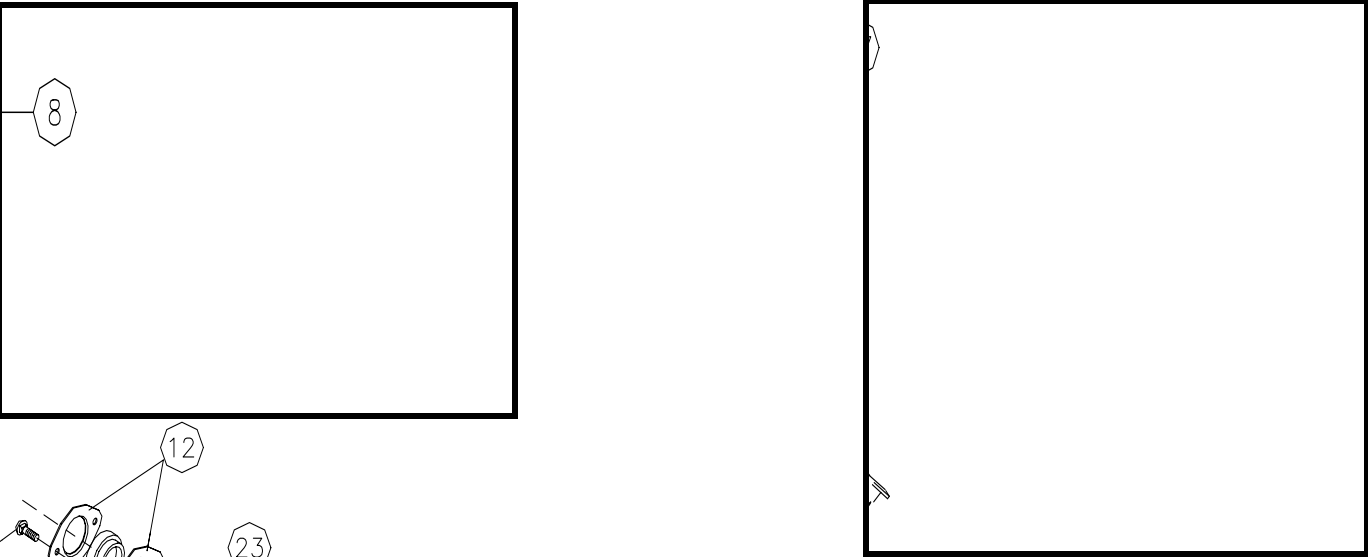

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-290	(-1990)	#2 VINE GUIDE, LT	(1)
	03-080-565	(1991-)	#2.91 VINE GUIDE, LT	1
	03-080-291	(-1990)	#2 VINE GUIDE, RT	(1)
	03-080-566	(1991-)	#2.91 VINE GUIDE, RT	1
	03-080-292	(-1990)	#3 VINE GUIDE, LT	(1)
	03-080-567	(1991-)	#3.91 VINE GUIDE, LT	1
	03-080-293	(-1990)	#3 VINE GUIDE, RT	(1)
	03-080-568	(1991-)	#3.91 VINE GUIDE, RT	1
3	03-080-294	(-1990)	#4 VINE GUIDE, LT	(1)
	03-080-569	(1991-)	#4.91 VINE GUIDE, LT	1
	03-080-295	(-1990)	#4 VINE GUIDE, RT	(1)
	03-080-570	(1991-)	#4.91 VINE GUIDE, RT	1
4	03-080-296	(-1983)	#5 VINE GUIDE, LT	(1)
	03-080-513	(1984-1990)	#5.84 VINE GUIDE, LT	(1)
	03-080-571	(1991-)	#5.91 VINE GUIDE, LT	1
	03-080-297	(-1983)	#5 VINE GUIDE, RT	(1)
	03-080-514	(1984-1990)	#5.84 VINE GUIDE, RT	(1)
	03-080-572	(1991-)	#5.91 VINE GUIDE, RT	1
5	03-080-357	(-1983)	#6 VINE GUIDE, LT	(1)
	03-080-358	(-1983)	#6 VINE GUIDE, RT	(1)
	03-080-538	(1984-)	#6.85 VINE GUIDE, LT	1
	03-080-539	(1984-)	#6.85 VINE GUIDE, RT	1
6	03-080-299	(1993)	#7 VINE GUIDE ROD	(1)
7	03-080-300		BEARING COVER & G ROD LT	1
	03-080-301		BEARING COVER & G ROD RT	1
8	03-080-413	(-1983)	SCRAPER, LT	(1)
	03-080-414	(-1983)	SCRAPER, RT	(1)
9	03-080-247		U-JOINT SHIELD, LT	1
	03-080-248		U-JOINT SHIELD, RT	1
10A	03-080-471	(-1983)	CYLINDER SUPPORT, 4R CENTER	(1)
10B	03-080-517	(1984-)	CYLINDER SUPPORT, 84 CENTER	1
11	03-051-003	(-1982)	BEARING FLANGE, 3H #62 M.S.	(4)
	03-051-020	(1983-)	BEARING FLANGE, 3H #62 MSTR	4
12	03-051-022		BEARING FLANGE, 2H #62 M.S.	4
13	03-051-002		BEARING & COLLAR, 1 3/16	4
14	03-080-359		“A” DISC	12
15	03-080-409	(-1990)	“B” DISC	-

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
16	03-080-410	(-1990)	“C” DISC	-
17	03-080-411	(-1990)	“D” DISC	-
18	03-080-412		CYLINDER SHAFT, ‘78 LOWER	2
19	03-055-064		“U”-JOINT, 4R SINGLE	2
*	03-055-133	(1992-)	“U” JOINT, 35R SINGLE	2
19A	03-055-018	(-1991)	FLANGE YOKE	(1)
	03-055-134	(1992-)	PLATE, YOKE	1
19B	03-055-003	(-1991)	CROSS & BEARING KIT	(1)
	03-055-135	(1992-)	CROSS & BEARING KIT 35R	1
19C	03-055-065	(-1991)	FITTING YOKE	(1)
	03-055-136	(1992-)	YOKE, 1 3/16	1
20	03-027-217	(-1983)	CYLINDER SPACER, ‘78 3-29/32	(12)
	03-024-198	(1984-)	INVERTER DISC SPACER	10
21	03-050-077		ZIP NUT, 3/8 NC	8
22	03-050-011		CAPSCREW, 3/8 X 25 G5 PLT	8
23	03-080-573		INVERTER DRIVE, ‘91 CENTER	1
24	52-050260		CARRIAGE BOLT, 1/2 X 3 1/4 G5 PLT	10
25	48-090900		CAPSCREW, 1/2 X 5 1/2 G5 PLT	2
26	52-030250		CARRIAGE BOLT, 3/8 X 1 PLT	18
27	52-030150		CARRIAGE BOLT, 5/16 X 1 PLT	4
28	54-010180		SETSCREW, 7/16 X 7/8 G5 PLN	2
29	70-010071		JAM NUT, 7/16	6
30	03-026-138	(-1991)	KEY, 1/4 X 1 1/4	(2)
	03-026-016	(1992-)	KEY, 1/4 X 2	2
31	72-010050		LOCKNUT, 3/8 G”B” PLT	8
32	66-010100		LOCKWASHER, 5/16 PLT	4
33	68-010100		HEX NUT, 5/16 PLT	4
34	66-010150		LOCKWASHER, 3/8 PLT	18
35	68-010150		HEX NUT, 3/8 PLT	18
36	66-010250		LOCKWASHER, 1/2 PLT	12
37	68-010250		HEX NUT, 1/2 PLT	12
38	54-010190		SETSCREW, 7/16 X 1 SQ HD	4
39	62-010050		FLATWASHER, 5/16 PLT	2

*This item can be used to replace 03-055-064 prior to 1992

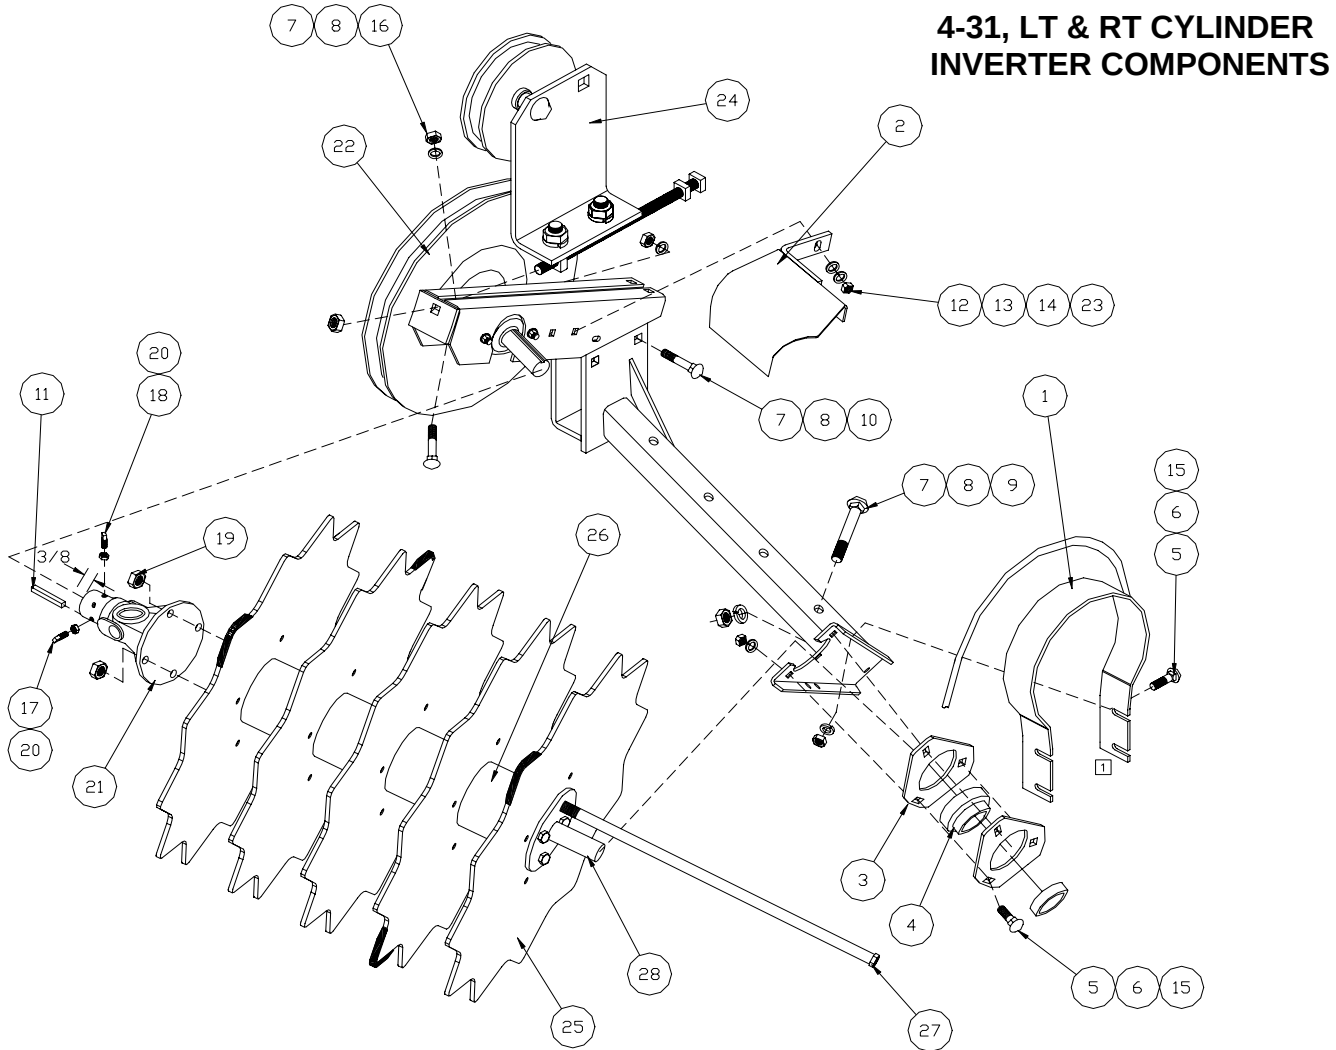


4-31, LT & RT CYLINDER
INVERTER COMPONENTS

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	LT	RT
1	03-080-300		ROD , LT LOWER BEARING	1	-
	03-080-301		ROD , RT LOWER BEARING	-	1
2	03-080-247		SHIELD, LT U-JOINT	1	-
	03-080-248		SHIELD, RT U -JOINT	-	1
3	03-051-020		FLANGE, 3H 62 MSTR	2	2
4	03-051-002		BEARING, 1 3/16 W/COLLAR	1	1
5	68-010150		HEX NUT, 3/8 PLT	7	7
6	66-010150		LOCKWASHER, 3/8 PLT	7	7
7	68-010250		HEX NUT, 1/2 PLT	7	7
8	66-010250		LOCKWASHER, 1/2 PLT	7	7
9	52-050260		CARRIAGE SCREW, 1/2 X 3 1/4	4	4
10	52-050275		CARRIAGE SCREW, 1/2 X 3 1/2	2	2
11	03-026-016		KEY, 1/4 X 1/4 X 2	1	1
12	52-050010		CARRIAGE SCREW, 5/16 X 1	2	2
13	66-010100		LOCKWASHER, 5/16 REG	2	2
14	68-010100		HEX NUT, 5/16 PLT	2	2
15	52-050035		CARRIAGE SCREW, 3/8 X 1	7	7
16	52-050123		CARRIAGE SCREW, 1/2 X 1	1	1
17	54-010180		SETSCREW, 7/16 X 7/8 SQ HD	1	1
18	54-010190		SETSCREW, 7/16 X 1 SQ HD	2	2


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	LT	RT
19	72-010050		LOCKNUT, 3/8 PLT	4	4
20	70-010071		JAM NUT, 7/16	3	3
21	03-055-133		U-JOINT, SINGLE 35R	1	1
22	03-081-122		INVERTER, 6-31 LT	1	-
	03-081-123		INVERTER, 6-31 RT	-	1
23	62-010050		FLATWASHER, 5/16 STD	2	2
24	03-081-052		BELT, LT INVERTER	1	-
	03-081-053		BELT, RT INVERTER	-	1
25	03-080-359		CYLINDER, "A" DISC	5	5
26	03-024-198		SPACER, `84 INVERTER	6	6
27	03-050-011		CAPSCREW, 3/8 X 25 G5	5	5
28	03-080-412		SHAFT, LOWER CYLINDER	1	1
29	62-010050		FLATWASHER, 5/16	2	2

4-31, LT & RT INVERTER (ITEM 22)

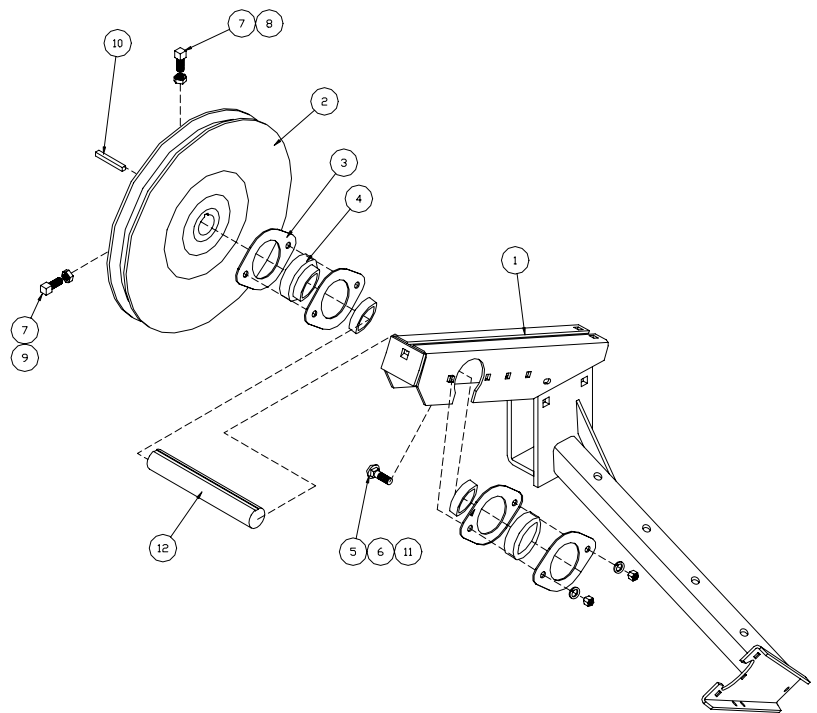

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-688		SUPPORT, 6-31 CTR. CYL.	1
2	03-053-029		SHEAVE	1
3	03-051-022		FLANGE, 62 MSTR 2-HOLE	4
4	03-051-002		BEARING, 1 3/16 W/COLLAR	2
5	68-010150		HEX NUT, 3/8 PLT	4
6	66-010150		LOCKWASHERS, 3/8 PLT	4
7	70-010050		JAM NUT, 3/8	2
8	54-010100		SETSCREW, 3/8 X 3/4 SQ HD	1
9	54-010150		SETSCREW, 3/8 X 7/8 SQ HD	1
10	03-026-016		KEY, 1/4 X 1/4 X 2	1
11	52-030250		CARRIAGE SCREW, 3/8 X 1	4
12	03-026-086		SHAFT, CYLINDER DRIVE	1


4-31, CENTER CYLINDER INVERTER COMPONENTS

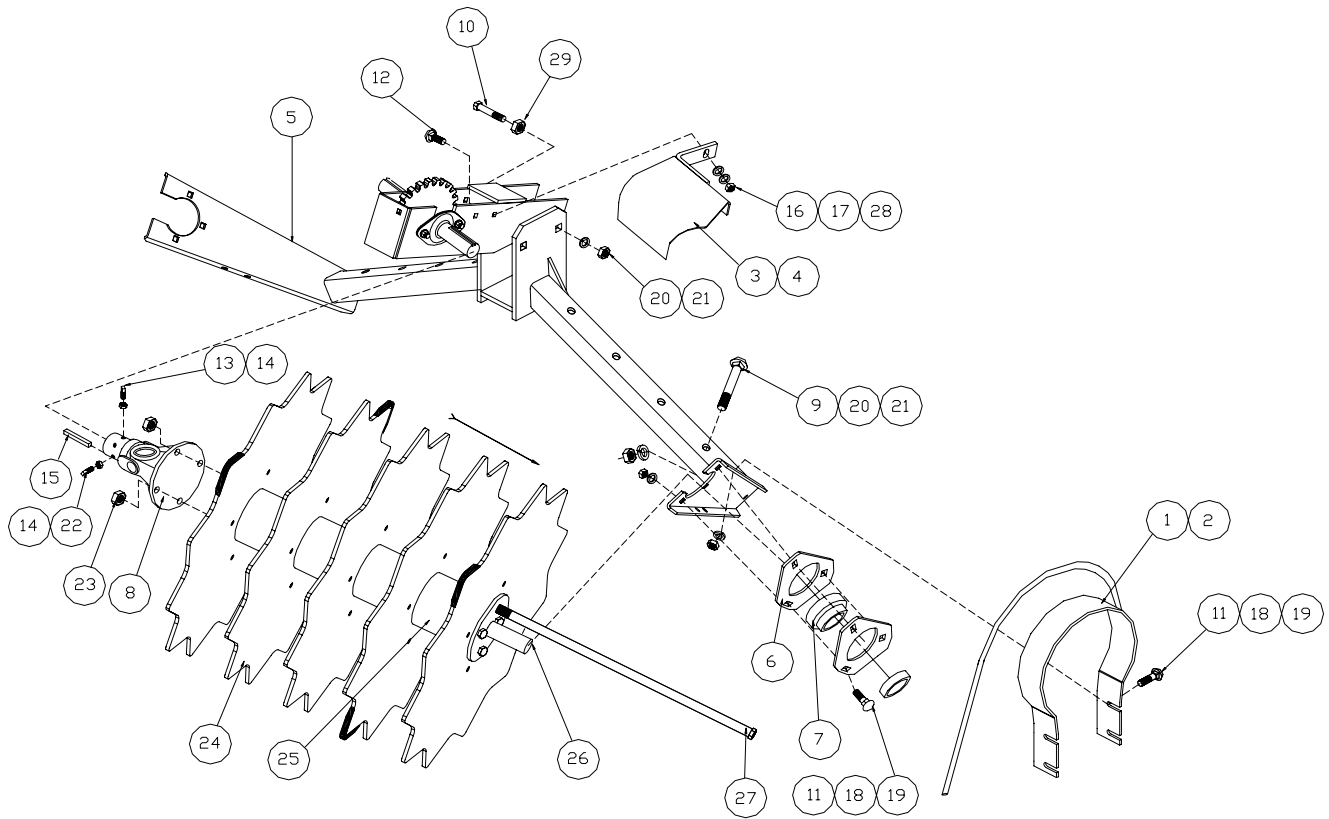

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-300		ROD , LT LOWER BEARING	1
2	03-080-301		ROD, RT LOWER BEARING	1
3	03-080-247		SHIELD, LT U-JOINT	1
4	03-080-248		SHIELD, RT U-JOINT	1
5	03-081-118		SUB ASSY, 6-31 CENTER	1
6	03-051-020		FLANGE, BRG 3H #62 MSTR	4
7	03-051-002		BEARING, 1 3/16 W/COLLAR	2
8	03-055-133		U-JOINT, SINGLE 35R	2
9	52-050260		CARRIAGE SCREW, 1/2 X 3 1/4 G5 PLT	8
10	48-090900		CAPSCREW, 1/2 X 5 1/2 G5 PLT	2
11	52-030250		CARRIAGE SCREW, 3/8 X 1 G2 PLT	14
12	52-030150		CARRIAGE SCREW, 5/16 X 1 G2 PLT	4
13	54-010190		SETSCREW, 7/16 X 1 SQ HD CUPPT	4
14	70-010071		JAM NUT, 7/16 NC	6
15	03-026-016		KEY, 1/4 X 2	2
16	66-010100		LOCKWASHER, 5/16 PLT	4
17	68-010100		HEX NUT, 5/16 PLT	4
18	66-010150		LOCKWASHER, 3/8 PLT	14

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
19	68-010150		HEX NUT, 3/8 PLT	14
20	66-010250		LOCKWASHER, 1/2 PLT	10
21	68-010250		HEX NUT, 1/2 PLT	10
22	54-010180		SETSCREW, 7/16 X 7/8 SQ HD	2
23	72-010050		LOCKNUT, 3/8 HEX	8
24	03-080-359		CYLINDER, "A" DISC	10
25	03-024-198		SPACER, '84 INVERTER	8
26	03-080-412		SHAFT, LOWER CYLINDER	2
27	03-050-114		CAPSCREW, 3/8 X 20 3/8 G5	8
28	62-010050		FLATWASHER, 5/16 PLT	4

4-31, CENTER SUB-ASSEMBLY (ITEM 5)

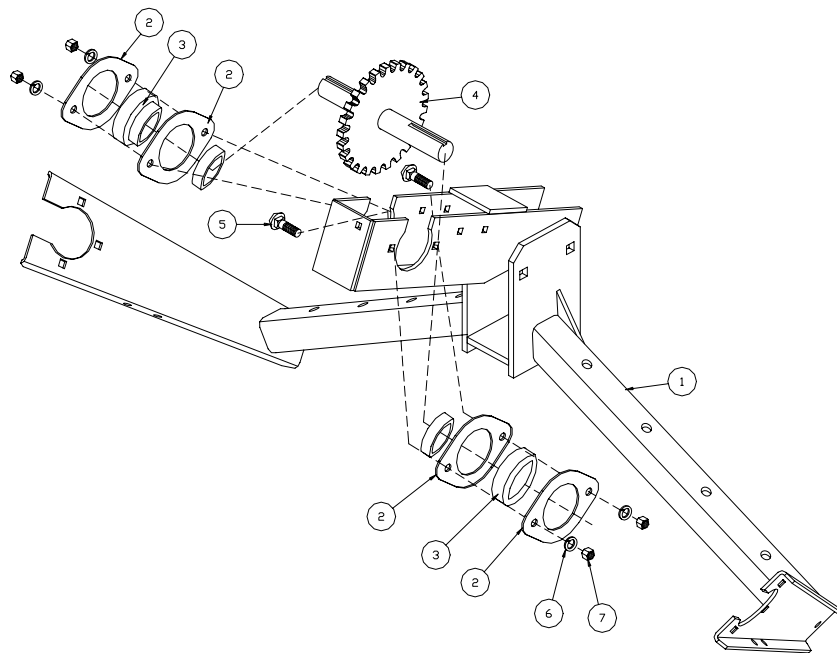


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-691		SUPPORT, 6-31 CTR. CYL.	1
2	03-051-022		FLANGE, 62 MSTR 2-HOLE	4
3	03-051-002		BEARING, 1 3/16 W/COLLAR	2
4	03-080-573		DRIVE, '91 CENTER INV.	1
5	52-030250		CARRIAGE SCREW, 3/8 X 1 G5 PLT	4
6	66-010150		LOCKWASHER, 3/8 PLT	4
7	68-010150		HEX NUT, 3/8 PLT	4


#1 VINE GUIDE ROD , 4-ROW
(Used on Center Inverter Only)

(03-082-185)
(Used on machines prior to 1991)

(03-082-194)
(1992-)

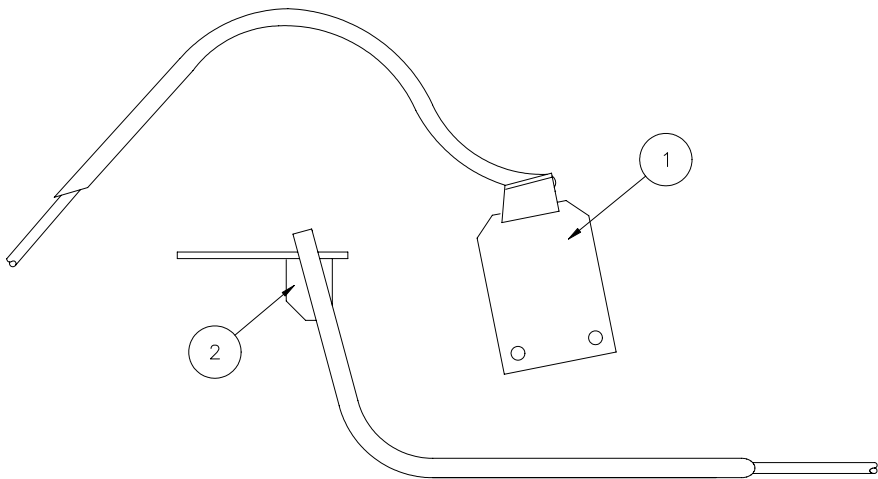


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
*1	03-080-540	(-1991)	#1 GUIDE ROD CENTER, LT	(1)
	03-080-581	(1992-)	#1.92 CENTER VINE ROD, LT	1
*2	03-080-541	(-1991)	#1 GUIDE ROD CENTER, RT	(1)
	03-080-582	(1992-)	#1.92 GUIDE ROD CENTER, RT	1

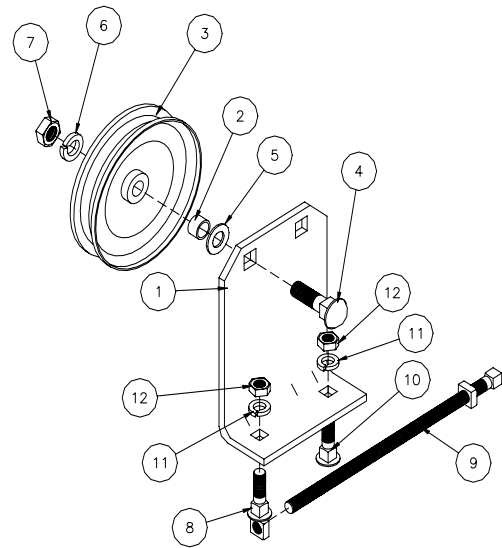

LT & RT INVERTER BELT IDLER
(03-081-052 & 03-081-053)


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-023-251		BRACKET, IDLER	1
2	03-050-087		SPACER, INV BELT	1
3	03-053-023		IDLER, 1 X 5 1/2 (.625) BRG	1
4	52-050360		CARRIAGE SCREW, 5/8 X 2 1/2 G5 PLT	1
5	62-010250		FLATWASHER, 5/8 STD PLT	1
6	66-010300		LOCKWASHER, 5/8 PLT	1
7	68-010300		HEX NUT, 5/8 PLT	1
8	03-080-250		BRACKET, IDLER PUSH	1
9	03-080-308		BOLT, IDLER PUSH	1
10	52-050123		CARRIAGE SCREW, 1/2 X 1 G5 PLT	1
11	66-010250		LOCKWASHER, 1/2 PLT	2
12	68-010250		HEX NUT, 1/2 PLT	2

2 & 4-ROW CYLINDER INVERTER FENDER

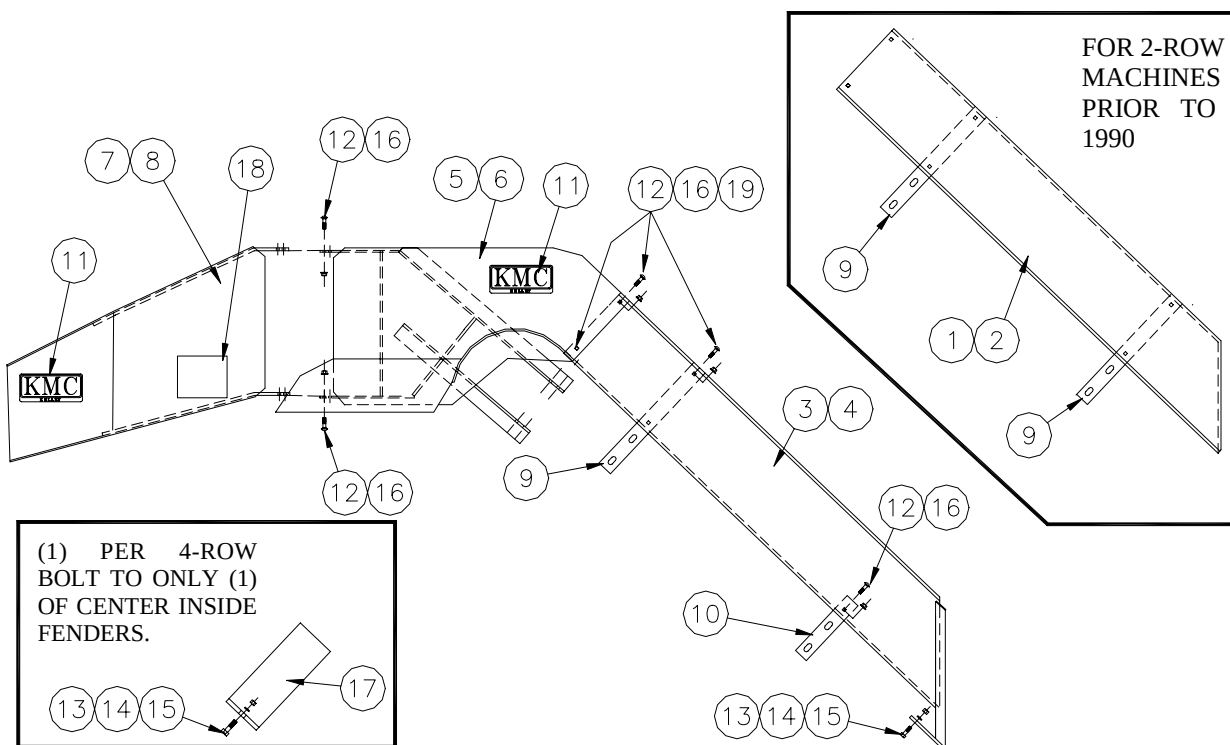


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R
1	03-027-093	(-1990)	FENDER, LT	(1)	-
2	03-027-094	(-1990)	FENDER, RT	(1)	-
3	03-080-464		FENDER, LT	1	2
4	03-080-465		FENDER, RT	1	2
5	03-080-255	(-1982)	FENDER REAR, LT	(1)	-
	03-080-495	(1983-1994)	FENDER REAR, '83 LT	(1)	(2)
	03-080-644	(1995-)	FENDER, LT REAR	1	2
6	03-080-256	(-1982)	FENDER REAR, RT	(1)	(2)
	03-080-496	(1983-1994)	FENDER REAR, '83 RT	(1)	(2)
	03-080-645	(1995-)	FENDER, RT REAR	1	2
7	03-080-251	(-1990)	ADJUSTABLE SHIELD, LT	(1)	(2)
	03-080-563	(1991-)	ADJUSTABLE SHIELD, LT	1	2
8	03-080-252	(-1990)	ADJUSTABLE SHIELD, RT	(1)	(2)
	03-080-564	(1991-)	ADJUSTABLE SHIELD, RT	1	2
9	03-027-015		FENDER POST	2	4
10	03-027-232		FENDER POST	2	4
11	02-050-053		KMC DECAL	4	6
12	52-050005		CARRIAGE SCREW, 5/16 X 3/4	20	24
13	48-090100		CAPSCREW, 3/8 X 1	2	4
14	62-010100		FLATWASHER, 3/8	2	4
15	72-010050		LOCKNUT, 3/8 G"B" PLT	2	4
16	78-020045		WHIZ NUT, 5/16	20	32
17	03-027-245		CENTER DEFLECTOR	-	1
18	03-050-084		SHAKER ROD DECAL	1	1
19	62-010050		FLATWASHER, 5/16	3	30

**SLOW MOVING VEHICLE KIT
(2-ROW 4-31)**

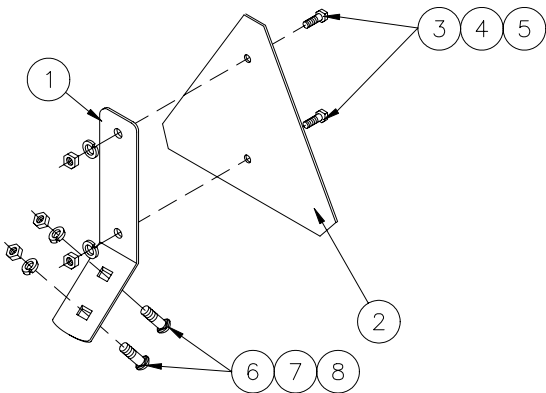


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-540		BRACKET, (SMV) MOUNTING	1
2	03-050-068		EMBLEM, (SMV)	1
3	48-090005		CAPSCREW, 1/4 X 5/8 PLT	2
4	66-010050		LOCKWASHER, 1/4 PLT	2
5	68-010050		HEX NUT, 1/4 PLT	2
6	52-050005		CARRIAGE SCREW, 5/16 X 3/4 G5 PLT	2
7	66-010100		LOCKWASHER, 5/16 PLT	2
8	68-010100		HEX NUT, 5/15 PLT	2

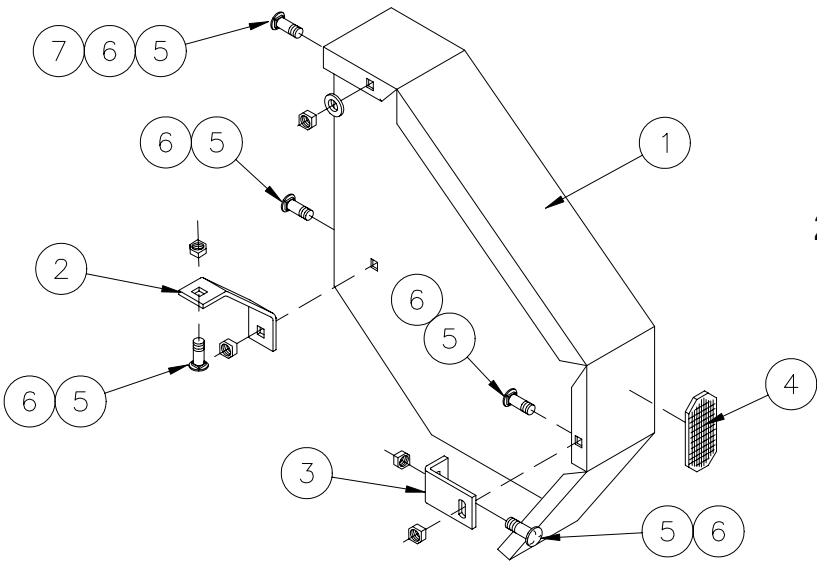


**2-ROW LT FRONT SHIELD
(-1994)**

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-356		SHIELD, LT FRONT	1
2	03-023-313		SUPPORT, LT FRONT SHIELD	1
3	03-023-319		BRACE, LT FRONT SHIELD	1
4	03-050-069		REFLECTOR, AMBER	1
5	52-030100		CARRIAGE SCREW, 5/16 X 3/4 PLT	5
6	78-020049		LOCKNUT, 5/16 WHIZ-FLANGE PLT	5
7	62-010150		FLATWASHER, 7/16 PLT	1

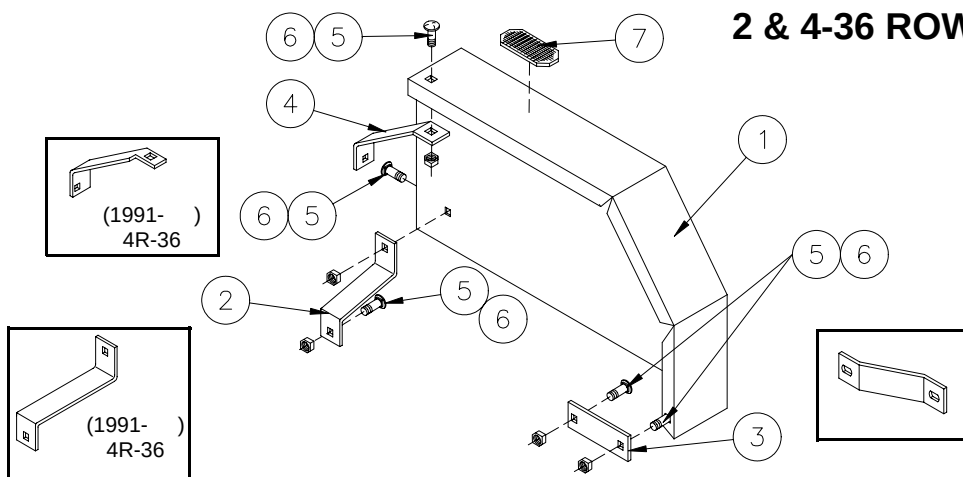
2 & 4-36 ROW LT REAR SHIELD

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R
1	03-080-354		SHIELD, LT REAR	1	-
	03-080-365		SHIELD, LT REAR	-	1
2	03-023-309		BRACE, LT SHIELD	1	-
	03-023-538		BRACE, LT SHIELD	-	1
3	03-023-310		LEG, LT SHIELD	1	-
	03-023-539		LEG, LT SHIELD	-	1
4	03-023-308		SUPPORT, REAR SHIELD	1	1
	03-023-536		SUPPORT, REAR SHIELD	-	1
5	52-030100		CARRIAGE BOLT, 5/16 X 3/4 PLT	5	5
6	78-020049		LOCKNUT, 5/16 WHIZ FLANGE PLT	5	5
7	03-050-070		REFLECTOR, RED	1	1

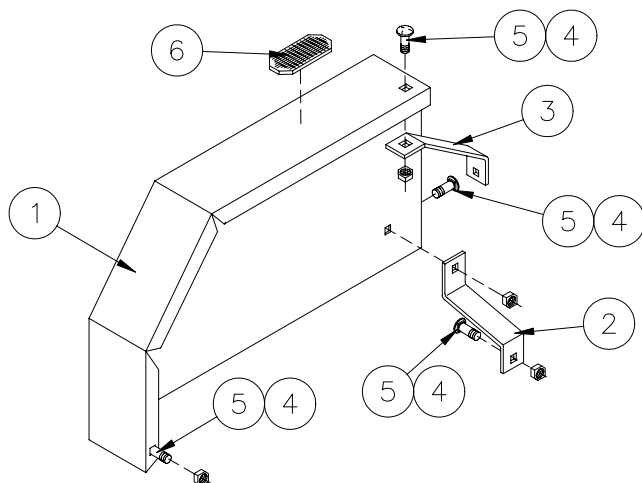**4-36 ROW RT REAR SHIELD**
(1991-)


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-355		SHIELD, RT REAR	1
2	03-023-311		BRACE, RT SHIELD	1
3	03-023-308		SUPPORT, REAR SHIELD	1
4	78-020049		LOCKNUT, 5/16 WHIZ FLANGE PLT	4
5	52-030100		CARRIAGE SCREW, 5/16 X 3/4 PTL	4
6	03-050-070		REFLECTOR, RED	1

2, 4-36 & 4-40-ROW LT & RT FRONT SHIELD

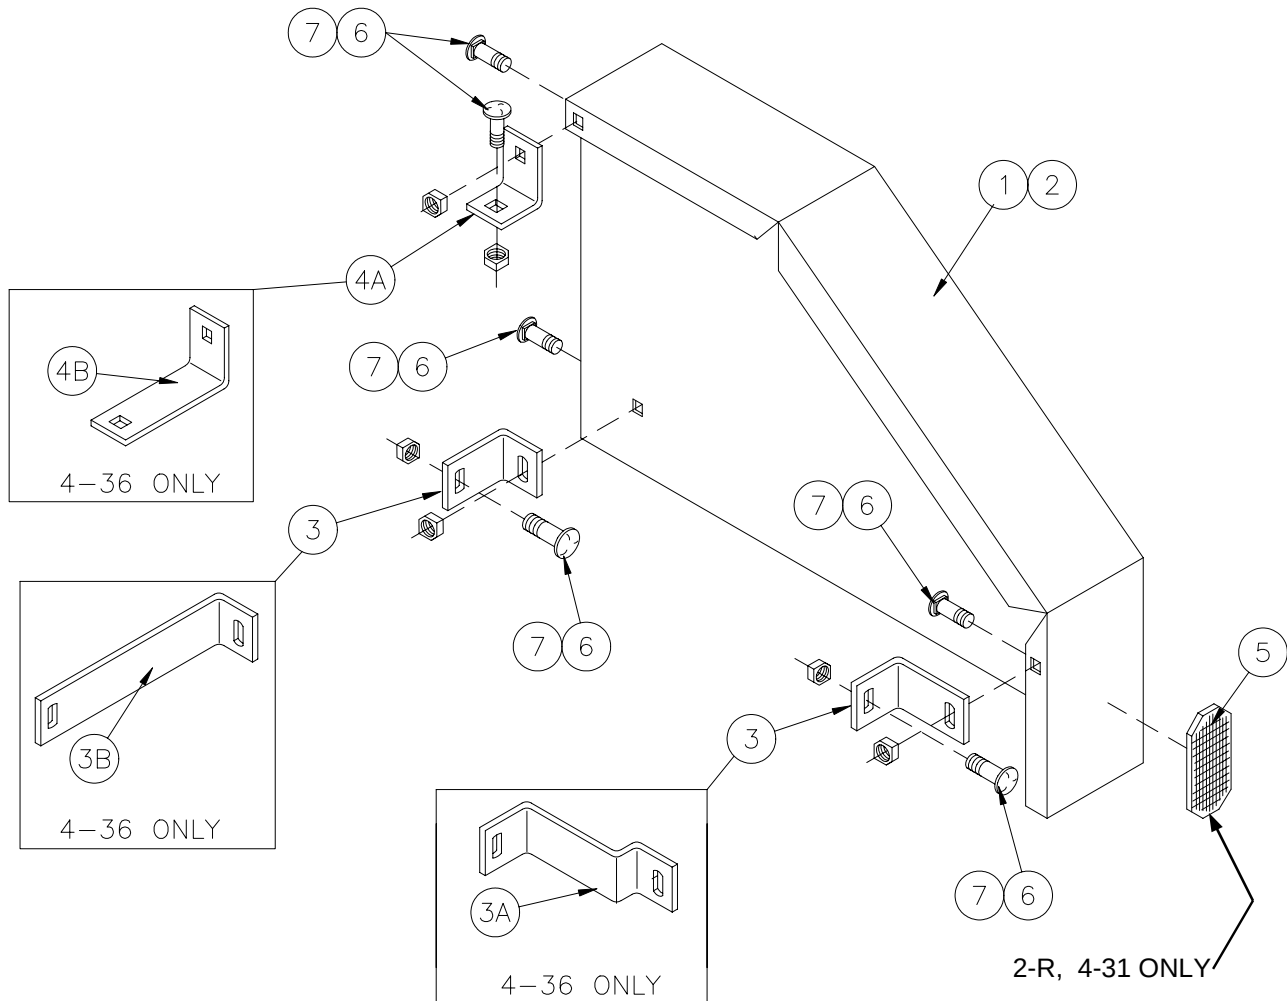


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	2R	4R	4-40R	
				LT	LT	LT	RT
1	03-080-363		SHIELD, LT FRONT	1	1	1	-
2	03-080-364		SHIELD, RT FRONT (4-40)	-	-	-	1
3	03-023-317		SUPPORT, LOWER FRONT SHIELD	2	-	2	2
3A	03-023-540		BRACE, 4-R FRONT	-	1	-	-
3B	03-023-541		BRACE, 4R LOWER FRONT	-	1	-	-
4A	03-023-315		SUPPORT, TOP FRONT SHIELD	1	-	1	1
4B	03-023-542		SUPPORT, FRONT SHIELD	-	1	-	-
5	03-050-069		REFLECTOR, AMBER	1	1	1	1
6	52-030100		CARRIAGE BOLT, 5/16 X 3/4 PLT	6	6	6	6
7	78-020049		LOCKNUT, 5/16 WHIZ FLANGE	6	6	6	6

2, 4-36 & 4-40-ROW LT & RT REAR SHIELD

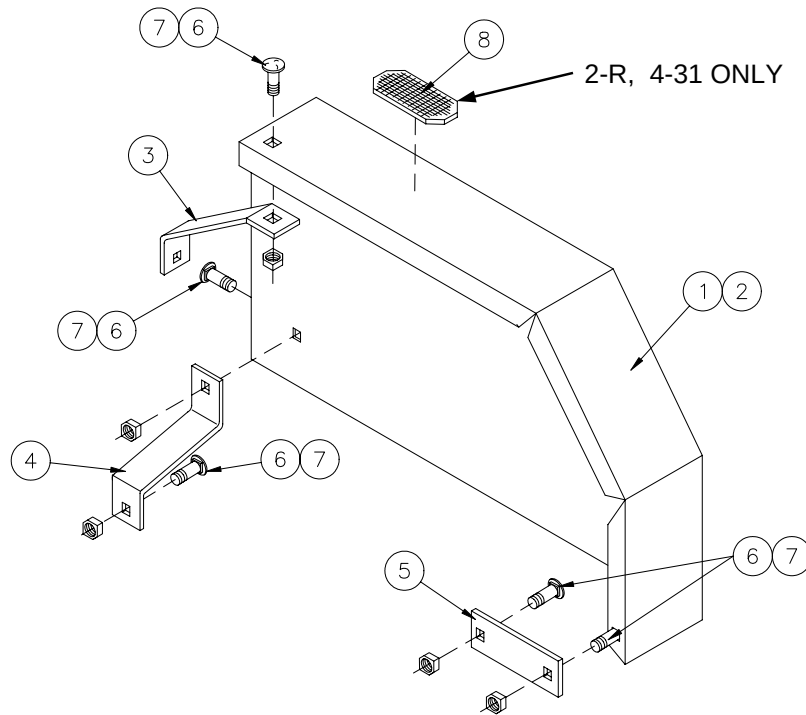



ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	LT	RT
1	03-080-365		SHIELD, LT REAR	1	-
2	03-080-366		SHIELD, RT REAR	-	1
3	03-023-308		SUPPORT, REAR SHIELD	1	1
4	03-023-309		BRACE, LT SHIELD	1	1
5	03-023-318		LEG, 4R SHIELD	1	1
6	52-030100		CARRIAGE SCREW, 5/16 X 3/4 G5 PLT	5	5
7	78-020049		LOCKNUT, 5/16 WHIZ FLANGE PLT	5	5
8	03-050-070		RED, REFLECTOR	1	1

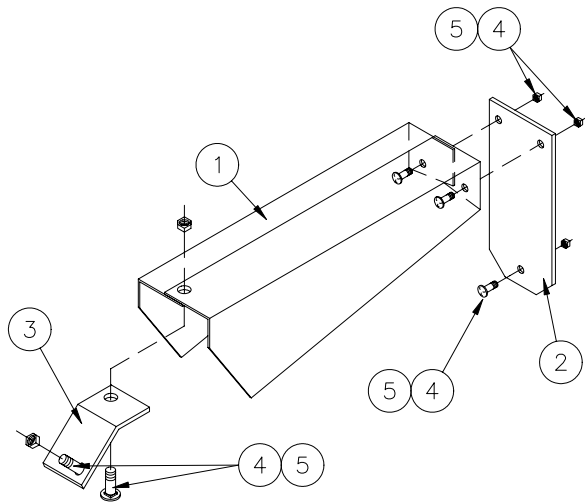

CENTER SHIELD
(4-36 ROW)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-478		INVERTER DRIVE SHIELD CENTER	1
2	03-027-244		INVERTER DRIVE SHIELD TOP	1
3	03-023-436		INVERTER DRIVE SHIELD REAR SUPPORT	1
4	52-030100		CARRIAGE BOLT, 5/16 X 3/4 G2 PLT	5
5	78-020049		LOCKNUT, 5/16 WHIZ FLANGE	5

CENTER SHIELD, 4-40
(4-40 ROW)

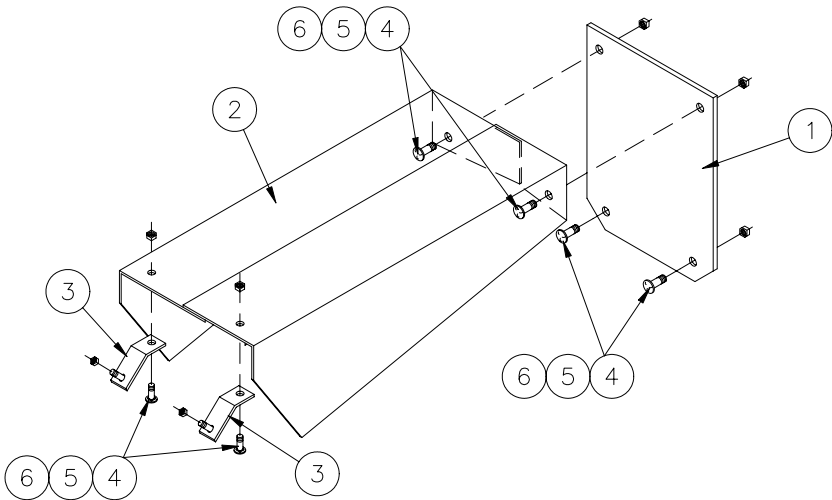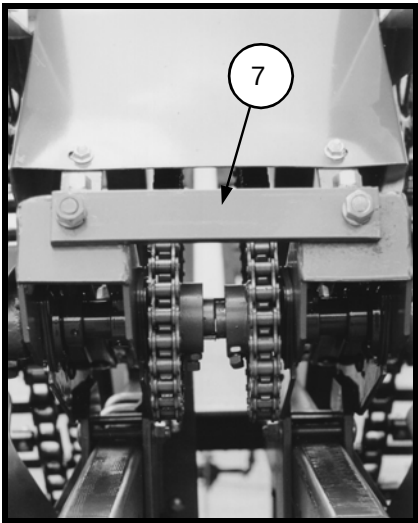

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-027-269		SHIELD, CENTER TOP	1
2	03-080-598		SHIELD, INVERTER DRIVE	1
3	03-023-634		BRACKET, CENTER SHIELD	2
4	52-050005		CARRIAGE BOLT, 5/16 X 3/4 G5 PLT	8
5	66-010100		LOCKWASHER, 5/16 PLT	8
6	68-010100		HEX NUT, 5/16 PLT	8


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
7	03-023-744		STRAP, INVERTER CON. 40"	-

4-ROW COULTER BRACKET

(03-082-156) (-1992)
(03-082-196) (1993-)


(03-082-187)
OPTIONAL

(03-082-184)

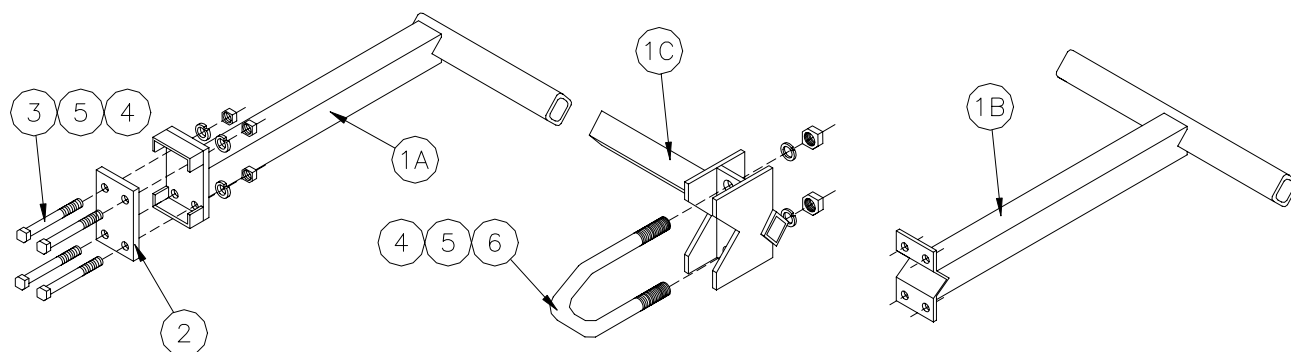

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-156	-184	-187	-196
1A	03-080-473	(-1992)	BRACKET, 4R VINE CUTTER	(2)	-	-	-
	03-080-610	(1993-)	BRACKET, 4R VINE CUTTER	-	-	-	1
1B	03-080-536	(1985-)	T-BRACKET, 6R COULTER	-	1	-	-
1C	03-080-549		BRACKET, 6R DUAL WHEEL V.C.	-	-	1	-
2	03-080-352	(-1992)	PLOW STANDARD CAP	(2)	-	-	-
	03-080-560	(1992)	PLOW STANDARD CAP	(1)	1	-	-
	03-023-571	(1993-1995)	PLATE, SHANK BRACKET	-	-	-	(1)
	03-023-672	(1996-)	CAP, SHANK	-	-	-	1
3	48-090985	(-1992)	CAPSCREW, 5/8 X 2 3/4 G5 PLT	(8)	4	-	-
	48-100075	(1993-)	CAPSCREW, 3/4 X 7 1/2 G5 PLT	-	-	-	4
4	68-010300	(-1992)	HEX NUT, 5/8 PLT	(8)	4	-	-
	68-010350	(1993-)	HEX NUT, 3/4 PLT	-	-	2	4
5	66-010300	(-1992)	LOCKWASHER, 5/8 PLT	(8)	4	-	-
	66-010350	(1993-)	LOCKWASHER, 3/4 PLT	-	-	2	4
6	04-050-005		"V"-BOLT, 3/4 X 6 5/16 X 5 11/16	-	-	1	-


FRONT COULTER BUNDLE
(03-082-084)

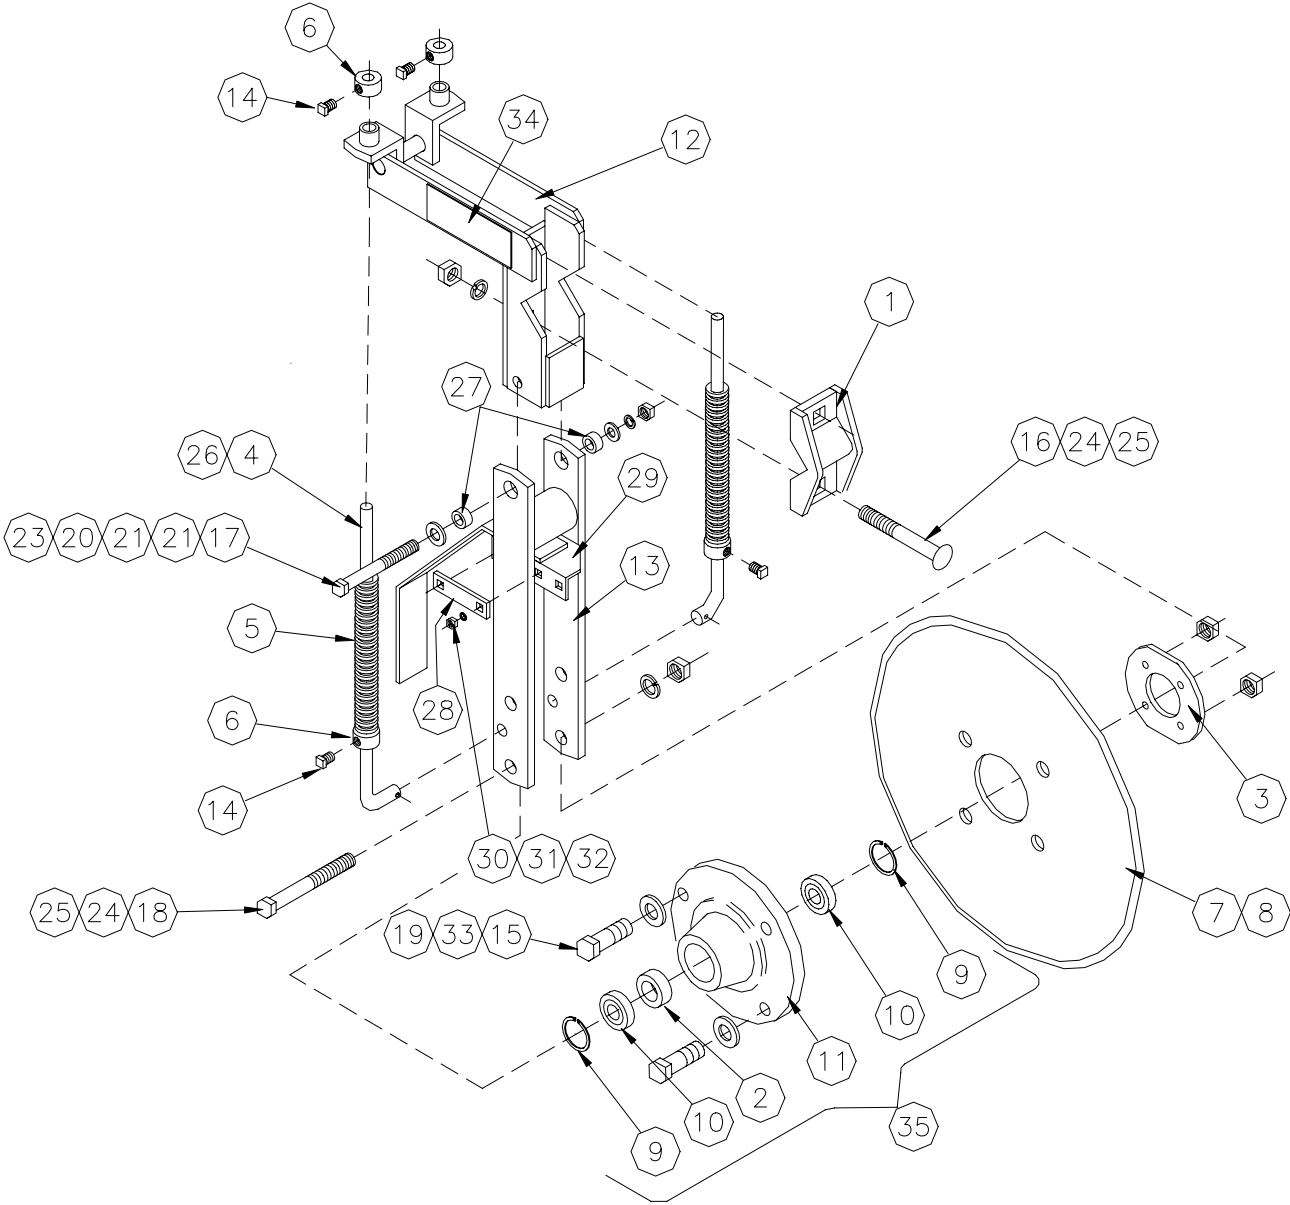

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	02-057-019		CLAMP, 2 1/2 TOOL BAR	1
2	04-024-069		BEARING SPACER, 3/8	1
3	03-023-064		COULTER FLANGE	1
4	03-026-025		SPRING PUSH ROD	2
5	03-050-008		COULTER SPRING	2
6	03-050-009		11/16" ADJ COLLAR	4
7	03-050-010		DURA FLUTE COULTER, 17"	1
8	03-050-042		DURA FLUTE COULTER, 20"	1
9	04-050-078		RETAINING RING, 2 3/64 INTERNAL	2
10	04-051-004		BEARING, 3/4 CYL (EXT 205)	2

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
11	03-057-014		COULTER HUB	1
12	03-080-180		COULTER FORK BRACKET	1
	03-080-537		COULTER BRACKET, '85	1
13	03-080-181		COULTER FORK	1
14	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	4
15	48-090170		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
16	52-050450		CARRIAGE BOLT, 3/4 X 5 G5 PLT	2
17	48-091150		CAPSCREW, 5/8 X 5 1/2 G5 PLT	1
18	48-091475		CAPSCREW, 3/4 X 5 (AXLE)	1
19	72-010050		LOCKNUT, 3/8 G"C" PLT & WAXED	4
20	66-010300		LOCKWASHER, 5/8 PLT	1
21	62-010250		FLATWASHER, 5/8 PLT	2
23	72-020050		LOCKNUT, 5/8 G"C" PLT 7 WAXED	1
24	66-010350		LOCKWASHER, 3/4 PLT	3
25	68-010350		HEX NUT, 3/4 PLT	3
26	76-010100		COTTER PIN, 3/16 X 1 1/2	2
27	04-024-001		PIVOT BUSHING	2
28	03-023-228		DISC SHIELD BRACKET	1
29	03-080-244		DISC SHIELD	1
30	52-030350		CARRIAGE BOLT, 3/8 X 1 1/2 PLT	2
31	66-010150		LOCKWASHER, 3/8 PLT	2
32	68-010150		HEX NUT, 3/8 PLT	2
33	62-010050		FLATWASHER, 5/16 PLT	4
34	03-050-040		DECAL, KMC	1
*35	04-0801014		COULTER HUB ASSY	1


* Hub Assembly (04-081-014) Made Up of #2, #9, #10, & #11.

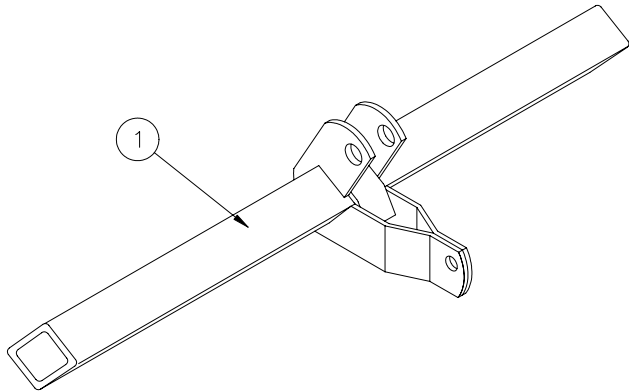

2-ROW COULTTER BAR
(03-082-161)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-479		COULTTER BAR, (2-R0W)	1

SUPPORT ARM BUNDLE
(03-082-163)

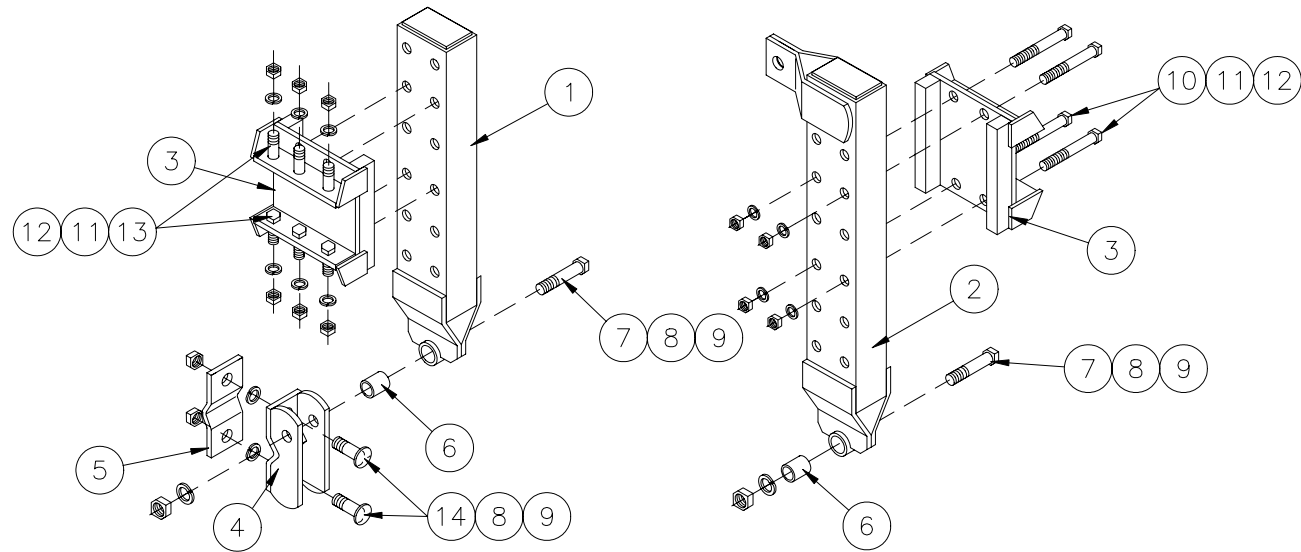


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-482		SUPPORT ARM, LT	1
2	03-080-483		SUPPORT ARM, RT	1
3	03-080-481		ADJUSTABLE BRACKET	2
4	03-080-243		TUBE PIVOT BRACKET	1
5	02-023-188		CLAMP P.B.	1
6	03-024-113		TUBE PIVOT BUSHING	2
7	48-091000		CAPSCREW, 5/8 X 3 G5 PLT	2
8	66-010300		LOCKWASHER, 5/8 PLT	4
9	68-010300		HEX NUT, 5/8 PLT	4
10	48-090700		CAPSCREW, 1/2 X 3 1/4 G5 PLT	8
11	66-010250		LOCKWASHER, 1/2 PLT	20
12	68-010250		HEX NUT, 1/2 PLT	20
13	48-090595		CAPSCREW, 1/2 X 1 1/2 G5 PLT	12
14	52-030850		CARRIAGE BOLT, 5/8 X 2 1/2	2

MOUNTING BRACKETS


***LONG**
(03-082-164)

SHORT
(03-082-167)

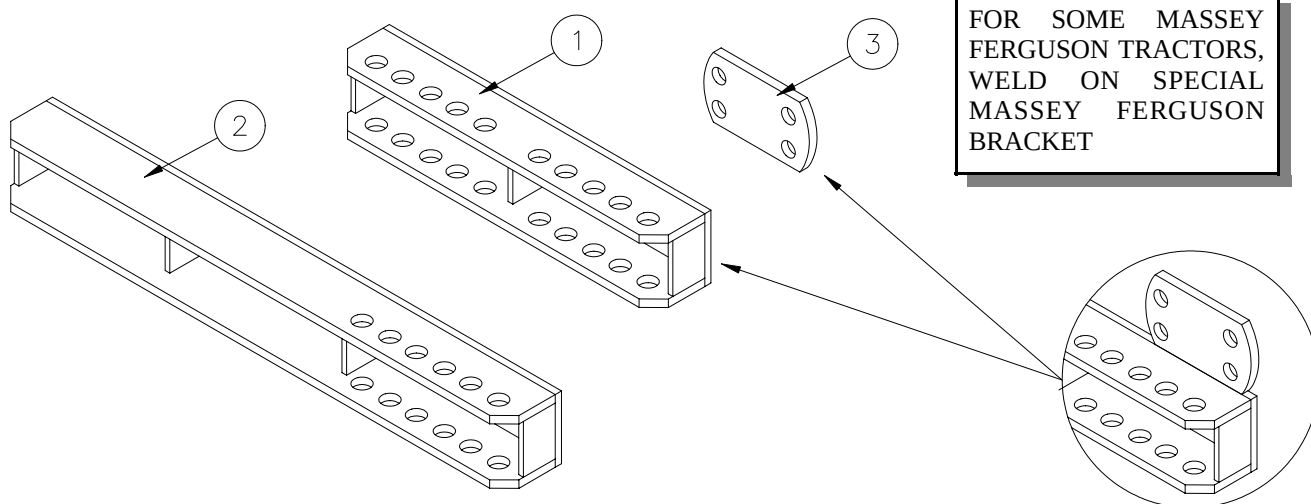


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-487		MOUNTING BRACKET	2
2	03-080-484		MOUNTING BRACKET, LONG	2
3	03-023-226		M.F. BRACKET	2

VINE CUTTER STEP (03-082-195)

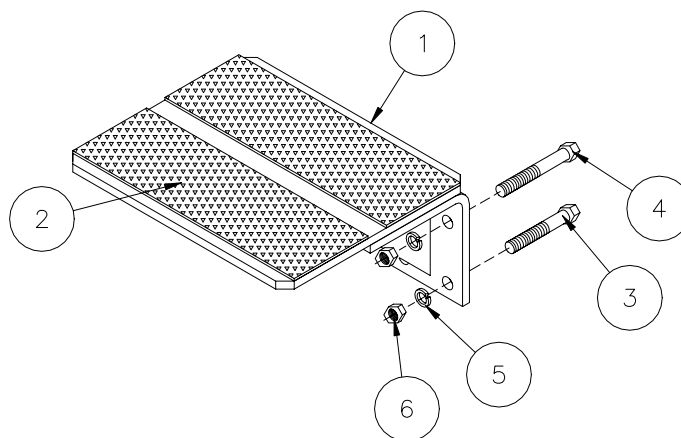


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-583		STEP (VINE CUTTER)	1
2	03-050-104		NON-SKID TAPE (4 X 12 LONG)	2
3	48-090650		CAPSCREW, 1/2 X 3 G5 PLT	2
4	48-040370		CAPSCREW, 1/2 X 3 1/2 G2 PLT	2
5	66-010250		LOCKWASHER, 1/2 PLT	4
6	68-010250		HEX NUT, 1/2 PLT	4

ADAPTOR BRACKETS
(MF 2705, MF 2675)

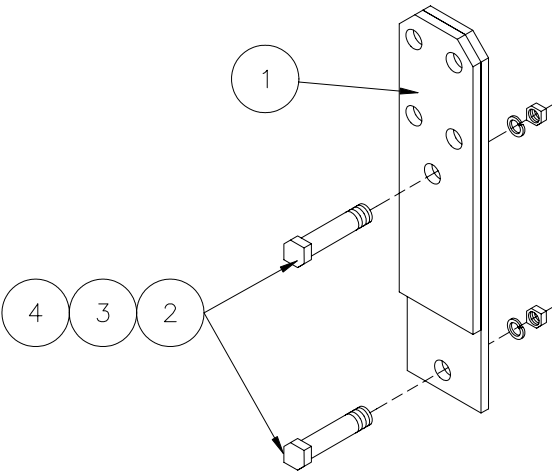


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-488		ADAPTOR BRACKET (MF 2705, MF 2675)	2
2	48-091350		CAPSCREW, 3/4 X 2 1/2 G5 PLT	4
3	66-010350		LOCKWASHER, 3/4 PLT	4
4	68-010350		HEX NUT, 3/4 PLT	4

M.F. ADAPTOR BRACKET
(2805, 2745)

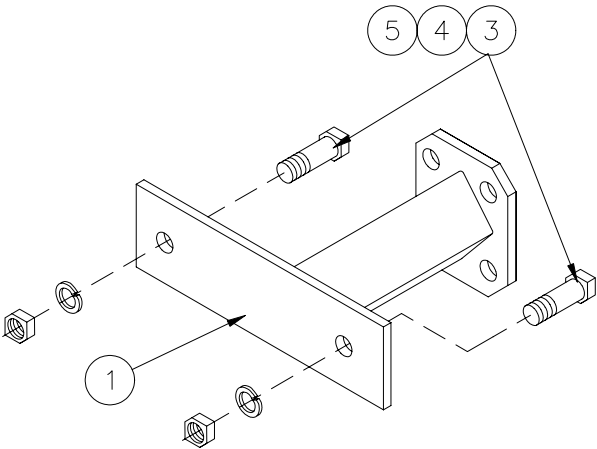


M.F. BRACKET
(1150, 1155)

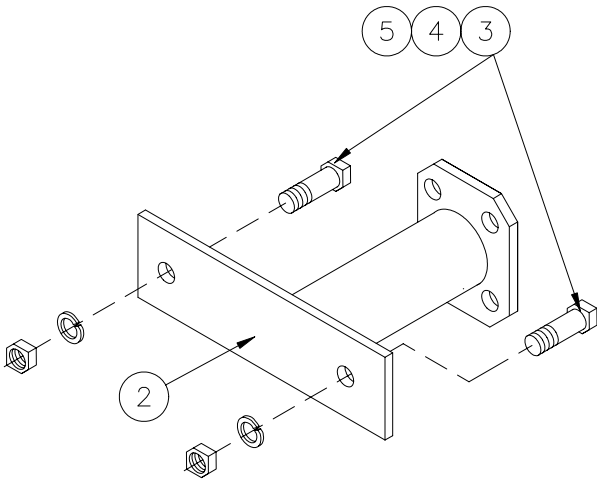


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-486		ADAPTOR BRACKET	2
2	03-080-485		M.F. BRACKET (1150, 1155)	2
3	48-091350		CAPSCREW, 3/4 X 2 1/2 G5 PLT	4
4	66-010350		LOCKWASHER, 3/4 PLT	4
5	68-010350		HEX NUT, 3/4 PLT	4

MAST-VINE LIFTER (03-082-182)

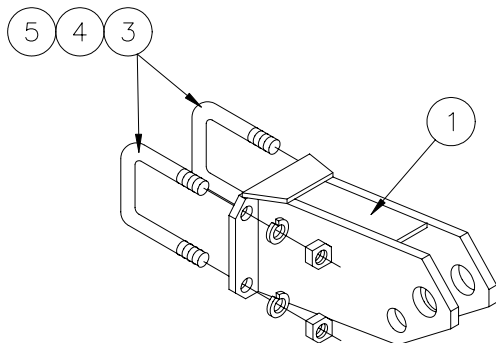


LOWER HITCH-VINE LIFTER (03-082-181)

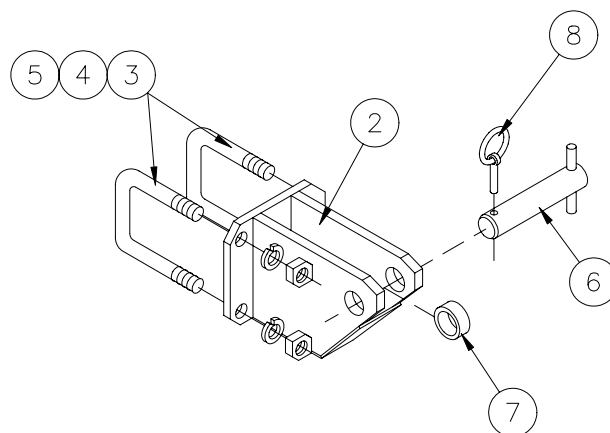


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	-182	-181
1	03-080-529		MAST, VINE LIFTER	1	-
2	03-080-528		LOWER HITCH, VINE LIFTER	-	2
3	14-050-018		"U"-BOLTS 7/8 X 5 3/4 X 4 15/16	2	4
4	66-010400		LOCKWASHER, 7/8 PLT	4	8
5	68-010400		HEX NUT, 7/8 PLT	4	8
6	03-050-088		HITCH PIN, 1 1/8	-	2
7	06-024-021		SPACER, CAT II	-	2
8	02-050-002		KLICK PIN	-	2

6-ROW VINE LIFTER TOOL BAR

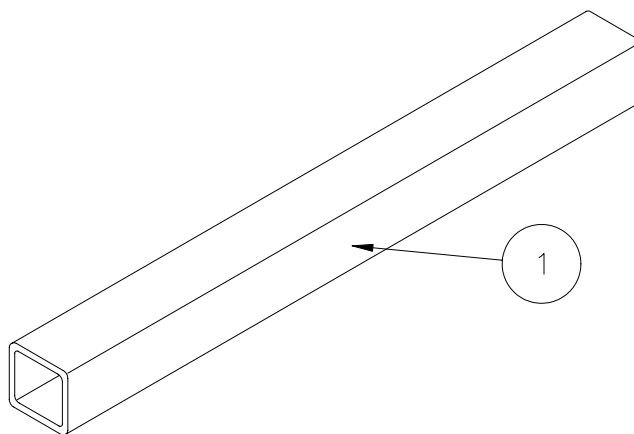

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-024-220		TOOL BAR, 6-ROW VINE LIFTER	1

LT. & RT. CULTIVATOR GAUGE WHEEL (1X3 SHANK)
(04-082-076) (Used with Vine Lifter)

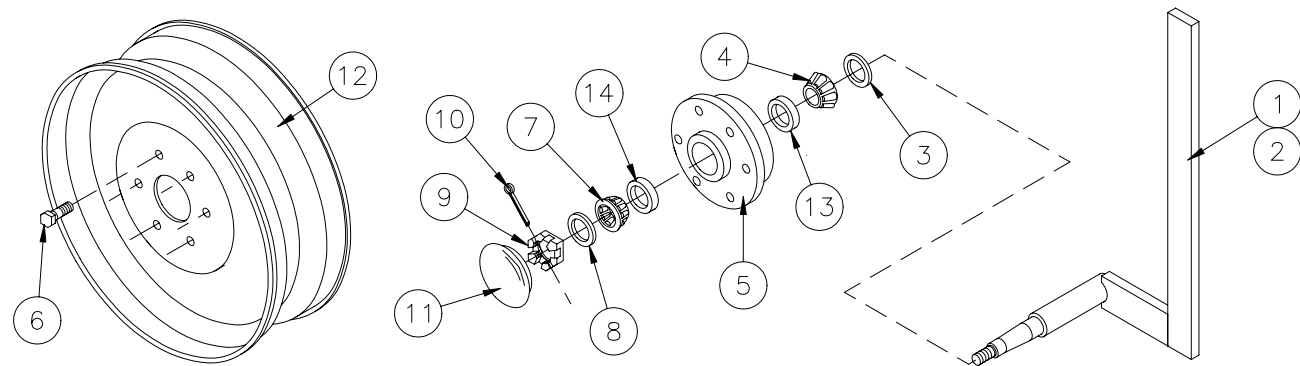


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	LT	RT
1	04-081-005		CULT GAUGE WHEEL ARM, LT	1	-
2	04-081-006		CULT GAUGE WHEEL ARM, RT	-	1
3	02-056-011		SEAL (16289CR)	1	1
4	02-051-041		INNER BEARING CONE (JL69349)	1	1
5	02-058-033		6-BOLT HUB W/CUPS	1	1
6	02-058-004		WHEEL BOLT, 1/2 X 1 N.F.	6	6
7	02-051-006		OUTER BEARING CONE (LM67048)	1	1
8	02-050-019		WASHER, 15/16 X 2 X .160 THK	1	1
9	68-030050		SLOTTED NUT, 7/8 N.F.	1	1
10	76-010050		COTTER PIN, 5/32 X 1 1/4	1	1
11	02-058-005		HUB CAP	1	1
13	02-051-040		INNER BEARING CUP (JL69310)	1	1
14	02-051-005		OUTER BEARING CUP (LM67010)	1	1

WHEEL SOLD SEPARATELY FROM BUNDLE

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	LT	RT
12	02-058-008		RIM, 15 X 6 WHEEL	1	1

1 X 3 SHANK BRACKER, 4 X 4
(USED WITH VINE LIFTER)
(04-082-056)

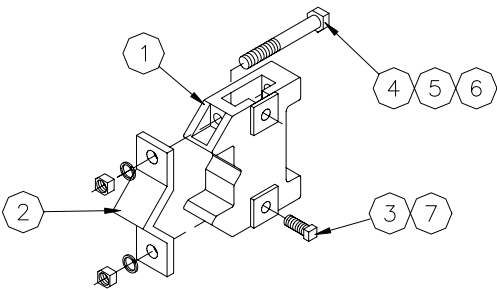


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	04-057-027		BRACKET, 1 X 3 SHANK	1
2	02-023-167		CLAMP CAP	1
3	54-010300		SETSCREW, 5/8 X 1 1/2 SQ HD CUPPT	2
4	48-091475		CAPSCREW, 3/4 X 5 G5 PLT	2
5	66-010350		LOCKWASHER, 3/4 PLT	2
6	68-010350		HEX NUT, 3/4 PLT	2
7	74-010100		SQUARE NUT, 5/8	2

(03-082-197)
(1994 ONLY)


5 x 5 COULTER

(03-082-208)
(1995-)

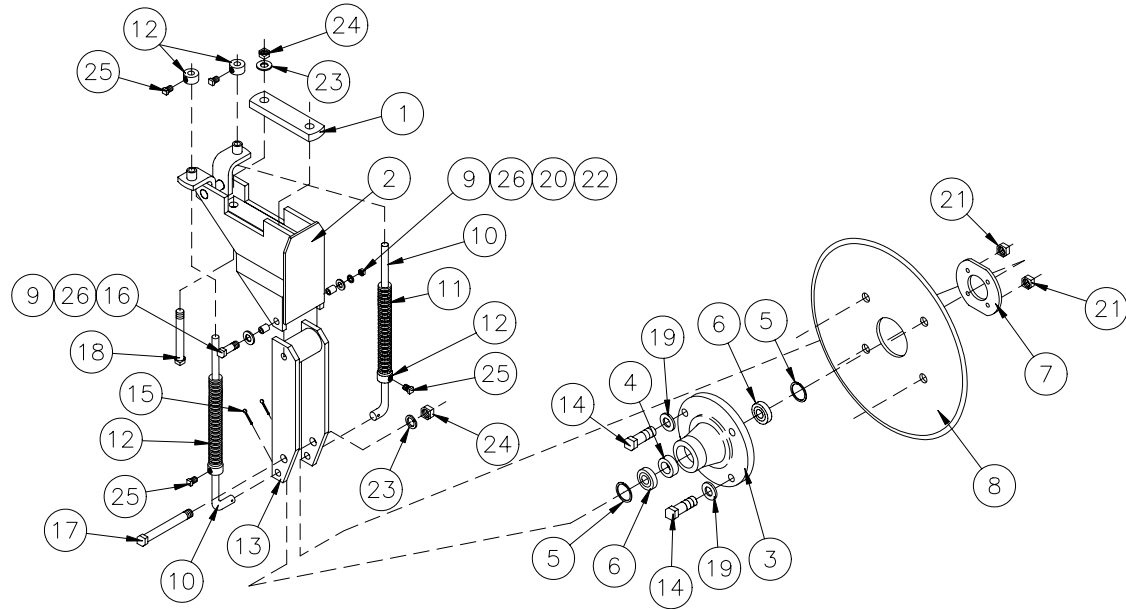


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	36-023-027		CLAMP, COULTER BRACKET	1
2	03-080-606	(1994)	BRACKET, COULTER	(1)
	03-080-653	(1995-)	BRACKET, COULTER	1
3	03-057-014		HUB, COULTER	1
4	04-024-069		SPACER, 3/8 BEARING	1
5	04-050-078		RING, INTERNAL RETAINER 2 3/64	2
6	04-051-004		BEARING 3/4 EXT CYL (205)	2
7	03-023-064		FLANGE, COULTER	1
8	03-050-042		COULTER, DURA-FLUTE 20"	1
9	04-024-001		BUSHING, PIVOT	2
10	03-026-115	(1994)	ROD, SPRING PUSH	(2)
	03-026-025	(1995-)	ROD, SPRING PUSH	2
11	03-050-008		SPRING, COULTER	2
12	03-050-009		COLLAR, 11/16 ADJ	4
13	03-080-620	(1994)	FORK, COULTER	(1)
	03-080-652	(1995-)	FORK, COULTER	1
14	48-060100		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
15	76-010100		COTTER PIN, 3/16 X 1 1/2	2
16	48-060350	(1994)	CAPSCREW, 5/8 X 5 1/2 G5 PLN	(1)
	48-091202	(1995-)	CAPSCREW, 5/8 X 6 1/2 G5 PLT	1
17	48-091475		CAPSCREW, 3/4 X 5 G5 PLT	1
18	48-100075		CAPSCREW, 3/4 X 7 1/2 G5 PLT	2
19	62-010050		FLATWASHER, 5/16 PLT	4
20	66-010300		LOCKWASHER, 5/8 PLT	1
21	72-010050		LOCKNUT, 3/8 G"B" PLT & WAXED	4
22	72-020050		LOCKNUT, 5/8 G"B" PLT & WAXED	1
23	66-010350		LOCKWASHER, 3/4 PLT	3
24	68-010350		HEX NUT, 3/4 PLT	3
25	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	4
26	62-010250		FLATWASHER, 5/8 PLT	2

2 X 4 COULTER
(03-082-239)

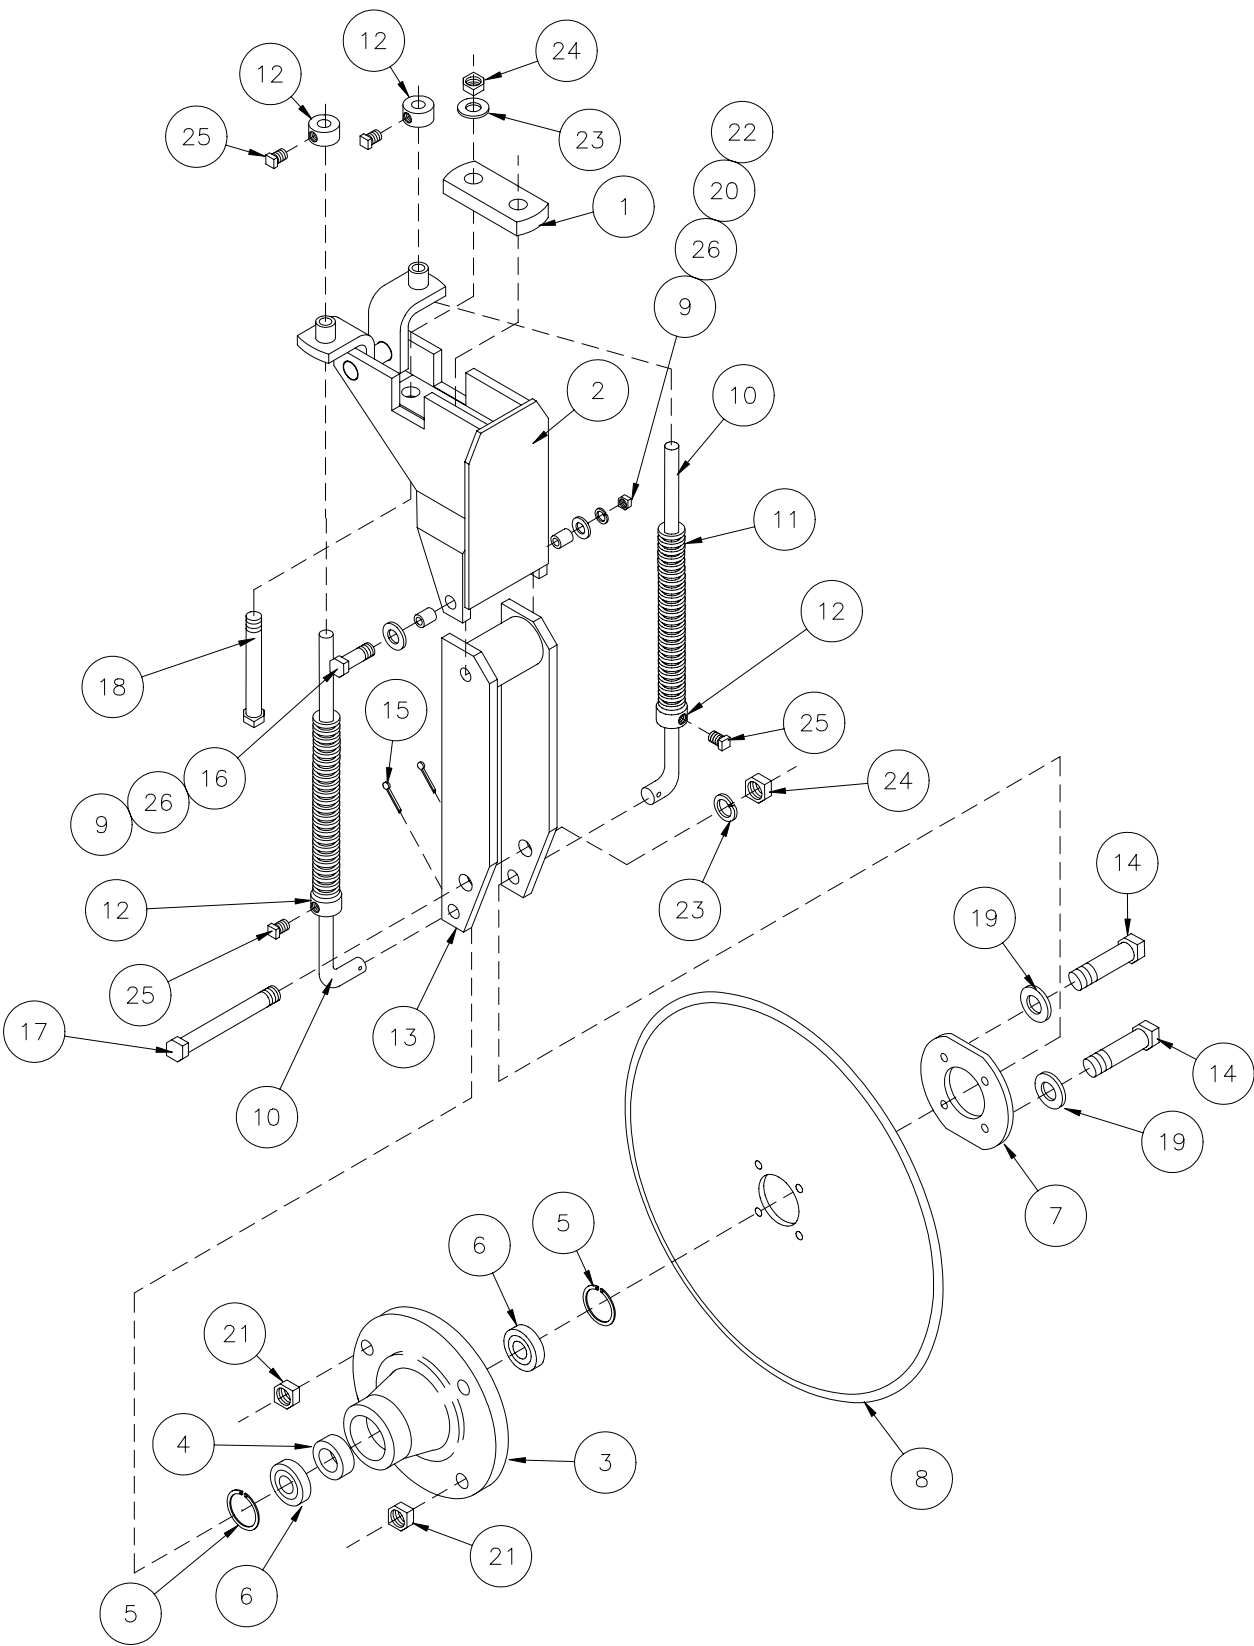


ITEM	PART NO.	SERIAL NO.OR YR.	DESCRIPTION	QTY
1	03-023-813		CLAMP, COULTER BRACKET	1
2	03-080-813		BRACKET, 8R-FLD COULTER	1
3	03-057-014		HUB, COULTER	1
4	04-024-069		SPACER, 3/8 BEARING	1
5	04-050-078		RING, INTERNAL RETAINER 2 3/64	2
6	04-051-004		BEARING, 3/4 EXT CYL (205)	2
7	03-023-064		FLANGE, COULTER	1
8	03-050-042		COULTER, DURA-FLUTE 20"	1
9	04-024-001		BUSHING, PIVOT	2
10	03-026-115		ROD, 26" SPRING PUSH	2
11	03-050-008		SPRING	2
12	03-050-009		COLLAR, 11/16 ADJ	4
13	03-080-652		FORK, COULTER	1
14	48-090170		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
15	76-010100		COTTER PIN, 3/16 X 1 1/2	2
16	48-091202		CAPSCREW, 5/8 X 6 1/2 G5 PLT	1
17	48-091475		CAPSCREW, 3/4 X 4 G5 PLT	1
18	48-100060		CAPSCREW, 3/4 X 6 1/2 G5 PLT	2
19	62-010050		FLATWASHER, 5/16 PLT	4
20	66-010300		LOCKWASHER, 5/8 PLT	1
21	72-010050		LOCKNUT, 3/8 G"B" PLT & WAXED	4
22	72-020050		LOCKNUT, 5/8 G"C" PLT & WAXED	1
23	66-010350		LOCKWASHER, 3/4 PLT	3
24	68-010350		HEX NUT, 3/4 PLT	3
25	54-010200		SETSCREW, 1/2 X 5/8 SQ HD CUPPT	4
26	62-010250		FLATWASHER, 5/8 PLT	2

2-ROW EXTENSION
(03-082-213)
(Update For Machines Thru 1994)

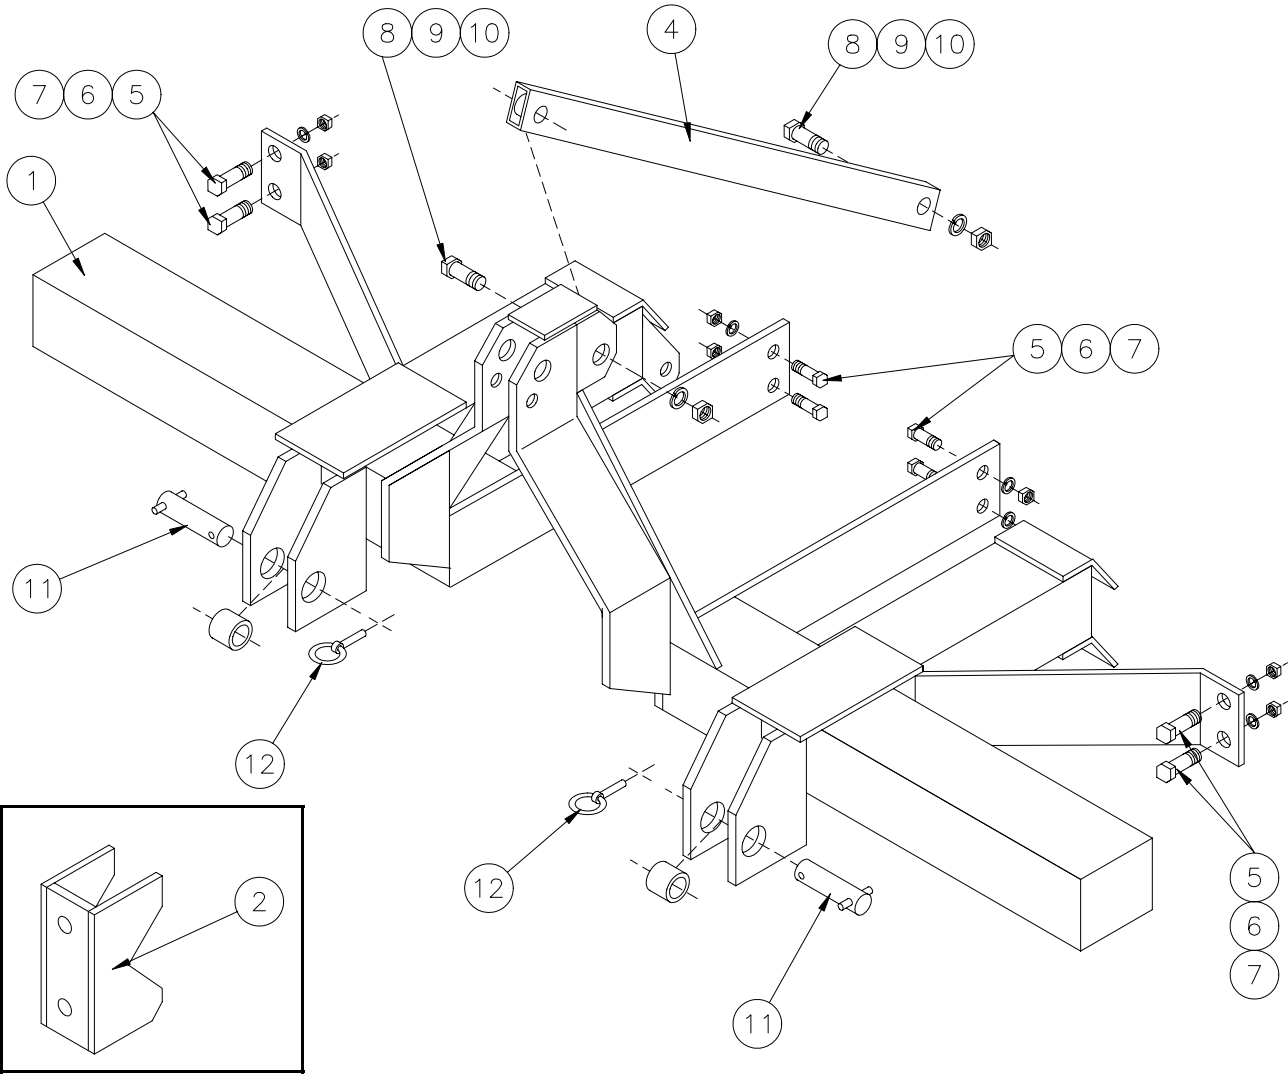

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-666		FRAME, 2R HITCH EXTENSION	1
2	03-080-667		BRACKET, H.E. COULTER	1
3	03-023-673		SUPPORT, CENTER	1
4	03-080-668		STRAP, MAST TIE	1
5	48-090950		CAPSCREW, 5/8 X 2 G5 PLT	8
6	66-010300		LOCKWASHER, 5/8 PLT	8
7	68-010300		HEX NUT, 5/8 PLT	8
8	48-100550		CAPSCREW, 1 X 4 1/2 G5 PLT	2
9	66-010450		LOCKWASHER, 1 PLT	2
10	68-010450		HEX NUT, 1 PLT	2
11	03-050-088		PIN, 1 1/8 HITCH	2
12	02-050-002		KLIK PIN, 7/16 X 1 3/4	2

4-ROW EXTENSION
 (03-082-207)
 (Update For Machines Thru 1993)

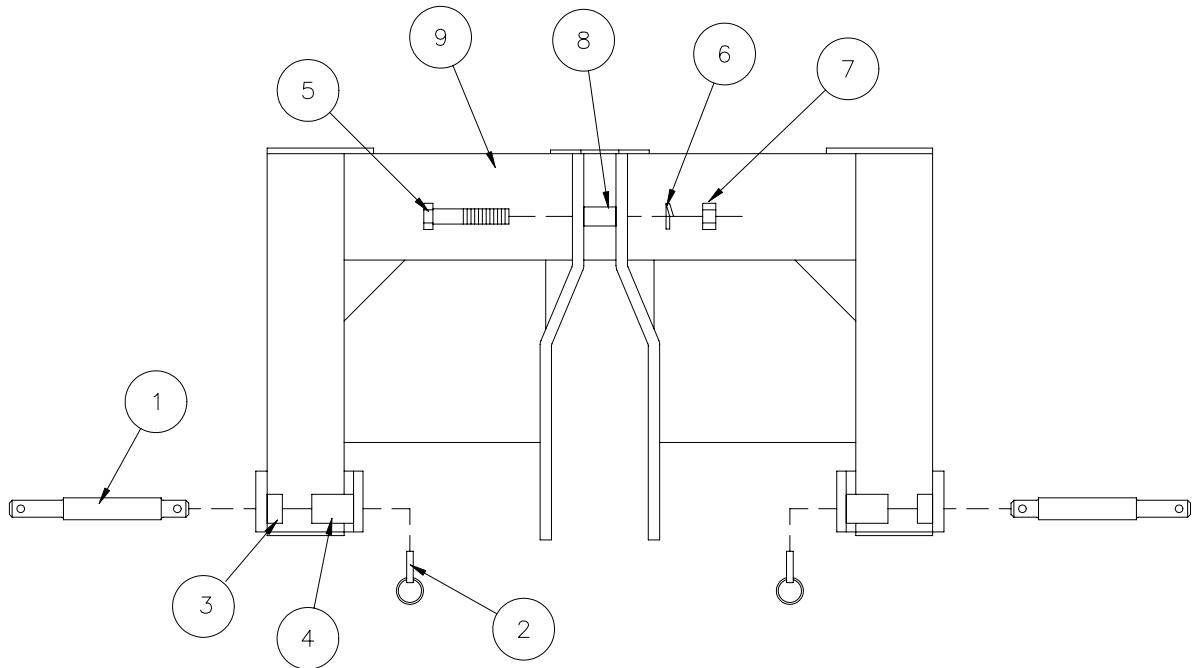

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-026-126		PIN, STEP HITCH	2
2	02-050-002		PIN, 7/16 X 1 3/4 KLIK	2
3	06-024-022		SPACER, CAT III	2
4	05-024-010		SPACER, CAT III	2
5	48-100600		CAPSCREW, 1 X 5 G5 PLT	1
6	66-010450		LOCKWASHER, 1 PLT	1
7	68-010450		HEX NUT, 1 PLT	1
8	02-024-004		SPACER, 8 X 10 SHORT	1
9	03-080-647		HITCH, 4R EXTENSION	1

1 3/8 1000 DRIVELINE
 (03-082-201)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
*	03-055-138		DRIVELINE, 1 3/8-1000	1

*Refer to Page 7 for Driveline breakdown.


1 3/4 1000 DRIVELINE
 (03-082-202)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
*	03-055-139		DRIVELINE, 1 3/4-1000	1

*Refer to Page 7 for Driveline breakdown.

COULTER BRACKET & FORK


(03-081-113)

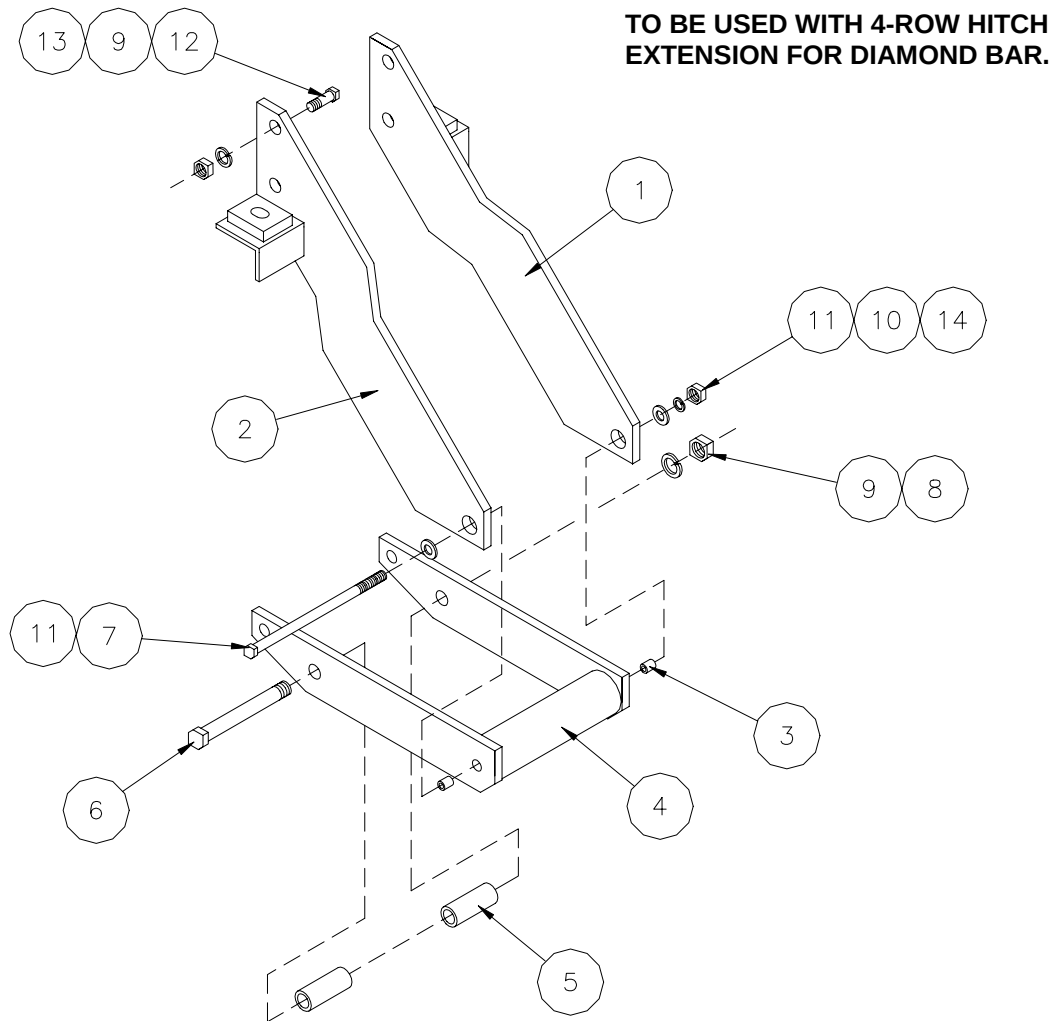

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-611		SUPPORT, 4R LT COULTER	1
2	03-080-612		SUPPORT, 4R RT COULTER	1
3	04-024-001		BUSHING, PIVOT	2
4	03-080-619		FORK, COULTER	1
5	03-024-236		SPACER, BEARING	2
6	48-100110		CAPSCREW, 3/4 X 11 G5 PLT	1
7	48-091268		CAPSCREW, 5/8 X 12 G5 PLT	1
8	68-010350		HEX NUT, 3/4 PLT	1
9	66-010350		LOCKWASHER, 3/4 PLT	5
10	66-010300		LOCKWASHER, 5/8 PLT	1
11	62-020040		FLATWASHER, 5/8 PLT	2
12	48-091275		CAPSCREW, 3/4 X 2 G5 PLT	4
13	70-010150		JAM NUT, 3/4 PLT	4
14	72-020050		LOCKNUT, 5/8 G"C" PLT	1


22 1/4" V-SHANK (03-081-129)

TO BE USED WITH 4-ROW CENTER
CONVERSION FOR DIAMOND BAR.

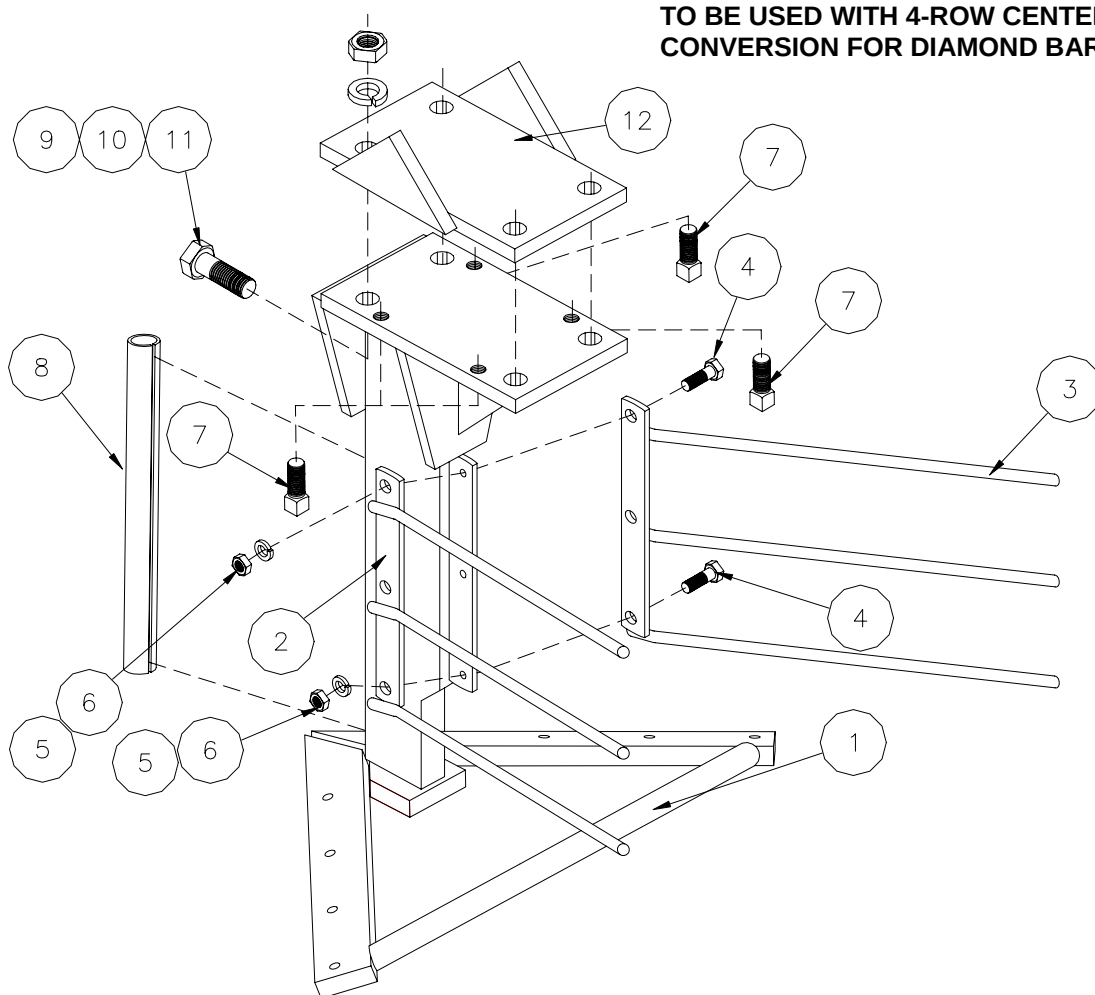

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	03-080-700		V-SHANK, CONV, FOR OLD STYLE	1
2	03-080-694		SUPPORT, PLOW STD. CENTER LT	1
3	03-080-695		SUPPORT, PLOW STD. CENTER RT	1
4	48-060050		CAPSCREW, 3/8 X 1 1/4 G5 PLT	2
5	66-010150		LOCKWASHER, 3/8 PLT	2
6	68-010150		HEX NUT, 3/8 PLT	2
7	54-010275		SETSCREW, 5/8 X 1 SQ HD CUPPT	4
8	03-024-253		GUARD, CENTER 4-R	1
9	66-010400		LOCKWASHER, 7/8 PLT	4
10	68-010400		HEX NUT, 7/8 PLT	4
11	48-091550		CAPSCREW, 7/8 X 2 1/2 G5 PLT	4
12	03-080-651		BOLT PLATE, V-SHANK	1


2" X 8" STROKE HYDRAULIC CYLINDER (03-061-038)

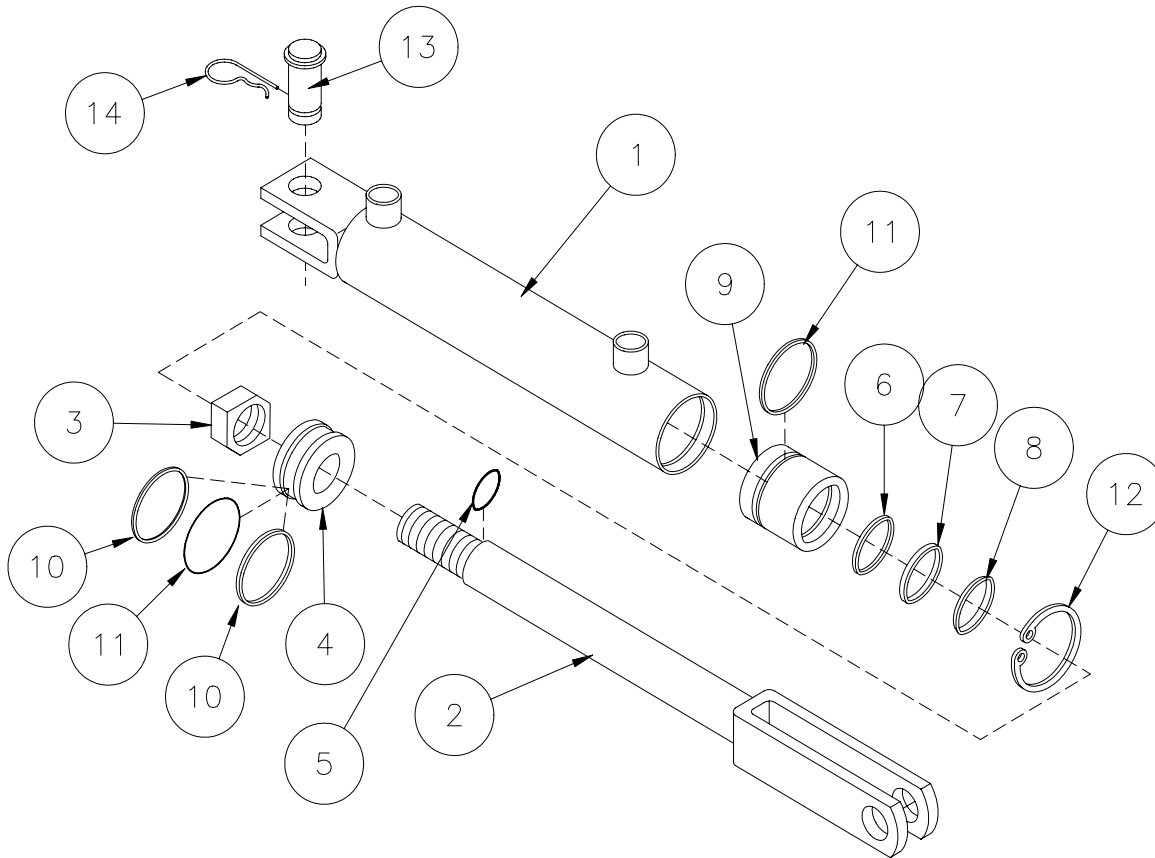

ITEM	PART NO.	SERIAL NO.OR YR.	DESCRIPTION	QTY
1	03-061-039		CYLINDER BODY W/1/2" PORTS	1
2	03-061-006		PISTON ROD W/CLEVIS	1
3	03-061-037		LOCKNUT, 7/8 NF-14 CENTER	1
4	03-061-008		PISTON	1
*5	03-061-009		O-RING, 3/4 ID X 7/8 OD	1
*6	03-061-010		O-RING, 1 1/8 ID X 1 3/8 OD	1
*7	03-061-011		BACK-UP WASHER, 1 1/8 ID X 1 3/8 OD	1
*8	03-061-012		ROD WIPER, 1 1/8	1
9	03-061-013		PISTON ROD GUIDE	1
*10	03-061-014		BACK-UP WASHER, 1 5/8 ID X 2 OD X 3/32	2
*11	03-061-015		O-RING, 1 5/8 ID X 2 OD	2
*12	03-061-016		RETAINING RING INTERNAL, 2"	1
13	03-061-017		CLEVIS PIN	1
14	03-061-018		CLEVIS PIN CLIP	1

* Makes up Seal Kit (03-061-002)

3" X 8" STROKE HYDRAULIC CYLINDER (05-061-001)

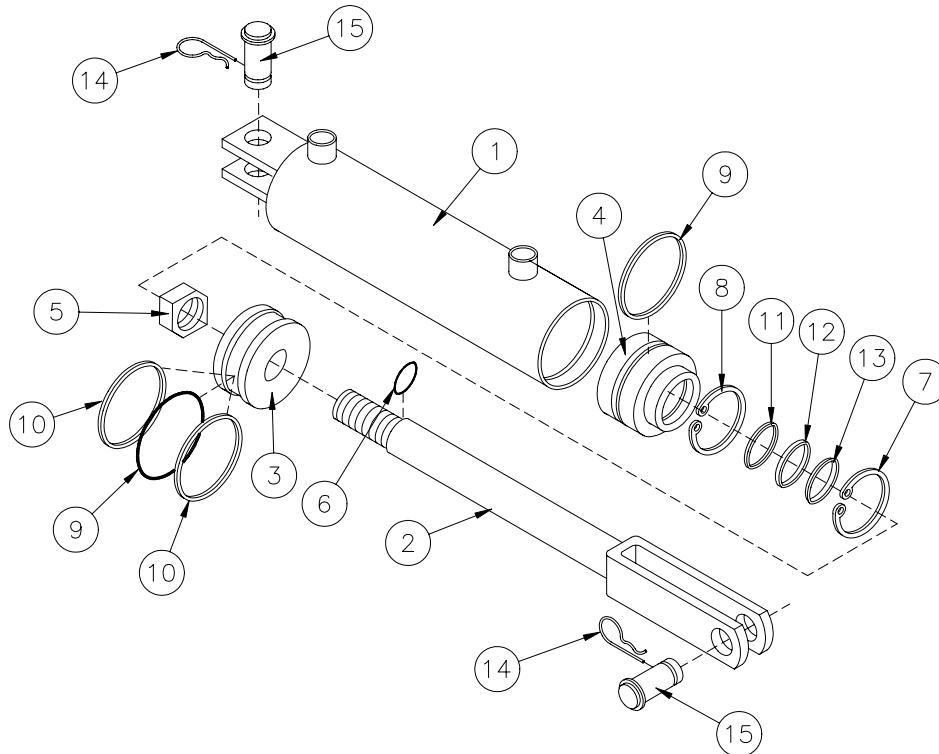




ITEM	PART NO.	SERIAL NO.OR YR.	DESCRIPTION	QTY
1	05-061-004		CYLINDER BODY	1
2	03-061-006		PISTON ROD W/CLEVIS	1
3	03-061-022		PISTON	1
4	03-061-008		PISTON ROD GUIDE	1
5	03-061-007	(-1982)	JAM NUT, 7/8 N.F.-14	(1)
	03-061-037	(1983-)	LOCKNUT, 7/8 N.F.-14 CENTER	1
*6	03-061-009		O-RING, 3/4 ID X 7/8 OD	1
*7	05-061-006		RETAINING RING INTERNAL, 3"	1
*8	05-061-007		RETAINING RING INTERNAL, 2 5/8"	1
*9	03-061-032		O-RING, 2 5/8 ID X 3 OD	2
*10	03-061-031		BACK-UP WASHER, 2 5/8 ID X 3 OD X 3/32	2
*11	03-061-010		O-RING, 1 1/8 ID X 1 3/8 OD	1
*12	03-061-011		BACK-UP WASHER, 1 1/8 ID X 1 3/8 OD X 1/16	1
*13	03-061-012		ROD WIPER, 1 1/8	1
14	03-061-018		CLEVIS PIN CLIP	2
15	03-061-017		CLEVIS PIN	2

***Makes up Seal Kit (05-061-003)**

HOSES FOR FRONT MOUNTED COULTER

ITEM	PART NO.	SERIAL NO.OR YR.	DESCRIPTION	QTY
16	05-059-001	(-1984)	HYDRAULIC HOSE, 3/8" X 120" (NOT SHOWN)	(2)
	03-059-002	(1985-)	HYDRAULIC HOSE, 3/8" X 120" W/ 1/2" ENDS	2

4R LIGHT KIT (03-082-234)

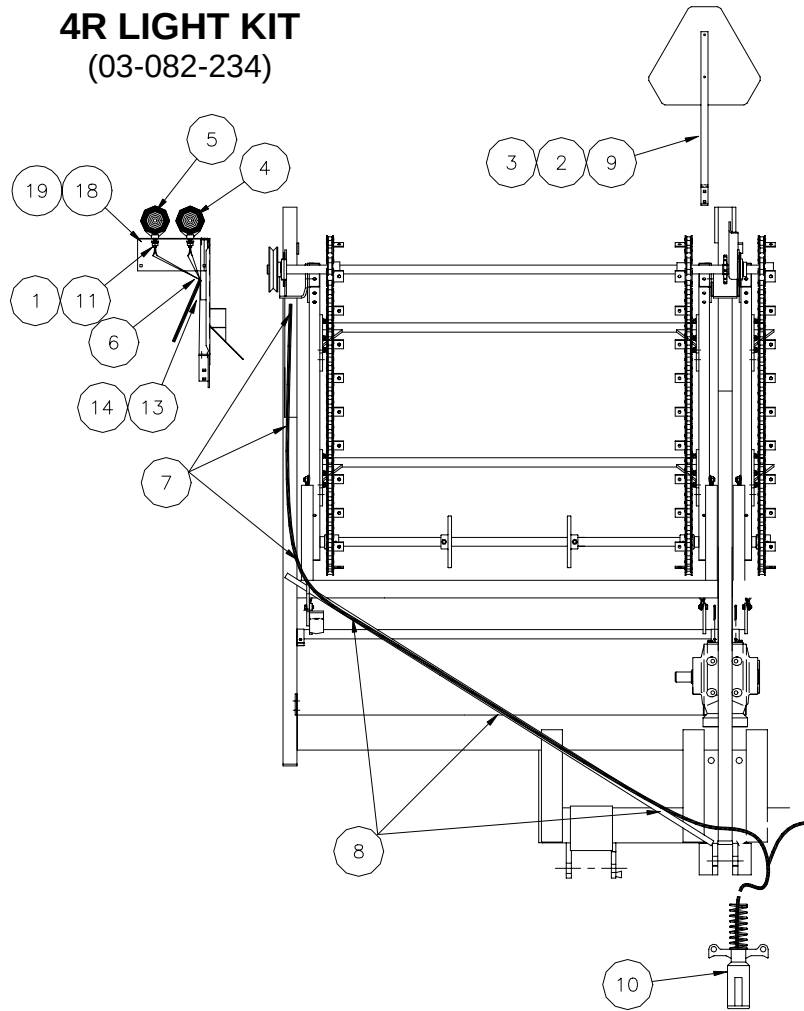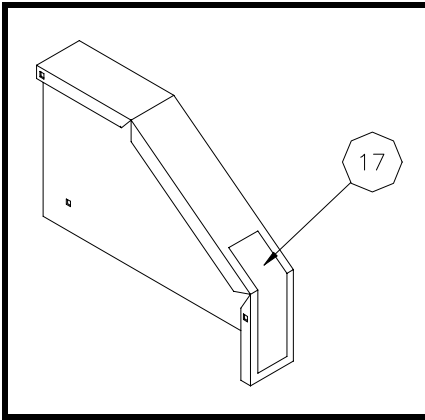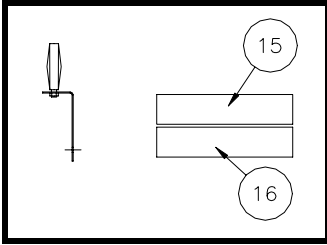

ITEM	PART NO.	SERIAL NO.OR YR.	DESCRIPTION	QTY
1	33-062-006		CONNECTOR, BUTT	4
2	52-050019		CARRIAGE SCREW, 5/16 X 1 1/4 G5 PLT	10
3	78-020049		LOCKNUT, 5/16-18 WHIZ FLANGE PLT	10
4	03-062-001		LIGHT, SINGLE RED	2
5	33-062-069		LIGHT, DOUBLE AMBER	2
6	33-050-137		TIE, 8" CABLE	2
7	02-050-088		STRAP, TIE DOWN	8
8	33-050-138		TIE, 12" CABLE	4
9	03-023-765		MOUNT, SMV EMBLEM	1
10	03-062-002		HARNESS, 4R WIRING	1
11	33-062-070		RING TERMINAL, 1/2 "	2
12	03-050-068		EMBLEM, SMV	1
13	48-090005		CAPSCREW, 1/4 X 5/8 G5	2
14	78-020040		LOCKNUT, 1/4-20 WHIZ FLANGE PLT	2
15	33-050-267		STRIP, ORANGE FLUOR.	2
16	33-050-266		STRIP, RED REFLECTIVE	2
17	33-050-265		STRIP, YELLOW REFLECTIVE	1
18	03-023-766		BRACKET, LIGHT	2
19	03-027-315		MOUNT, LIGHT	2

*ITEMS 1 THRU 14 MAKE UP 03-081-134 (4R LIGHT KIT LESS MOUNTING BRACKETS)


The following is a list of serial numbers issued to our machines at the beginning of each year. To determine when a unit was made, find the range within which the particular serial number falls. It would have been produced between January 1 to December 31 of that year.

YEAR	SERIAL NUMBERS
1985	27986-29695
1986	29696-31095
1987	31096-33234
1988	33235-35548
1989	35549-38496
1990	38497-41771
1991	41772-44466
1992	44467-47001
1993	47002-48750
1994	48751-51549
1995	51551-54262
1996	54263-56661
1997	56662-59465
1998	59466-62097
1999	62098-63986
2000	63987-65692
2001	65693-67340
2002	67341-68699
2003	68700-70482
2004	70483-72646
2005	72647-74866
2006	74867-76368
2007	76369-



DEPENDABLE EQUIPMENT FOR PROGRESSIVE FARMING

Visit us at www.kelleymfg.com

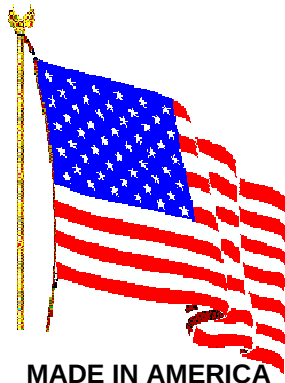

MADE IN AMERICA