



44-SERIES

4400

**POULTRY HOUSE
WASHER/SPRAYER
(WITH HYPRO & JOHN BLUE PUMPS)**

PARTS BOOK




**PART NO. 44-PB-01
PRINTING DATE: JUNE 2021**

TABLE OF CONTENTS

MAIN FRAME, P.H. WASHER/SPRAYER	2-3
STEP	4
MANIFOLD ASSEMBLY	4
VALVE/STRAINER	5
HYPRO PUMPS (1999-2002)	
PLUMBING AND PUMP SHIELDS	6
PUMP/FLOW CONTROL UNIT	7
HIGH PRESSURE DIAPHRAGM	8-10
RELIEF VALVE	11
JOHN-BLUE PUMPS (2003-2010)	
PLUMBING AND PUMP SHIELDS	12-13
DP-392 PUMP/FLOW CONTROL UNIT	13
DP-392 HIGH PRESSURE DIAPHRAGM PUMP	14-15
JOHN-BLUE PUMPS (2011 TO 2015)	
PLUMBING AND PUMP SHIELDS	16-17
DP-392.1 PUMP/FLOW CONTROL UNIT	17
DP-392.1 HIGH PRESSURE DIAPHRAGM PUMP	18-19
JOHN-BLUE PUMPS (2016 TO PRESENT)	
PLUMBING AND PUMP SHIELDS	20-21
DP-407 PUMP/FLOW CONTROL UNIT	21
DP-407.1 HIGH PRESSURE DIAPHRAGM PUMP	22-23
DP-407.2 HIGH PRESSURE DIAPHRAGM PUMP	24-25
FLOW CONTROL UNIT (JOHN BLUE)	26-27
SPRAY BOOM ASSEMBLY	28-29
PLUMBING FOR SPRAY BOOM	29
TANK AND SADDLE ASSEMBLY	30
RETRACTABLE REEL ASSEMBLY	31
SPRAY GUN	32-33
1 3/8" 540 DRIVELINE	34-35





P.H. WASHER/SPRAYER MAIN FRAME
(CAN BE USED WITH JOHN-BLUE OR HYPRO PUMPS)

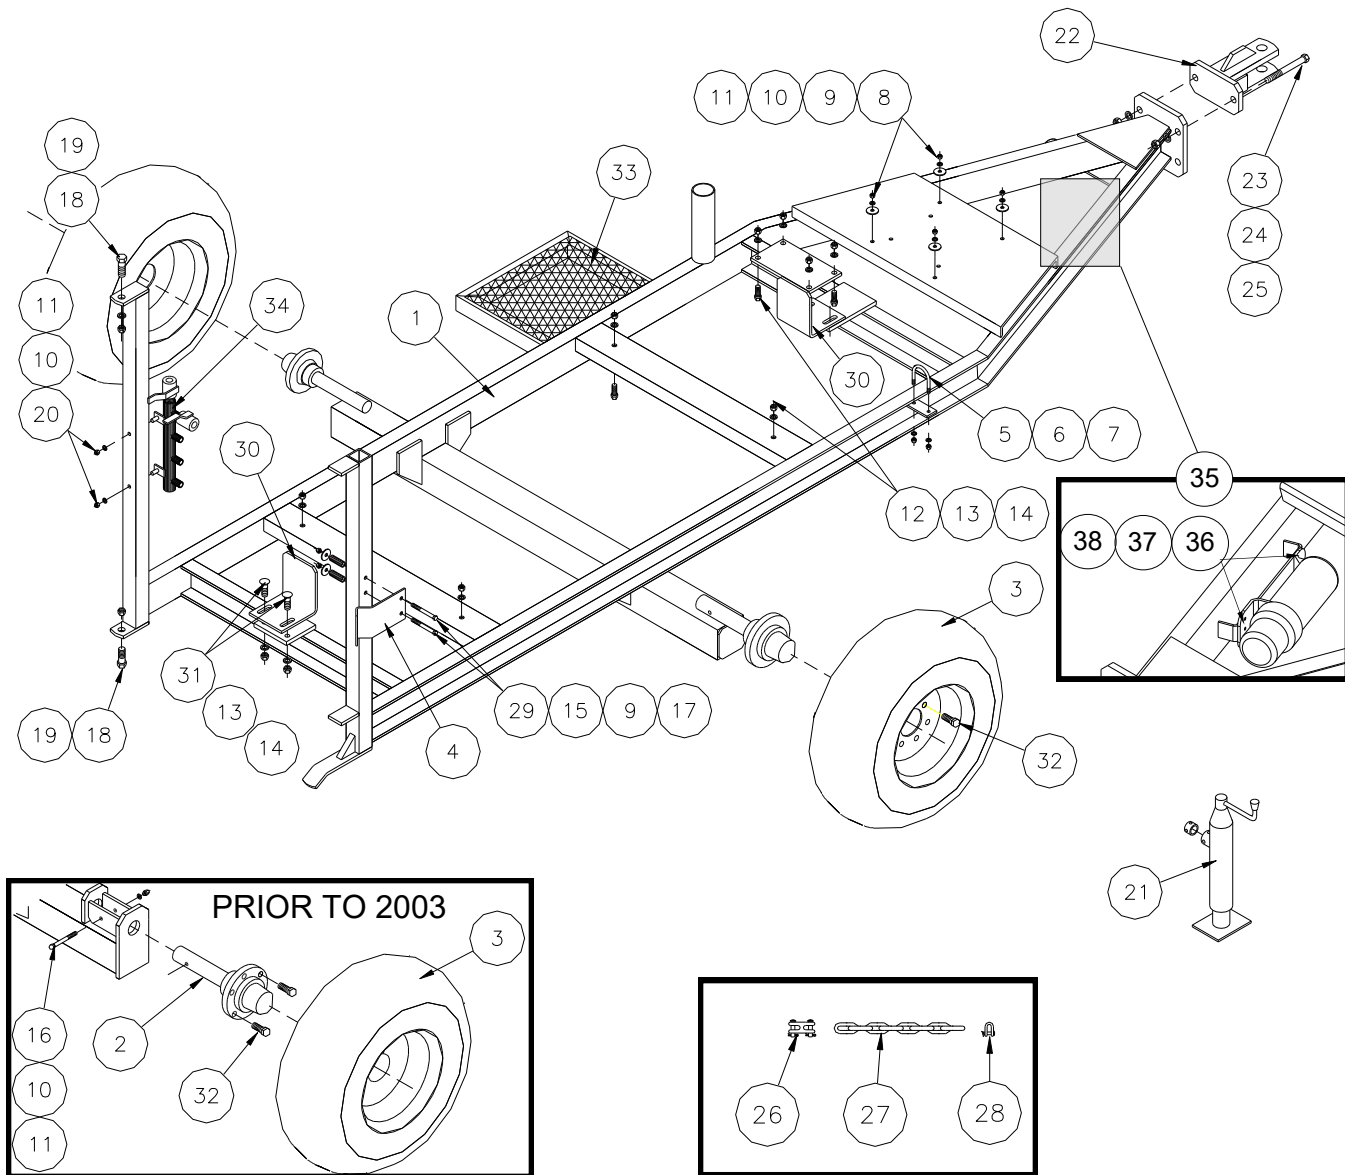


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-080-010		MAIN FRAME, P.H. SPRAYER	1
2	21-058-007	(-2002)	HUB & SPINDLE	(2)
3	44-081-002		TIRE & WHEEL	2
	44-058-001		TIRE (11L X 15SL)	-
	05-058-005		WHEEL, 15X8	-
	18-050-021		STEM, VALVE	-
4	44-023-008		LATCH, BOOM	1
5	44-050-003		"U"-BOLT, 5/16 X 2 X 3	1
6	66-010100		LOCKWASHER, 5/16 PLT	2

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
7	68-010100		HEX NUT, 5/16 PLT	2
8	48-090100		CAPSCREW, 3/8 X 1 G5 PLT	4
9	62-010100		FLATWASHER, 3/8 PLT	6
10	66-010150		LOCKWASHER, 3/8 PLT	8
11	68-010150		HEX NUT, 3/8 PLT	8
12	48-090592		CAPSCREW, 1/2 X 1 1/4 G5 PLT	8
13	66-010250		LOCKWASHER, 1/2 PLT	12
14	68-010250		HEX NUT, 1/2 PLT	12
15	44-050-001		SPRING, 1 1/4 COMPRESSION	2
16	48-090300	(-2002)	CAPSCREW, 3/8 X 3 1/2 G5 PLT	(4)
17	72-010050		LOCKNUT, 3/8 G"B" PLT	2
18	48-091275		CAPSCREW, 3/4 X 2 G5 PLT	2
19	72-010150		LOCKNUT, 3/4 G"B" PLT	2
20	48-090240		CAPSCREW, 3/8 X 2 3/4	2
21	44-050-004		JACKSTAND	1
22	44-080-019		HITCH YOKE	1
23	48-091300		CAPSCREW, 3/4 X 2 1/4 G5 PLT	2
24	66-010350		LOCKWASHER, 3/4 PLT	2
25	68-010350		HEX NUT, 3/4 PLT	2
26	33-050-139		LINK, 3/8 DOUBLE CLEVIS	1
27	33-050-140		CHAIN, 27 LINK SAFETY	1
28	33-050-181		SHACKLE, 3/8 CHAIN	1
29	48-090315		CAPSCREW, 3/8 X 4 G5 PLT	2
30	44-023-027		STOP, TANK	2
31	52-050140		CARRIAGE SCREW, 1/2 X 1 1/2 G5 P	4
32	02-058-004		WHEEL BOLT, 1/2 N F	6
33	44-081-011		STEP	1
34	44-081-003		MANIFOLD ASSEMBLY	1
35	49-050-012		CANISTER, MANUAL	1
36	80-080000		#12 X 1 HEX SELF DRIVE	2
37	62-010010		FLATWASHER, 1/4 REG PLT	2
38	72-010055		LOCKNUT, 1/4 NYLON INSERT	2

STEP
(44-081-011)

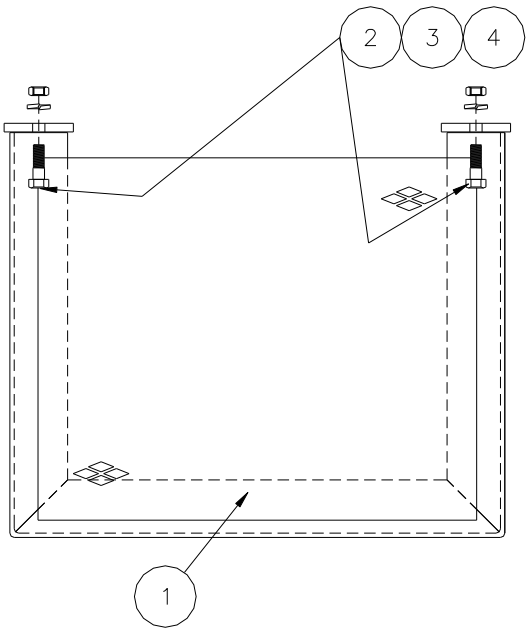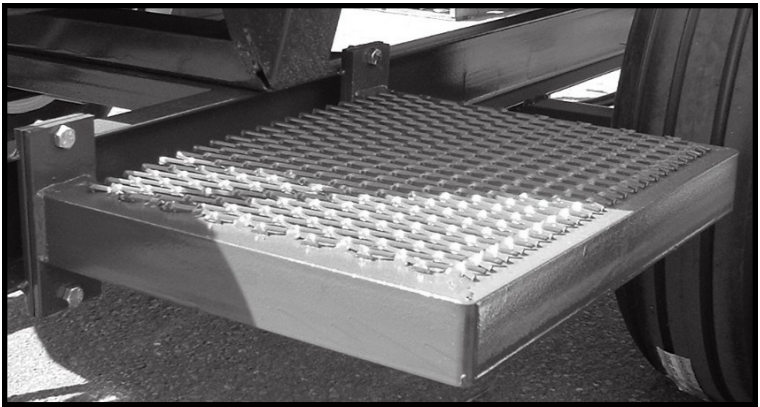


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-080-022		STEP	1
2	48-090595		CAPSCREW, 1/2 X 1 1/2 G5 PLT	4
3	66-010250		LOCKWASHER, 1/2 PLT	4
4	68-010250		HEX NUT, 1/2 PLT	4

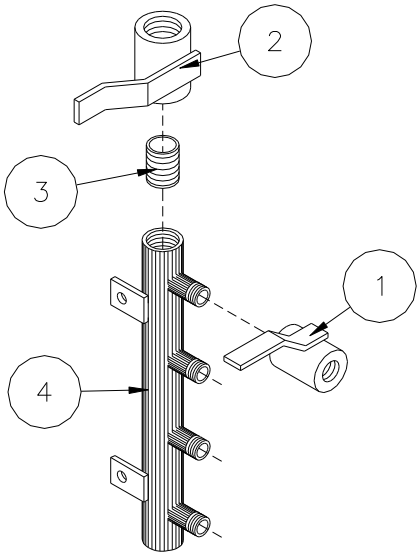

MANIFOLD ASSEMBLY
(44-081-003)


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-011		VALVE, 3/8" BRASS BALL	4
2	44-060-012		VALVE, 1/2" BRASS BALL	1
3	44-060-020		NIPPLE, 1/2" X 1 1/2" STL STEEL	1
4	44-080-006		MANIFOLD, DISTRIBUTION	1

VALVE/STRAINER
(44-081-004)(-2002)

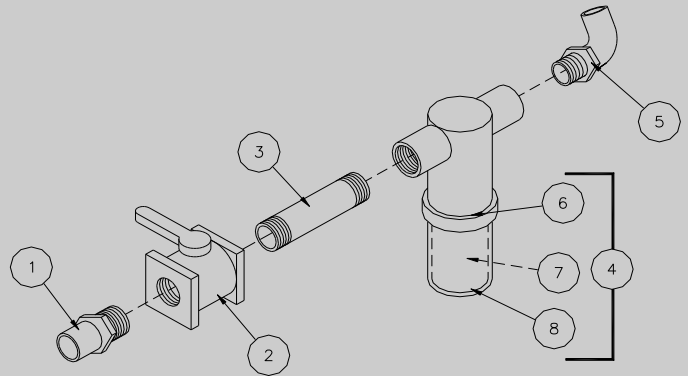


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-005	(-2002)	NIPPLE, 1 1/2" NYLON HOSE	1
2	44-060-003	(-2002)	VALVE, 1 1/2" BALL	1
3	44-059-003	(-2002)	NIPPLE, 1 1/2" X 4"	1
4	44-060-002	(-2002)	STRAINER, 1 1/2 LINE	1
5	44-060-006	(-2002)	NIPPLE, 1 1/2 90° NYLON	1
*6	20-060-040	(-2002)	GASKET, STRAINER	1
*7	44-060-260	(-2002)	SCREEN, STRAINER	1
*8	44-060-261	(-2002)	BOWL, STRAINER	1

* These Items Make Up Item 4 (44-060-002)

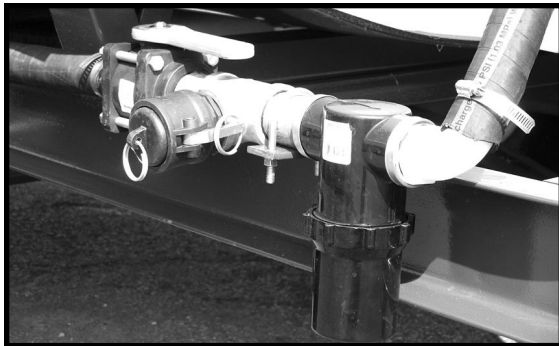


2003 VALVE/STRAINER
(44-081-010)(2003-)

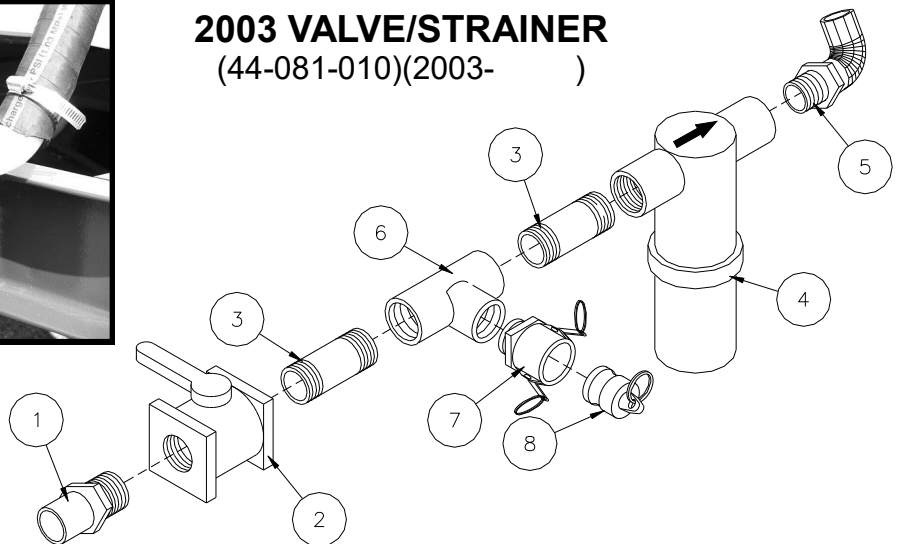

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-005		NIPPLE, 1 1/2" NYLON HOSE	1
2	44-060-003		VALVE, 1 1/2" BALL	1
3	44-050-014		NIPPLE, 1 1/2" X 3"	2
4	44-060-002		STRAINER, 1 1/2 LINE	1
5	44-060-006		NIPPLE, 1 1/2 90° NYLON	1
6	44-050-013		TEE, 1 1/2" GALV	1
7	44-060-270		FEMALE COUPLER/MALE THD	1
8	44-060-269		PLUG, 1 1/2"	1


PLUMBING AND PUMP SHIELDS (HYPRO) (1999-2002)

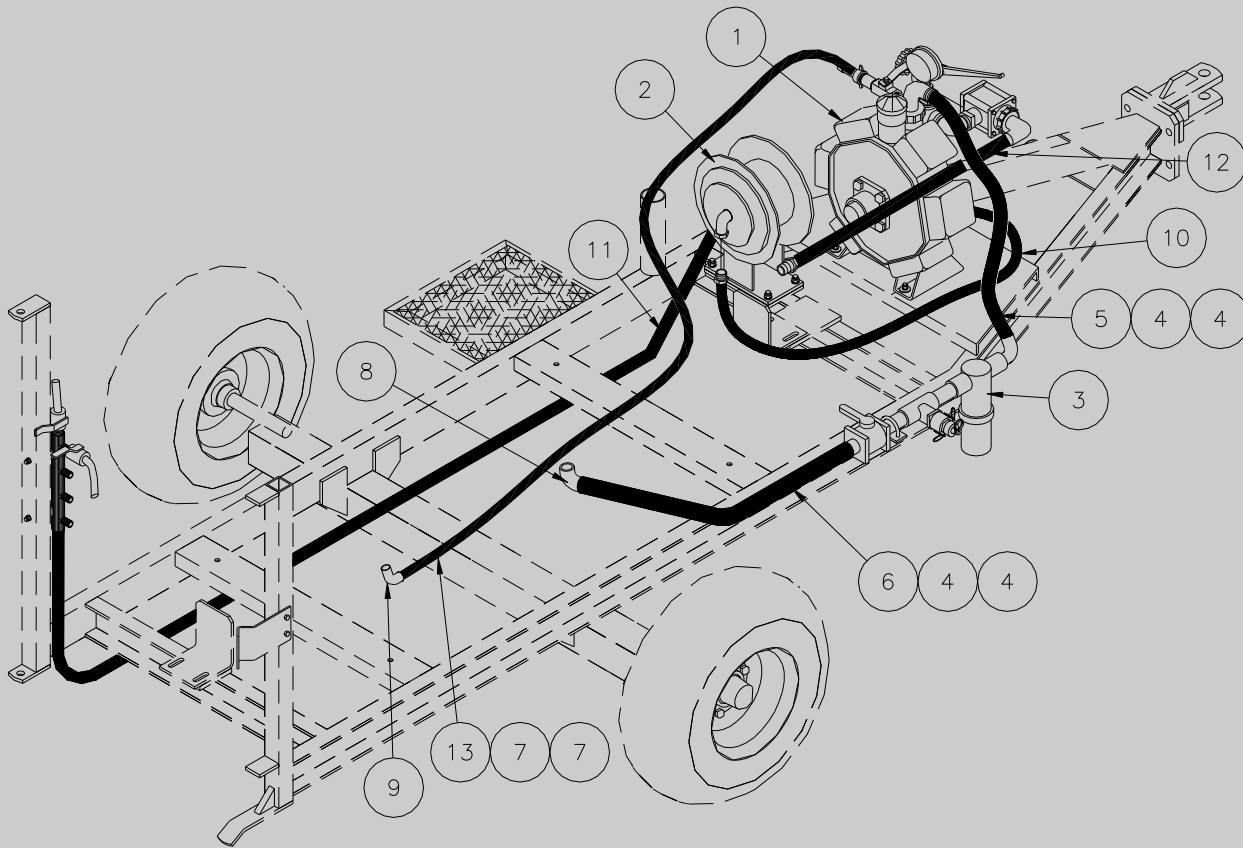

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-081-008		PUMP/FLOW CONTROL UNIT	(1)
2	44-081-006		RETRACTABLE REEL ASSEMBLY	(1)
3	44-081-004		VALVE/STRAINER ASSEMBLY	(1)
4	44-060-009		CLAMP, 1/2 X 2 1/4" HOSE	(4)
5	44-059-021		SUCTION HOSE, 1 1/2" X 35"	(1)
6	44-059-018		SUCTION HOSE, 1 1/2" X 40"	(1)
7	09-050-006		CLAMP, HOSE	(2)
8	44-060-021		NIPPLE, 1 1/4 X 1 1/2 90° NYLON	(1)
9	44-060-008		NIPPLE, 3/4" 90° NYLON	(1)
10	44-059-012		HOSE, 1/2" X 48"	(1)
11	44-059-014		HOSE, 3/4" X 136"	(1)
12	44-060-007		NIPPLE, 1" NYLON HOSE	(1)
13	44-059-020		HOSE, 1/2" X 100"	(1)

PUMP/FLOW CONTROL UNIT (HYPRO)


(44-081-008) (1999-2002)

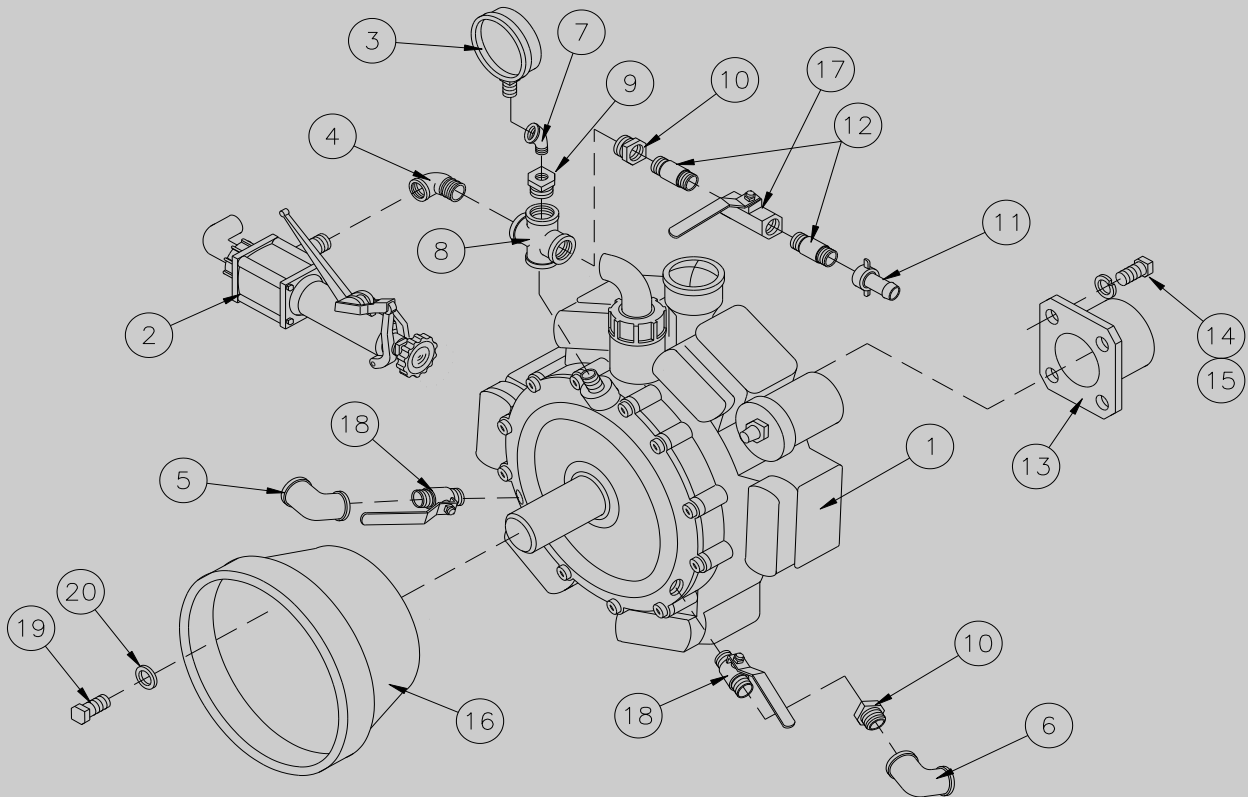

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-156	(1999-2002)	PUMP, HIGH PRESSURE DIAPHRAGM	1
2	44-060-158	(1999-2002)	VALVE, RELIEF	1
3	44-060-157	(1999-2002)	GAUGE, PRESSURE	1
4	42-050-008	(1999-2002)	ELBOW, 3/4" 90° STREET (GALV)	1
5	44-059-008	(1999-2002)	ELBOW, 1/2" 45° (GALV)	1
6	44-050-017	(1999-2002)	ELBOW, 3/4" 90° (GALV)	1
7	44-059-025	(1999-2002)	ELBOW, 1/4" 45° (GALV)	1
8	44-059-022	(1999-2002)	CROSS, 3/4" (GALV)	1
9	44-059-026	(1999-2002)	BUSHING, 3/4 X 1/4 (GALV)	1
10	42-050-004	(1999-2002)	BUSHING, 3/4 X 1/2 NPT	2
11	44-059-024	(1999-2002)	BARB, 1/2" HOSE	1
12	07-050-002	(1999-2002)	NIPPLE, 1/2 X 1 1/2 (GALV)	2
13	44-080-020	(1999-2002)	SHIELD, PUMP REAR (99)	1
14	48-050190	(1999-2002)	CAPSCREW, 10MM X 15MM	4
15	66-010200	(1999-2002)	LOCKWASHER, 7/16 PLT	4
16	44-060-258	(1999-2002)	SHIELD, PUMP FRONT	1
17	44-060-012	(1999-2002)	VALVE, OUTLET BALL	1
18	44-060-012	(1999-2002)	VALVE, 1/2" BRASS BALL	2
19	44-060-231	(1999-2002)	BOLT	4
20	44-060-246	(1999-2002)	WASHER	4

HIGH PRESSURE DIAPHRAGM PUMP (HYPRO)

(44-060-156) (1999-2002)

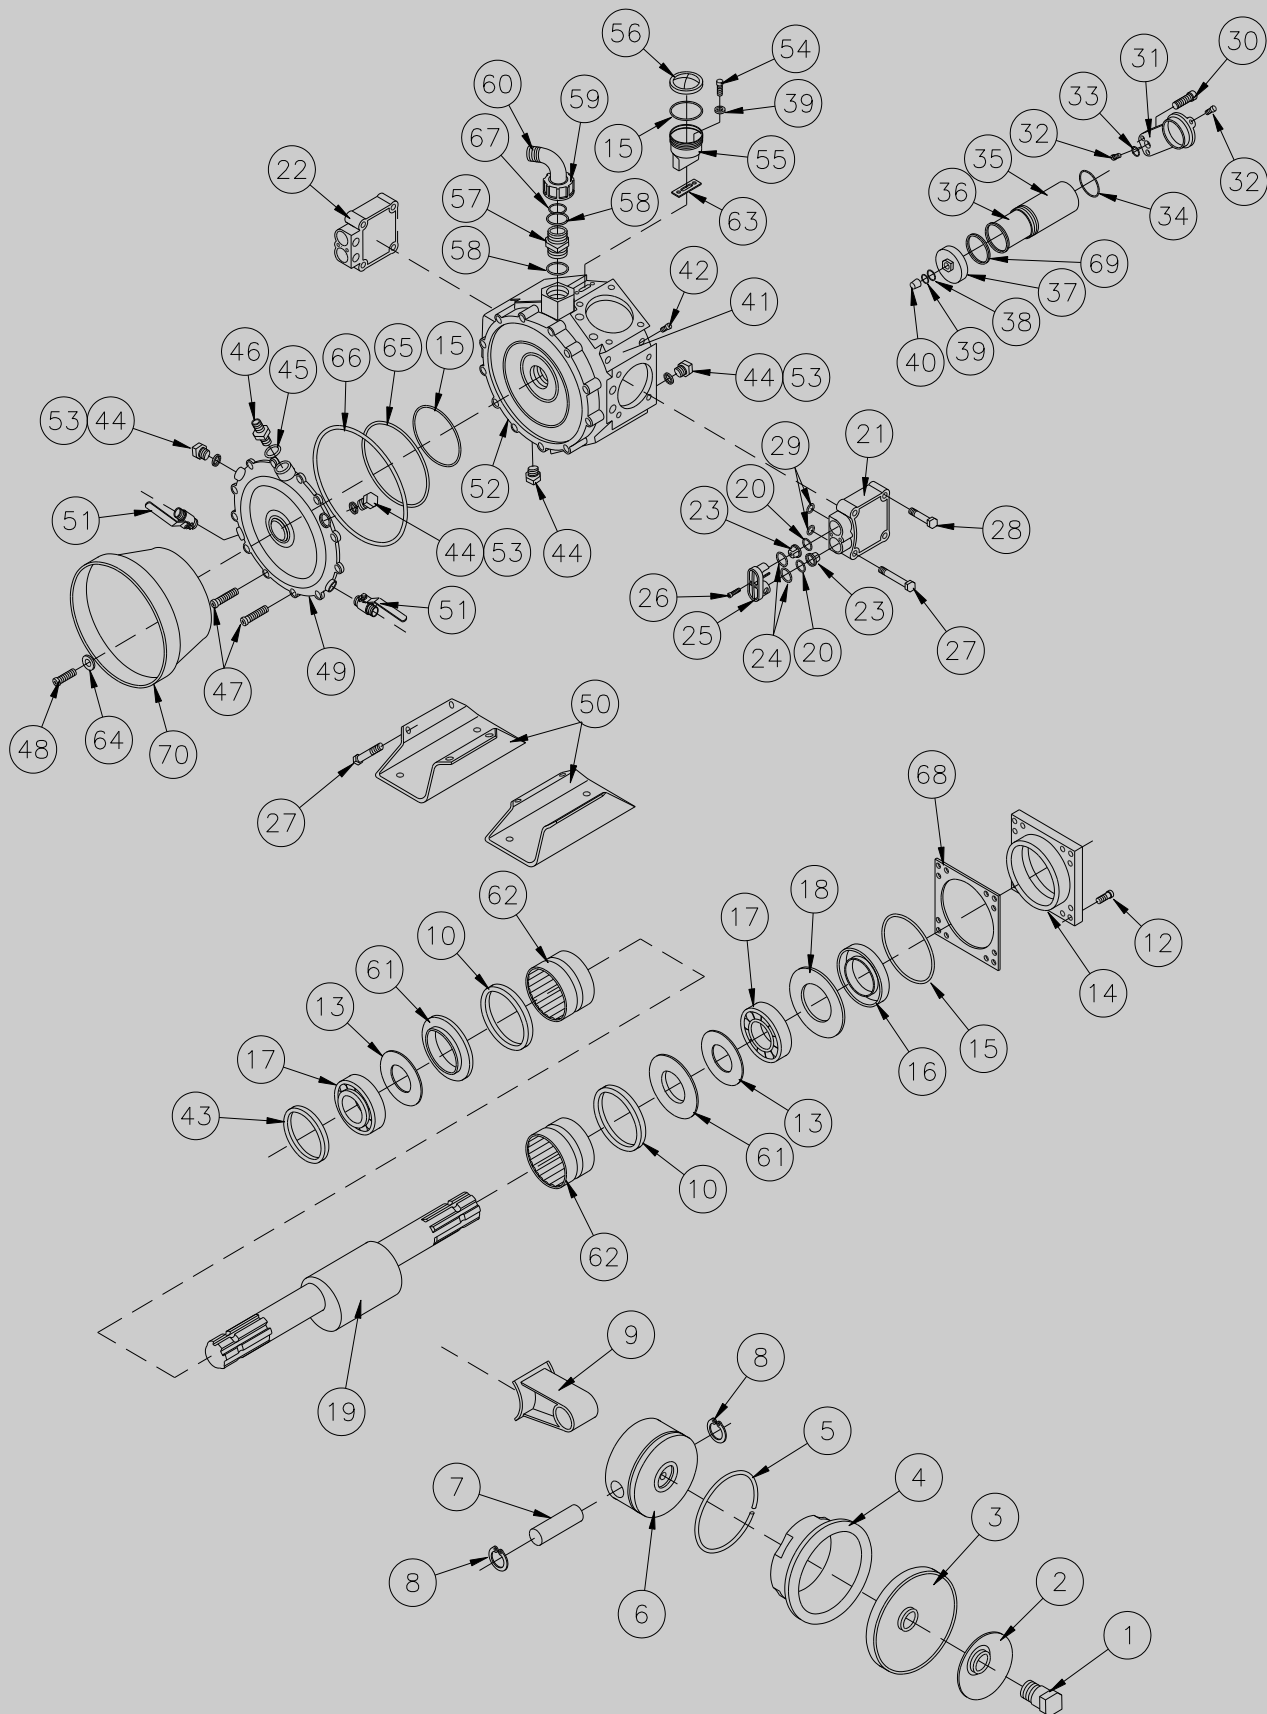

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-184	(1999-2002)	BOLT, DIAPHRAGM	6
2	44-060-185	(1999-2002)	WASHER, DIAPHRAGM RETAINER	6
3	44-060-186	(1999-2002)	DIAPHRAGM, DESMOPAN	6
4	44-060-187	(1999-2002)	SLEEVE, PISTON	6
5	44-060-188	(1999-2002)	RING, PISTON	6
6	44-060-189	(1999-2002)	PISTON	6
7	44-060-190	(1999-2002)	PIN, CONNECTING	6
8	44-060-191	(1999-2002)	RING, SNAP	12
9	44-060-192	(1999-2002)	ROD, CONNECTING	6
10	44-060-193	(1999-2002)	RING, RETAINING	2
12	44-060-195	(1999-2002)	BOLT	8
13	44-060-196	(1999-2002)	SPACER	1
14	44-060-197	(1999-2002)	FLANGE	1
15	44-060-198	(1999-2002)	O-RING	3
16	44-060-199	(1999-2002)	SEAL,OIL	1
17	44-060-200	(1999-2002)	BEARING	2
18	44-060-201	(1999-2002)	SPACER	1
19	44-060-202	(1999-2002)	CRANKSHAFT	1
20	44-060-204	(1999-2002)	O-RING	12
21	44-060-206	(1999-2002)	HEAD, RIGHT	3
22	44-060-205	(1999-2002)	HEAD, LEFT	3
23	44-060-207	(1999-2002)	ASSEMBLY, VALVE	12
24	44-060-208	(1999-2002)	O-RING	12
25	44-060-209	(1999-2002)	RETAINER VALVE	6
26	44-060-210	(1999-2002)	BOLT	12
27	44-060-211	(1999-2002)	BOLT	20
28	44-060-212	(1999-2002)	BOLT	4
29	44-060-213	(1999-2002)	O-RING	12
30	44-060-214	(1999-2002)	BOLT	1
31	44-060-215	(1999-2002)	END CAP	1
32	44-060-216	(1999-2002)	BOLT	2
33	44-060-217	(1999-2002)	O-RING	1
34	44-060-218	(1999-2002)	O-RING	1
35	44-050-219	(1999-2002)	BODY, DAMPENER	1

Continued on next page


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
36	44-060-203	(1999-2002)	DIAPHRAGM	1
37	44-060-220	(1999-2002)	CAP	1
38	44-060-221	(1999-2002)	O-RING	1
39	44-060-222	(1999-2002)	O-RING	3
40	44-060-223	(1999-2002)	AIR VALVE	1
41	44-060-224	(1999-2002)	ASSEMBLY, PULSATION DAMPENER	1
42	44-060-225	(1999-2002)	PLUG	1
43	44-060-226	(1999-2002)	SEAL, OIL	1
44	44-060-227	(1999-2002)	PLUG	2
45	44-060-228	(1999-2002)	O-RING	1
46	44-060-229	(1999-2002)	ADAPTER, 3/4 NPT	1
47	44-060-230	(1999-2002)	BOLT	18
48	44-060-231	(1999-2002)	BOLT	3
49	44-060-232	(1999-2002)	MANIFOLD	1
50	44-060-255	(1999-2002)	BASE	2
51	44-060-233	(1999-2002)	BALL VALVE, OUTLET W/O BARB	1
52	44-060-234	(1999-2002)	BODY	1
53	44-060-235	(1999-2002)	O-RING	1
54	44-060-236	(1999-2002)	BOLT	2
55	44-060-237	(1999-2002)	OIL RESERVOIR	1
56	44-060-238	(1999-2002)	CAP	1
57	44-060-239	(1999-2002)	ADAPTER	1
58	44-060-240	(1999-2002)	O-RING	2
59	44-060-241	(1999-2002)	WING NUT	1
60	44-060-242	(1999-2002)	HOSE BARB	1
61	44-060-243	(1999-2002)	SPACER	2
62	44-060-244	(1999-2002)	BEARING	2
63	44-060-245	(1999-2002)	GASKET	1
64	44-060-246	(1999-2002)	WASHER	1
65	44-060-247	(1999-2002)	O-RING	1
66	44-060-248	(1999-2002)	O-RING	1
67	44-060-249	(1999-2002)	O-RING	1
68	44-060-250	(1999-2002)	SPACER, 0.1MM	1
69	44-060-252	(1999-2002)	WASHER, DAMPENER	1
70	44-060-258	(1999-2002)	SHIELD, PUMP FRONT	1

* These Parts Make-up Diaphragm Kit (44-060-254) + These Parts Make-up Valve Kit (44-060-253)

^These Parts Make-up O-ring Parts Kit (44-060-256)


RELIEF VALVE (HYPRO)

(44-060-158) (1999-2002)

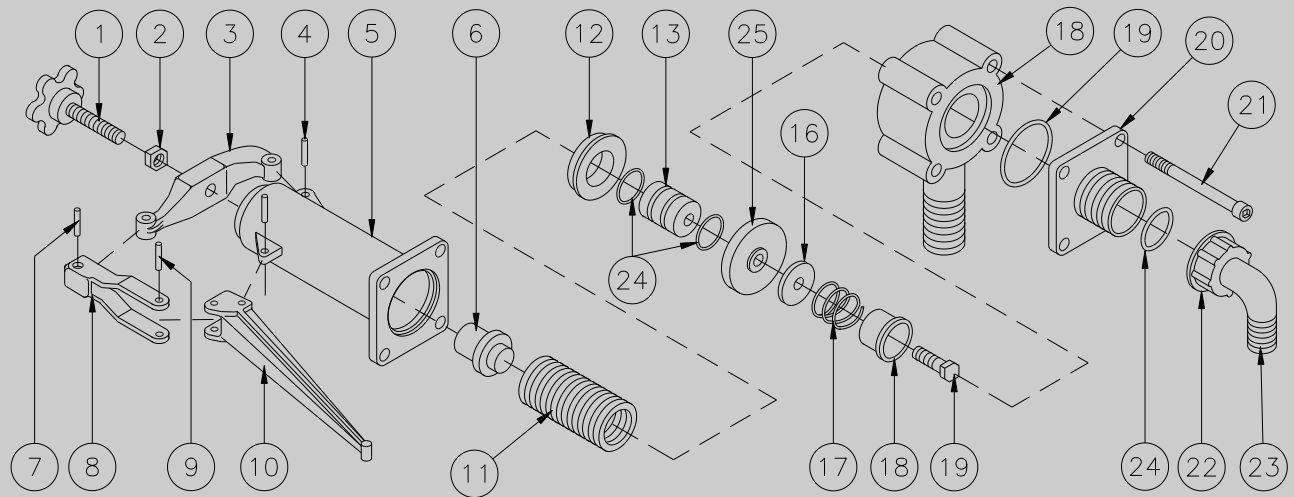

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-159	(1999-2002)	ADJUSTMENT CONTROL KNOB	1
2	44-060-160	(1999-2002)	LOCK NUT	1
3	44-060-161	(1999-2002)	TENSION ADJUSTMENT SUPPORT	1
4	44-060-162	(1999-2002)	SUPPORT PIN	1
5	44-060-163	(1999-2002)	SPRING HOUSING	1
6	44-060-164	(1999-2002)	TENSION SPRING GUIDE	1
7	44-060-165	(1999-2002)	LEVEL GUIDE PIN	1
8	44-060-166	(1999-2002)	LEVEL GUIDE	1
9	44-060-167	(1999-2002)	ROLL PIN	1
10	44-060-168	(1999-2002)	RELIEF VALVE LEVER ASSEMBLY	1
11	44-060-169	(1999-2002)	TENSION SPRING	1
12	44-060-170	(1999-2002)	PISTON VALVE SEAT	1
13	44-060-171	(1999-2002)	PISTON VALVE	1
14	44-060-172	(1999-2002)	RELIEF VALVE SEAT	11
15	44-060-173	(1999-2002)	SPRING	1
16	44-060-174	(1999-2002)	RELIEF VALVE SEAT RETAINER	1
17	44-060-175	(1999-2002)	BOLT	1
18	44-060-176	(1999-2002)	BODY	1
19	44-060-177	(1999-2002)	O-RING	1
20	44-060-178	(1999-2002)	FLANGE FITTING	1
21	44-060-179	(1999-2002)	BOLT	4
22	44-060-180	(1999-2002)	BARB NUT	1
23	44-060-181	(1999-2002)	90° ELBOW BARB	1
24	44-060-182	(1999-2002)	O-RING	6
25	44-060-183	(1999-2002)	DIAPHRAGM POPPET	1


PLUMBING AND PUMP SHIELDS (JOHN-BLUE) (2003-2010)

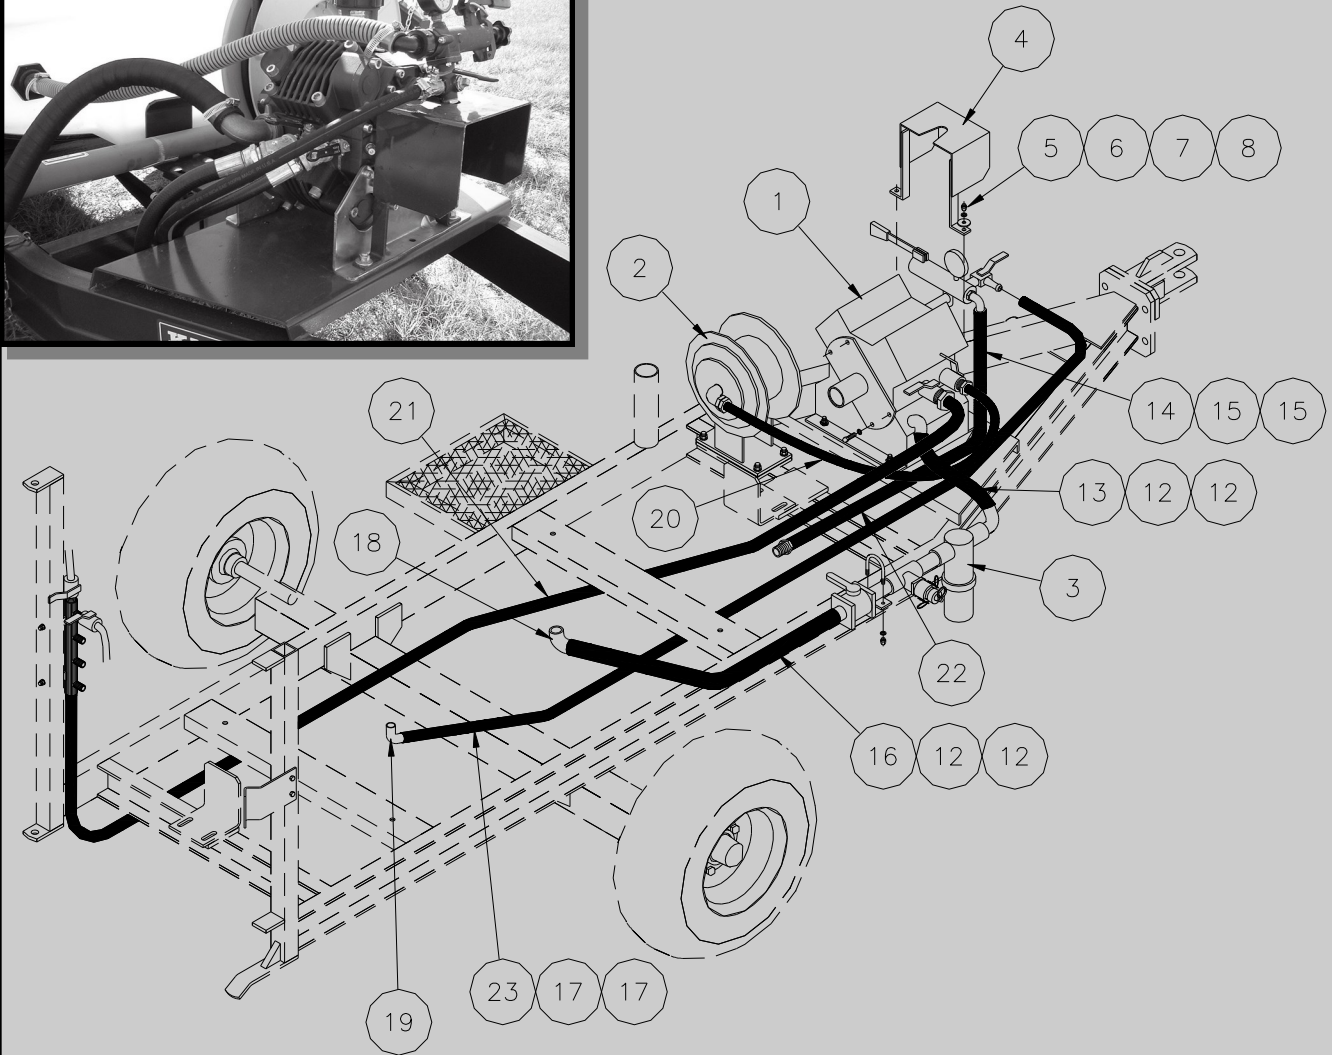

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-081-005		DP-392 PUMP/FLOW CONTROL UNIT	1
2	44-081-006		RETRACTABLE REEL ASSEMBLY	1
3	44-081-004	(-2002)	VALVE/STRAINER ASSEMBLY	(1)
	44-081-010	(2003-)	VALVE/STRAINER ASSEMBLY	1
4	44-080-017		SHIELD, FRONT (JOHN BLUE)	1
5	48-090170		CAPSCREW, 3/8 X 1 1/2 G5 PLT	2
6	62-010100		FLATWASHER, 3/8 PLT	2
7	66-010150		LOCKWASHER, 3/8 PLT	2
8	68-010150		HEX NUT, 3/8 PLT	2
9	44-080-018		SHIELD, REAR PUMP	1
10	48-050180		CAPSCREW, 8MM X 20MM	4

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
11	66-010100		LOCKWASHER, 5/16 PLT	4
12	44-060-009		CLAMP, 1/2 X 2 1/4" HOSE	4
13	44-059-019		SUCTION HOSE, 1 1/2" X 24"	1
14	44-059-016		HOSE, 1" X 48"	1
15	44-060-010		CLAMP, 1/2 X 1 1/4"-1 1/2" HOSE	2
16	44-059-018		SUCTION HOSE, 1 1/2" X 40"	1
17	09-050-006		CLAMP, HOSE	2
18	44-060-021		NIPPLE, 1 1/4 X 1 1/2 90° NYLON	1
19	44-060-008		NIPPLE, 3/4" 90° NYLON	1
20	44-059-012		HOSE, 1/2" X 48"	1
21	44-059-014		HOSE, 3/4" X 136"	1
22	44-060-007		NIPPLE, 1" NYLON HOSE	1
23	44-059-020		HOSE, 1/2" X 100"	1


DP-392 PUMP/FLOW CONTROL UNIT (JOHN-BLUE)
(44-081-005) (2003-2010)

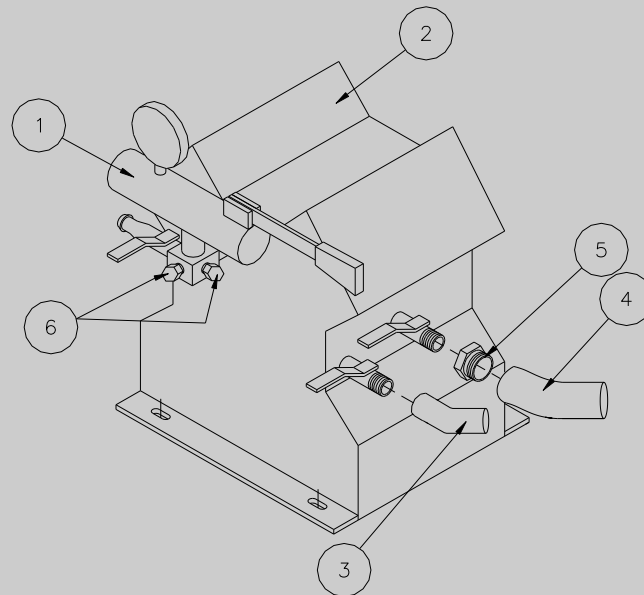

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-015		UNIT, FLOW CONTROL	1
2	44-060-014		PUMP, HIGH PRESSURE DIAPHRAM	1
3	44-059-008		ELBOW, 1/2" 45°	1
4	44-059-007		ELBOW, 3/4" 45°	1
5	42-050-004		BUSHING, 3/4" X 1/2"	1
6	44-059-006		PLUG, 3/8 GALV.	2

DP-392 HIGH PRESSURE DIAPHRAGM PUMP (JOHN BLUE)

(44-060-014) (2003 TO 2010)

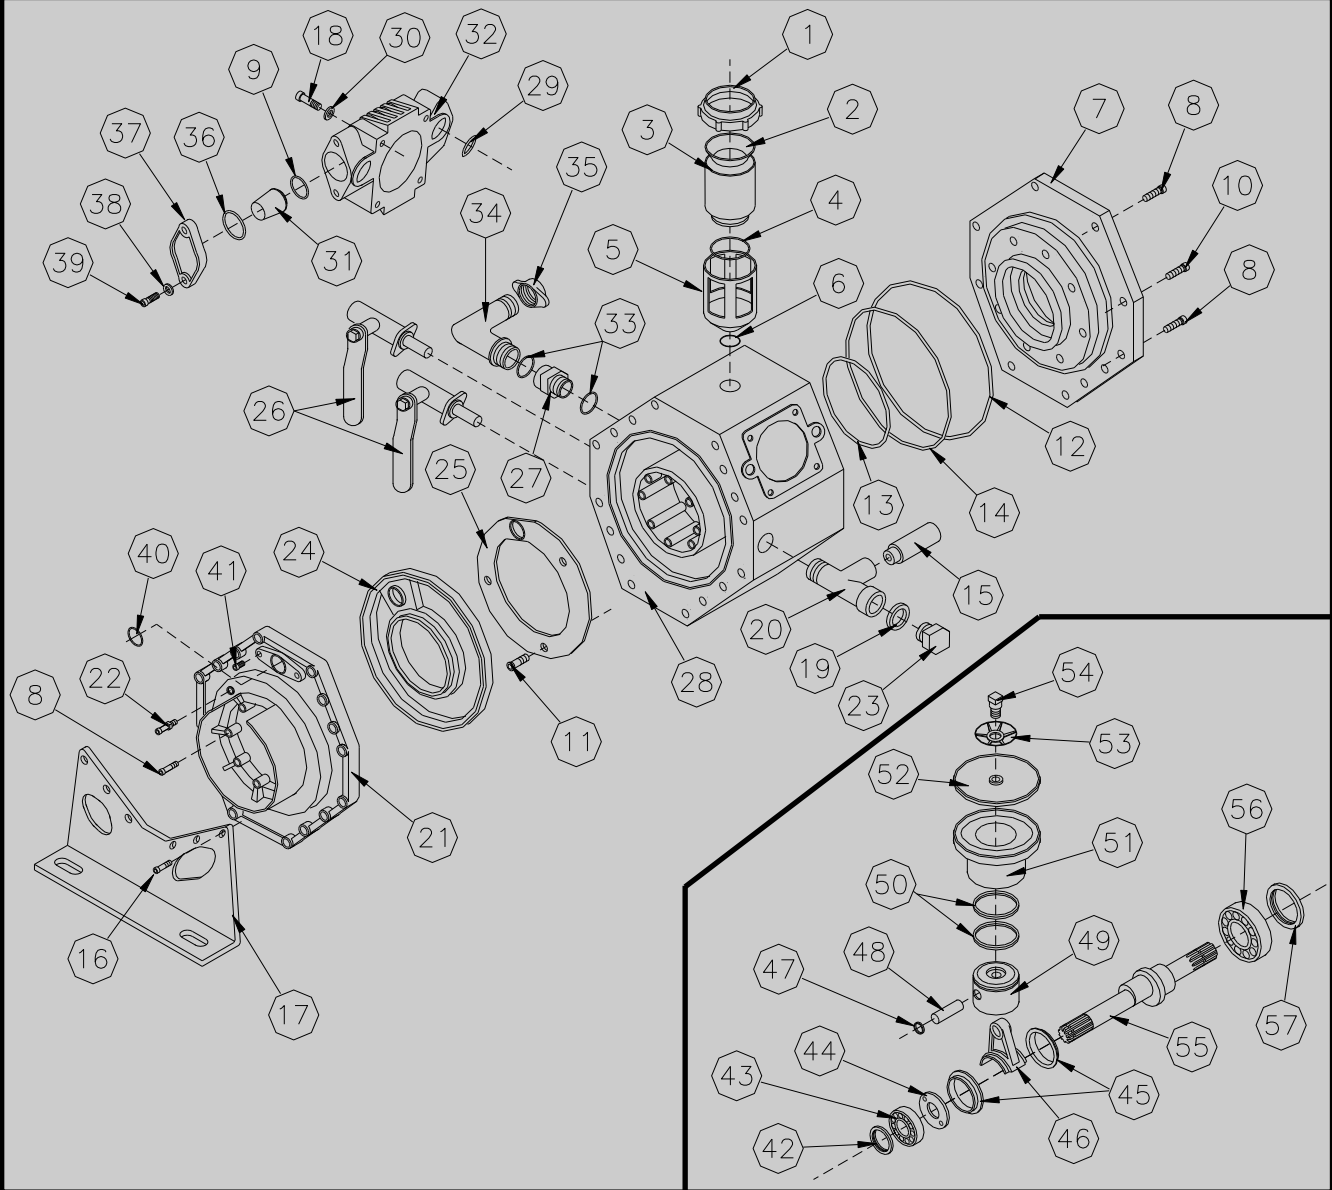

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-022		OIL FILLER CAP	1
^2	44-060-023		DIAPHRAGM	1
3	44-060-024		OIL FILLER	1
^4	44-060-025		ORING T2, 62 X 44, 12	1
5	44-060-026		BOWL OIL FILLER	1
6	44-060-030		GASKET	1
7	44-060-027		CRANKCASE COVER (SUCTION SIDE)	1
8	44-060-028		SCREW, 8 X 35	32
^+9	44-060-029		O-RING DIA 3, 53 X 32, 93	8
10	44-060-031		SCREW, M8 X 30	4
11	44-060-032		M6X10 FLATHEAD SCREW	3
^12	44-060-033		O-RING D3, 53 X 177, 39	1
^13	44-060-034		O-RING D3, 53 X 88, 5	1
^14	44-060-035		O-RING D2, 62X126, 67	1
15	44-060-036		SAFETY VALVE	1


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
16	44-060-037		SCREW, M 8X40	8
17	44-060-038		MOUNTING BRACKET	2
18	44-060-039		SCREW, M 12X60	16
19	44-060-040		COPPER GASKET	1
20	44-060-041		3/8 FEMALE-MALE TEE	1
21	44-060-042		CRANKCASE COVER (DISCHG SIDE)	1
22	44-060-043		G 1/8 VALVE WITH O-RING	1
23	44-060-044		PLUG G 3/8	1
^24	44-060-045	(-2008)	BALLASTER DIAPHRAGM	(1)
	44-060-271	(2009-)	DIAPHRAGM DAMPENER	1
25	44-060-046		BALLASTER PLATE	1
26	44-060-092		SPRAY VALVE, "S"	2
27	44-060-048		FITTING SEAT	1
28	44-060-049		PUMP CRANKCASE	1
^29	44-060-050		O-RING DIA.2, 62X22, 22	8
30	44-060-051		SONORR WASHER D.13	16
+31	44-060-052		VALVE ASSEMBLY	8
32	44-060-053		HEAD	4
^33	44-060-054	(-2008)	O-RING D.32, 99X2, 62	(2)
	44-060-272	(2009-)	O-RING	2
34	44-060-055	(-2008)	90° ELBOW D.32 MM TAIL	(1)
	44-060-273	(2009-)	90° HOSE BARB	1
35	44-060-056	(-2008)	WING NUT M48	(1)
	44-060-274	(2009-)	NUT	1
^+36	44-060-057		O-RING 3, 53X41, 28	8
37	44-060-058		END COVER	8
38	44-060-059		WASHER 10, 5X16X1, 5	16
39	44-060-060		SCREW, M10X25	16
^40	44-060-061		ORING DIA, 3X22	1
41	44-060-063		SCREW M6X22	2
^42	44-060-065		O-RING, 35X52X7	1
43	44-060-066		BALL BEARING	1
44	44-060-067		SPACER RING	1
45	44-060-068		CONNECTING ROD RING	2
46	44-060-069		CONROD (SET OF 4)	1
47	44-060-070		RETAINING RING	8
48	44-060-071		PISTON PIN D.15 MM	4
49	44-060-072		PISTON	4
50	44-060-073		PISTON RING	8
51	44-060-074		PISTON SLEEVE	4
^*52	44-060-075		PISTON DIAPHRAGM	4
53	44-060-076		DIAPHRAGM CAP	4
54	44-060-077		DIAPHRAGM CLAMPING BOLT	4
55	44-060-078		CRANKSHAFT	1
56	44-060-079		BALL BEARING	1
^57	44-060-080		ROUND RING	1

* These Parts Make-up **Diaphragm Parts Kit** (44-081-007)

+ These Parts Make-up **Valve Kit** (44-060-082)

^ These Parts Make-up **Pump Repair Kit** (44-060-081)

DP-392.1 PLUMBING AND PUMP SHIELDS (JOHN-BLUE) (2011 TO 2015)

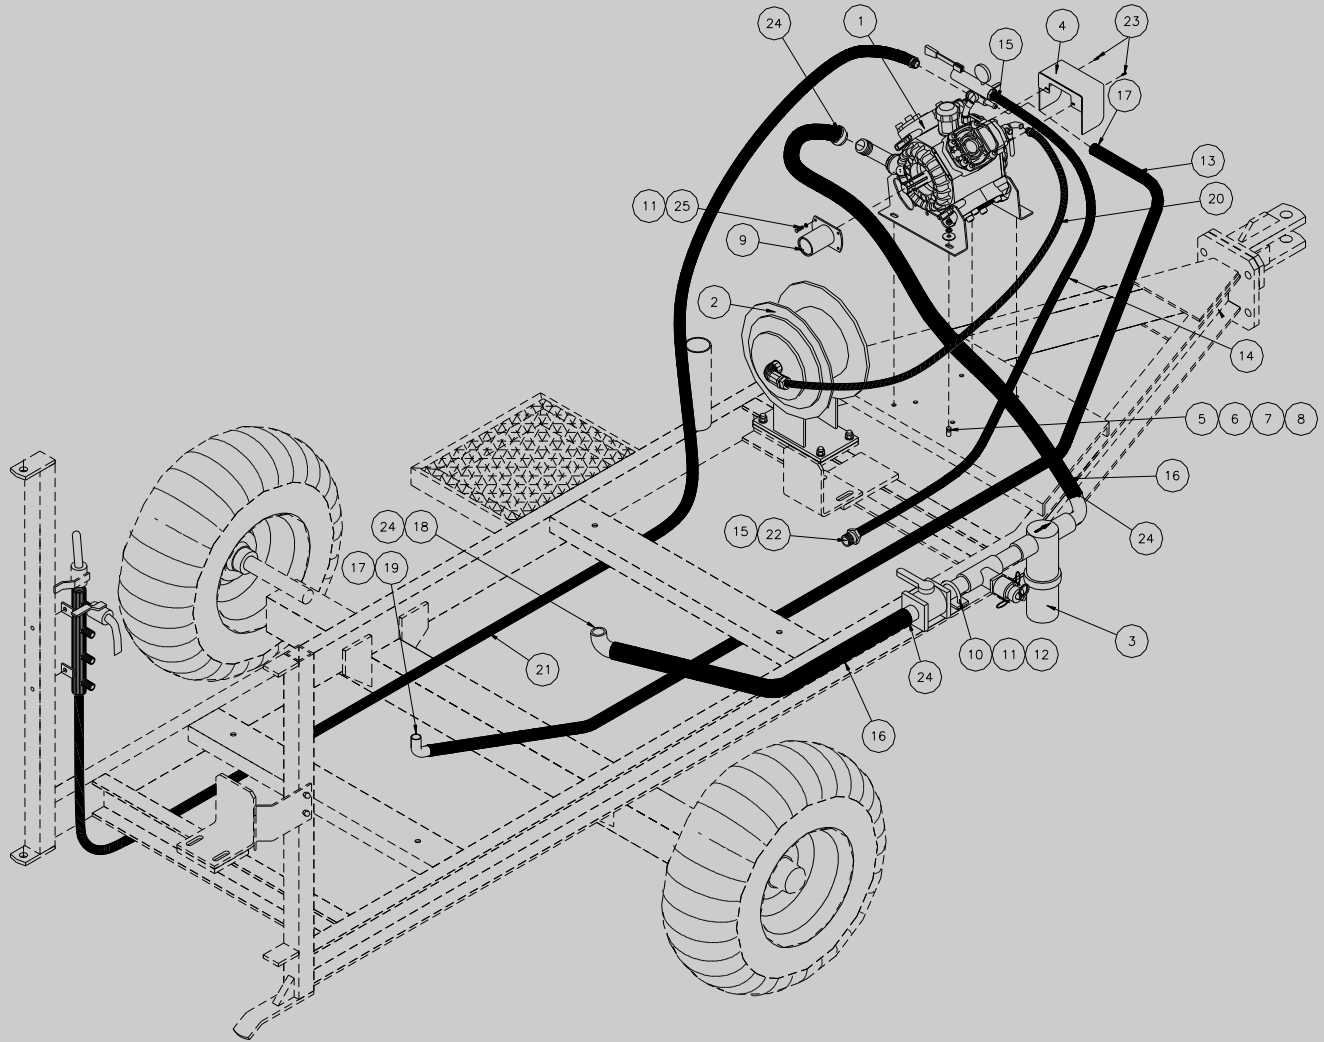

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-081-012		DP-392.1 PUMP/FLOW CONTROL UNIT	1
2	44-081-006		RETRACTABLE REEL ASSEMBLY	1
3	44-081-010		VALVE/STRAINER ASSEMBLY	1
4	44-080-023		SHIELD, FRONT (JOHN BLUE)	1
5	48-090170		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
6	62-010100		FLATWASHER, 3/8 PLT	4
7	66-010150		LOCKWASHER, 3/8 PLT	4
8	68-010150		HEX NUT, 3/8 PLT	4
9	44-080-024		SHIELD, REAR PUMP	1
10	44-050-003		U-BOLT, 5/16 X 2 X 3	1
11	66-010100		LOCKWASHER, 5/16 PLT	2
12	68-010100		HEXNUT, 5/16 PLT	2
13	44-059-020		HOSE, 1/2" X 100"	1


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
14	44-059-016		HOSE, 1" X 48"	1
15	44-060-010		CLAMP, 1/2 X 1 1/4"-1 1/2" HOSE	2
16	44-059-018		SUCTION HOSE, 1 1/2" X 41"	2
17	20-050-003		HOSE CLAMP, #8 1/2 X 29/32	2
18	44-060-021		NIPPLE, 1 1/4 X 1 1/2 90° NYLON	1
19	44-060-008		NIPPLE, 3/4" 90° NYLON	1
20	44-059-012		HOSE, 1/2" X 48"	1
21	44-059-014		HOSE, 3/4" X 136"	1
22	44-060-007		NIPPLE, 1" NYLON HOSE	1
23	80-079000		#12 X 3/4" SELF DRILL & TAP SCREW.	2
24	44-060-009		CLAMP, 1/2 X 2 1/4" HOSE	4
25	48-050180		CAPSCREW, 8MM X 16MM	4

DP-392.1 PUMP/FLOW CONTROL UNIT (JOHN-BLUE) (44-081-012) (2011 TO 2015)

As a general rule, set pulsation dampener to 1/3 the working pressure without exceeding **100 psi**.

For example:


If the pump will be operated from **300-700 PSI**, the pulsation dampener pressure should be set **100 PSI**. Check with air gauge and set to 100 PSI.

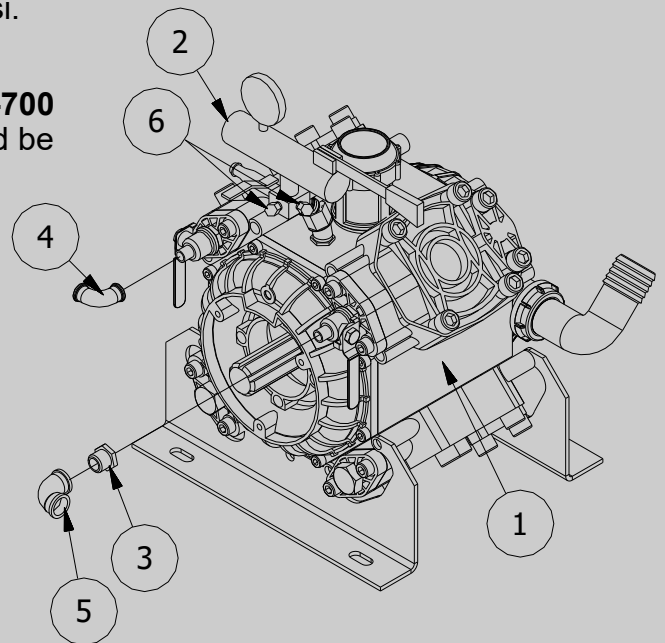

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-275		DIAPHRAGM PUMP, DP-392.1	1
2	44-060-015		UNIT, FLOW CONTROL	1
3	44-060-047		SPRAY VALVE, "D"	1
4	44-060-092		SPRAY VALVE, "S"	1
5	42-050-004		BUSHING, 3/4"-1/2" REDUCER	1
6	02-050-147		ELBOW, 1/2" REG 90°	1
7	42-050-017		ELBOW, 3/4" REG 90°	1
8	44-059-006		PLUG, 3/8" GALV	2


DP-392.1 HIGH PRESSURE DIAPHRAGM PUMP (JOHN BLUE)

(44-060-275) (2011 TO 2015)

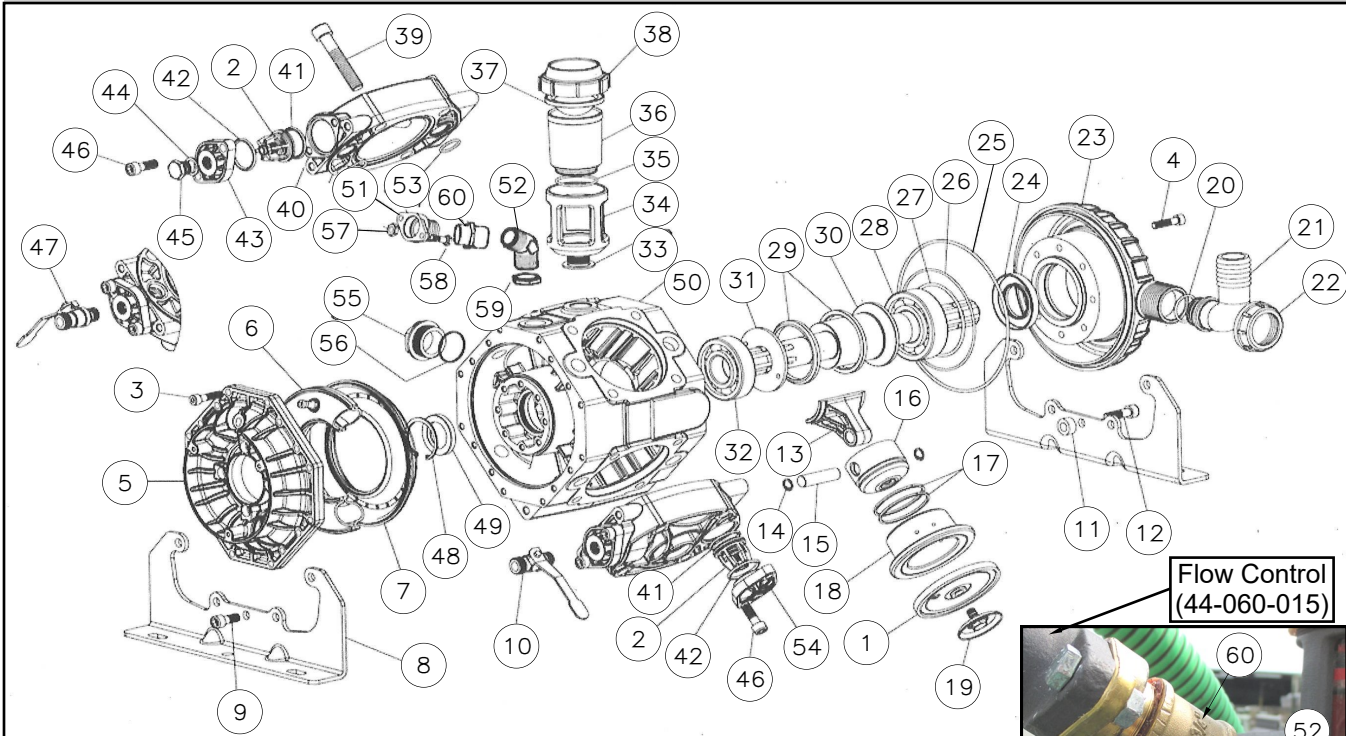

- VALVE KIT (44-060-082)
- * PUMP REPAIR KIT (44-060-306)


Assemble 52 60 51 and Flow Control (44-060-015) with Locktite thread locker or equal.

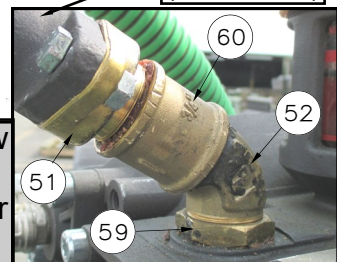

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-075		BUNA-N PISTON DIAPHRAGM	4
■ 2	44-060-052		VALVE ASSEMBLY	8
3	44-060-031		SCREW, M8 X 30	20
4	44-060-028		SCREW, M8 X 35	8
5	44-060-279		BALLASTER COVER	1
* 6	44-060-280		BALLASTER DIAPHRAGM	1
7	44-060-281		LOWER BALLASTER	1
8	44-060-282		MOUNTING RAIL	2
9	44-060-060		SCREW, M10 X 25	9
10	44-060-092		Spray Valve, "S"	1
11	44-060-283		MOUNTIAN RAIL SPACER	1
12	44-060-284		SCREW, M10 X 35	1
13	44-060-069		BRONZE CONROD	4
14	44-060-070		RING DIA 15	8
15	44-060-071		PISTON PIN DIA 15X24	4
16	44-060-072		PISTON	4
17	44-060-073		PISTON RING	8
18	44-060-074		PISTON SLEEVE	4

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
19	44-060-076		KIT DISK + SCREW INOX	4
*20	44-060-272		O-RING, DIA 3.0 X 30	1
21	44-060-273		90° ELBOW CONN DIA 40	1
22	44-060-274		WING NUT, G 1 1/2	1
23	44-060-285		INLET COVER "VD"	1
*24	44-060-080		OIL SEAL, DIA 40X72X10 "VD"	1
*25	44-090-286		O-RING, DIA 3,35X190,10	1
*26	44-060-035		O-RING, DIA 2,62X126,67	1
*27	44-090-034		O-RING, DIA 3,53X88,5	1
28	44-060-079		BALL BEARING 6308 "VD"	1
29	44-060-068		CONROD HOLDING RING	2
30	44-060-078		CRANKSHAFT "VD"	1
31	44-060-067		CIRCLIP	1
32	44-060-305		BALL BEARING 6307	1
33	44-060-030		GASKET	1
34	44-060-026		OIL FILLER BODY	1
*35	44-060-025		O-RING, DIA 2,62X44,12	1
36	44-060-024		OIL FILLER	1
*37	44-060-023		OIL FILLER DIAPHRAGM	1
38	44-060-022		OIL FILLER COVER	1
39	44-060-288		SCREW, M14X70	16
40	44-060-289		PUMP HEAD	4
■*41	44-060-029		O-RING, DIA 3,53X32,93	8
■*42	44-060-057		O-RING, DIA 3,53X41,28	8
43	44-060-290		VALVE COVER, G 3/8"	4
*44	44-060-291		GASKET	2
45	44-060-044		CAP, G 3/8"	2
46	44-060-292		SCREW, M10X30	16
47	44-060-047		SPRAY VALVE, "D"	1
48	44-060-293		RING, DIA 52	1
*49	44-060-065		OIL SEAL, DIA 35X52X7	1
50	44-060-294		CRANKCASE	1
51	44-060-295		FLANGE FOR VALVE COUPLING G 3/4"	1
52	44-060-304		60° ELBOW PIPE CONN. G 3/4	1
*53	44-060-050		O-RING, DIA 2,62X 22,22	8
54	44-060-297		VALVE COVER	4
55	44-060-298		NYLON CAP, M40X1,5	2
*56	44-060-299		O-RING, DIA 1,78X35,65	1
57	44-060-300		NUT, M6	2
58	44-060-301		SCREW, M6X20	2
59	44-060-303		BRASS NUT, G 3/4	1
60	44-060-302		SLEEVE, G 3/4	1

DP-407 PLUMBING AND PUMP SHIELDS (JOHN-BLUE)
(2016 TO PRESENT)

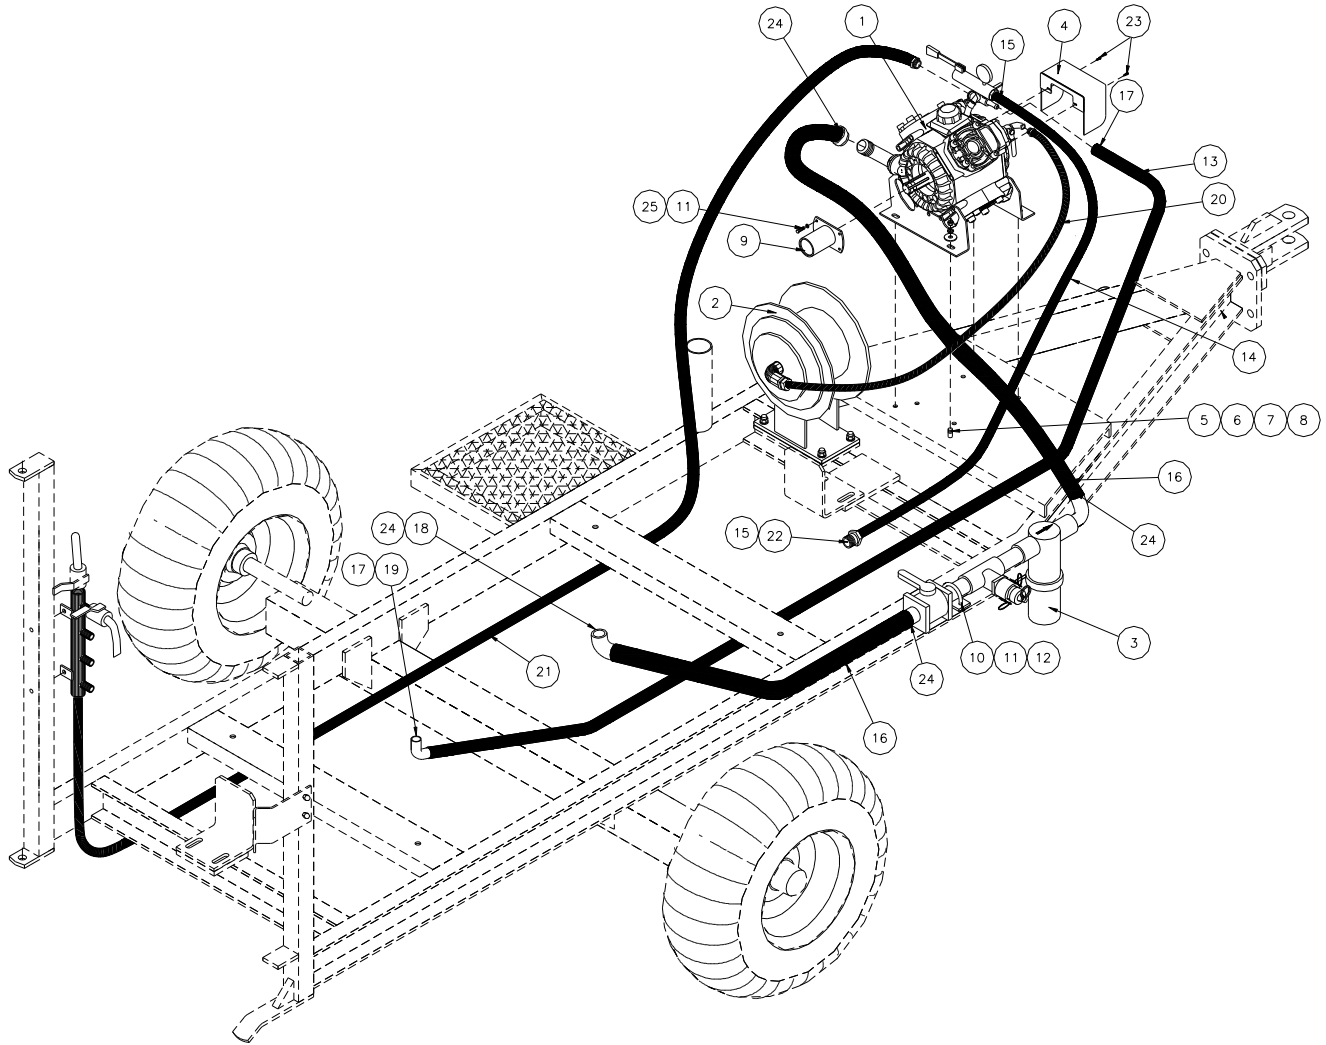

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-081-013		DP-407.1 PUMP/FLOW CONTROL UNIT	1
2	44-081-006		RETRACTABLE REEL ASSEMBLY	1
3	44-081-010		VALVE/STRAINER ASSEMBLY	1
4	44-080-023		SHIELD, FRONT (JOHN BLUE)	1
5	48-090170		CAPSCREW, 3/8 X 1 1/2 G5 PLT	4
6	62-010100		FLATWASHER, 3/8 PLT	4
7	66-010150		LOCKWASHER, 3/8 PLT	4
8	68-010150		HEX NUT, 3/8 PLT	4
9	44-080-024		SHIELD, REAR PUMP	1
10	44-050-003		U-BOLT, 5/16 X 2 X 3	1
11	66-010100		LOCKWASHER, 5/16 PLT	2
12	68-010100		HEXNUT, 5/16 PLT	2
13	44-059-020		HOSE, 1/2" X 100"	1
14	44-059-016		HOSE, 1" X 48"	1
15	44-060-010		CLAMP, 1/2 X 1 1/4"-1 1/2" HOSE	2
16	44-059-018		SUCTION HOSE, 1 1/2" X 41"	2


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
17	20-050-003		HOSE CLAMP, #8 1/2 X 29/32	2
18	44-060-021		NIPPLE, 1 1/4 X 1 1/2 90° NYLON	1
19	44-060-008		NIPPLE, 3/4" 90° NYLON	1
20	44-059-012		HOSE, 1/2" X 48"	1
21	44-059-014		HOSE, 3/4" X 136"	1
22	44-060-007		NIPPLE, 1" NYLON HOSE	1
23	80-079000		#12 X 3/4" SELF DRILL & TAP SCREW.	6
24	44-060-009		CLAMP, 1/2 X 2 1/4" HOSE	4
25	48-050180		CAPSCREW, 8MM X 16MM	4

DP-407 PUMP/FLOW CONTROL UNIT (JOHN-BLUE)
(44-081-013) (2016 TO PRESENT)

For example:

If the pump will be operated from **300-700 PSI**, the pulsation dampener pressure should be set **100 PSI**. Check with air gauge and set to 100 PSI.

As a general rule, set pulsation dampener to 1/3 the working pressure without exceeding **100 psi**.

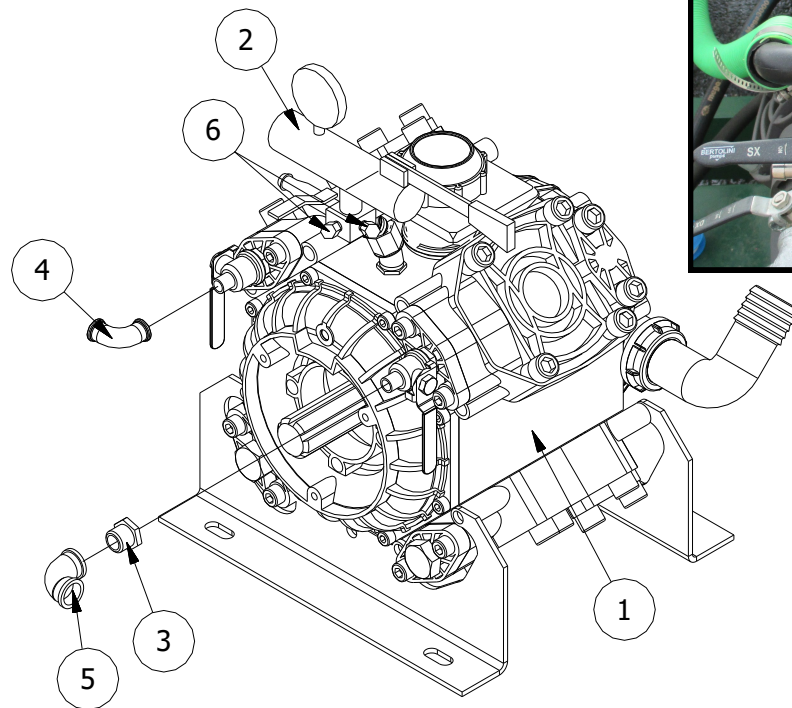

**PRESSURE
VALVE**

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-310	(2016-2019)	DIAPHRAGM PUMP, DP-407.1	1
	44-060-327	(2019-)	DIAPHRAGM PUMP, DP-407.2	1
2	44-060-015		UNIT, FLOW CONTROL	1
3	42-050-004		BUSHING, 3/4"-1/2" REDUCER	1
4	02-050-147		ELBOW, 1/2" REG 90°	1
5	42-050-017		ELBOW, 3/4" REG 90°	1
6	44-059-006		PLUG, 3/8" GALV	2

DP-407.1 HIGH PRESSURE DIAPHRAGM PUMP (JOHN BLUE)


(44-060-310) (2016 TO 2019)

Flow Control
(44-060-015)

Assemble 51,52,60,62 and Flow Control (44-060-015) with Locktite thread locker or equal.

■ VALVE KIT (44-060-082)

* PUMP REPAIR KIT (44-060-306)

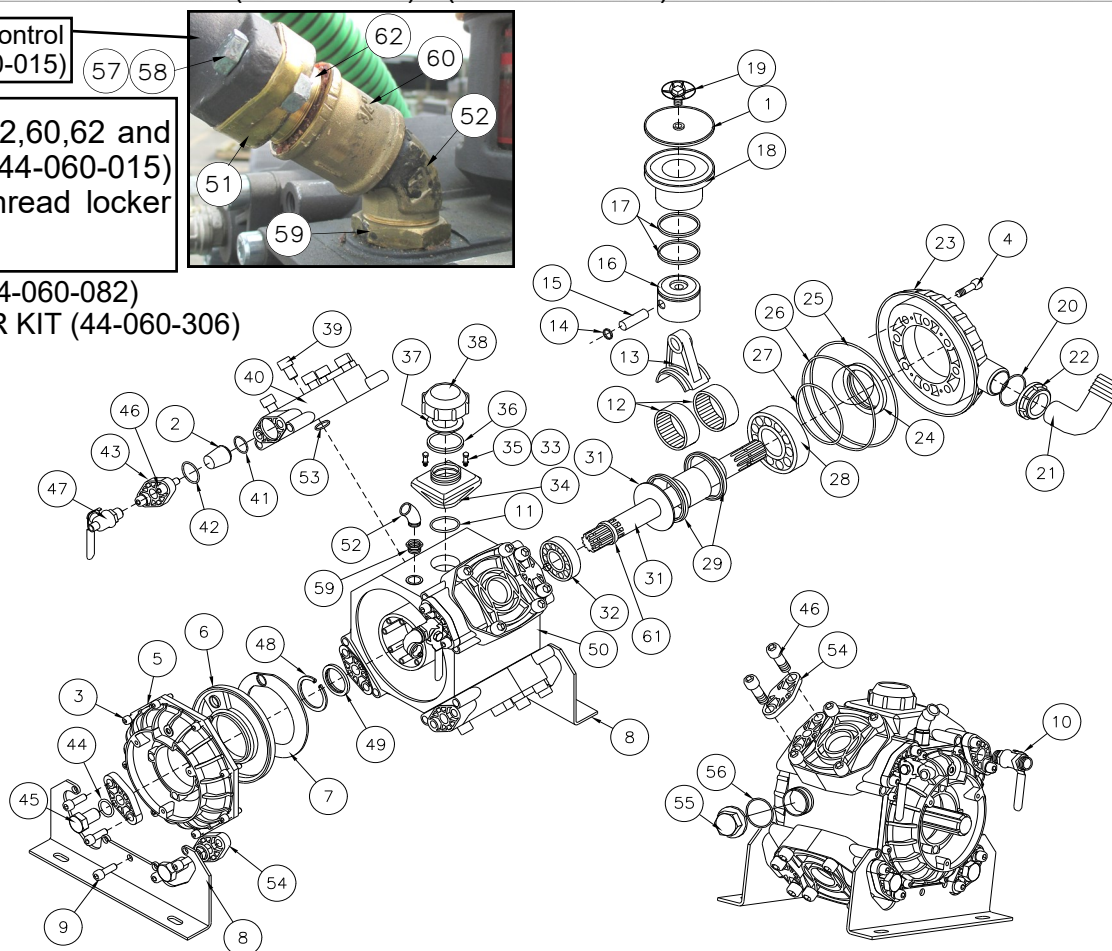

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
*1	44-060-075		BUNA-N PISTON DIAPHRAGM	4
■ 2	44-060-052		VALVE ASSEMBLY	8
3	44-060-031		SCREW, M8 X 30	20
4	44-060-028		SCREW, M8 X 35	8
5	44-060-279		BALLASTER COVER	1
* 6	44-060-280		BALLASTER DIAPHRAGM	1
7	44-060-281		LOWER BALLASTER	1
8	44-060-282		MOUNTING RAIL	2
9	44-060-060		SCREW, M10 X 25	10
10	44-060-092		Spray Valve, "S"	1
*11	44-060-311		GASKET	1
12	44-060-324		NEEDLE ROLLER BEARING	2
13	44-060-312		CONROD	4
14	44-060-070		RING DIA 15	8
15	44-060-071		PISTON PIN DIA 15X24	4
16	44-060-072		PISTON	4
17	44-060-073		PISTON RING	8
18	44-060-074		PISTON SLEEVE	4

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
19	44-060-076		KIT DISK + SCREW INOX	4
*20	44-060-272		O-RING, DIA 3.0 X 30	1
21	44-060-273		90° ELBOW CONN DIA 40	1
22	44-060-274		WING NUT, G 1 1/2	1
23	44-060-285		INLET COVER "VD"	1
*24	44-060-080		OIL SEAL, DIA 40X72X10 "VD"	1
*25	44-060-286		O-RING, DIA 3,35X190,10	1
*26	44-060-035		O-RING, DIA 2,62X126,67	1
*27	44-090-034		O-RING, DIA 3,53X88,5	1
28	44-060-079		BALL BEARING 6308 "VD"	1
29	44-060-068		CONROD HOLDING RING	2
30	44-060-313		CRANKSHAFT "VD"	1
31	44-060-314		SHAFT RING	1
32	44-060-315		ROLLER BEARING	1
33	44-060-317		WASHER	1
34	44-060-316		OIL FILLER ASSY	1
35	44-060-318		BOLT, M6 X 25	2
36	44-060-319		DIAPHRAGM SPACER	1
*37	44-060-023		OIL FILLER DIAPHRAGM	1
38	44-060-022		OIL FILLER COVER	1
39	44-060-288		SCREW, M14X70	16
40	44-060-289		PUMP HEAD	4
■*41	44-060-029		O-RING, DIA 3,53X32,93	8
■*42	44-060-057		O-RING, DIA 3,53X41,28	8
43	44-060-290		VALVE COVER, G 3/8"	4
*44	44-060-291		GASKET	2
45	44-060-044		CAP, G 3/8"	2
46	44-060-292		SCREW, M10X30	16
47	44-060-047		SPRAY VALVE, "D"	1
48	44-060-293		RING, DIA 52	1
*49	44-060-065		OIL SEAL, DIA 35X52X7	1
50	44-060-320		CRANKCASE	1
51	44-060-295		FLANGE FOR VALVE COUPLING G 3/4"	1
52	44-060-304		60° ELBOW PIPE CONN. G 3/4	1
*53	44-060-050		O-RING, DIA 2,62X 22,22	8
54	44-060-297		VALVE COVER	4
55	44-060-322		CAP G. 1/4	1
56	44-060-321		WASHER	1
57	44-060-300		NUT, M6	2
58	44-060-301		SCREW, M6X20	2
59	44-060-303		BRASS NUT, G 3/4	1
60	44-060-302		SLEEVE, G 3/4	1
61	44-060-323		SHAFT SPACER DIA 35MM	1
62	44-060-326		EXTENSION G, 3/4	1

DP-407.2 HIGH PRESSURE DIAPHRAGM PUMP (JOHN BLUE)


(44-060-327) (2019 TO PRESENT)

Flow Control
(44-060-015)

Assemble 51,52,60,62 and
Flow Control (44-060-015)
with Locktite thread locker
or equal.

■ VALVE KIT (44-060-082)


* PUMP REPAIR KIT (44-060-328)

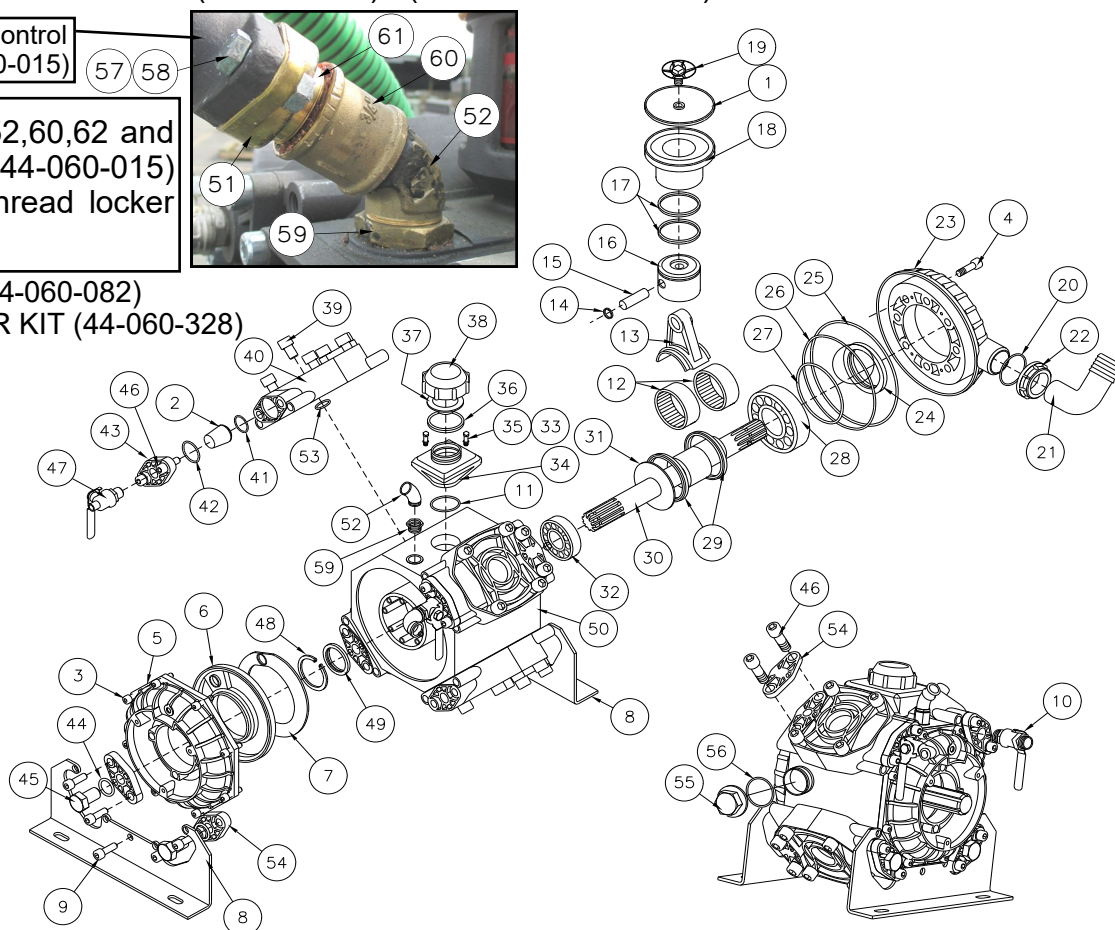

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
*1	44-060-075		BUNA-N PISTON DIAPHRAGM	4
■ 2	44-060-052		VALVE ASSEMBLY	8
3	44-060-031		SCREW, M8 X 30	20
4	44-060-028		SCREW, M8 X 35	8
5	44-060-279		BALLASTER COVER	1
* 6	44-060-280		BALLASTER DIAPHRAGM	1
7	44-060-281		LOWER BALLASTER	1
8	44-060-282		MOUNTING RAIL	2
9	44-060-060		SCREW, M10 X 25	10
10	44-060-092		Spray Valve, "S"	1
*11	44-060-311		GASKET	1
12	44-060-343		NEEDLE ROLLER BEARING	2
13	44-060-337		CONROD	4
14	44-060-070		RING DIA 15	8
15	44-060-071		PISTON PIN DIA 15X24	4
16	44-060-072		PISTON	4
17	44-060-073		PISTON RING	8
18	44-060-074		PISTON SLEEVE	4

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
19	44-060-076		KIT DISK + SCREW INOX	4
*20	44-060-272		O-RING, DIA 3.0 X 30	1
21	44-060-273		90° ELBOW CONN DIA 40	1
22	44-060-274		WING NUT, G 1 1/2	1
23	44-060-285		INLET COVER "VD"	1
*24	44-060-080		OIL SEAL, DIA 40X72X10 "VD"	1
*25	44-060-286		O-RING, DIA 3,35X190,10	1
*26	44-060-035		O-RING, DIA 2,62X126,67	1
*27	44-090-034		O-RING, DIA 3,53X88,5	1
28	44-060-079		BALL BEARING 6308 "VD"	1
29	44-060-338		CONROD HOLDING RING	2
30	44-060-339		CRANKSHAFT "VD"	1
31	44-060-340		SHAFT RING	1
32	44-060-341		ROLLER BEARING 40X80X18	1
33	44-060-317		WASHER	1
34	44-060-316		OIL FILLER ASSY	1
35	44-060-318		BOLT, M6 X 25	2
36	44-060-319		DIAPHRAGM SPACER	1
*37	44-060-023		OIL FILLER DIAPHRAGM	1
38	44-060-022		OIL FILLER COVER	1
39	44-060-288		SCREW, M14X70	16
40	44-060-289		PUMP HEAD	4
■*41	44-060-029		O-RING, DIA 3,53X32,93	8
■*42	44-060-057		O-RING, DIA 3,53X41,28	8
43	44-060-290		VALVE COVER, G 3/8"	4
*44	44-060-291		GASKET	2
45	44-060-044		CAP, G 3/8"	2
46	44-060-292		SCREW, M10X30	16
47	44-060-047		SPRAY VALVE, "D"	1
48	44-060-293		RING, DIA 52	1
*49	44-060-342		OIL SEAL, DIA 40X52X7	1
50	44-060-320		CRANKCASE	1
51	44-060-295		FLANGE FOR VALVE COUPLING G 3/4"	1
52	44-060-304		60° ELBOW PIPE CONN. G 3/4	1
*53	44-060-050		O-RING, DIA 2,62X 22,22	8
54	44-060-297		VALVE COVER	4
55	44-060-322		CAP G. 1/4	1
56	44-060-321		WASHER	1
57	44-060-300		NUT, M6	2
58	44-060-301		SCREW, M6X20	2
59	44-060-303		BRASS NUT, G 3/4	1
60	44-060-302		SLEEVE, G 3/4	1
61	44-060-326		EXTENSION G, 3/4	1

FLOW CONTROL UNIT (JOHN BLUE) (44-060-015)

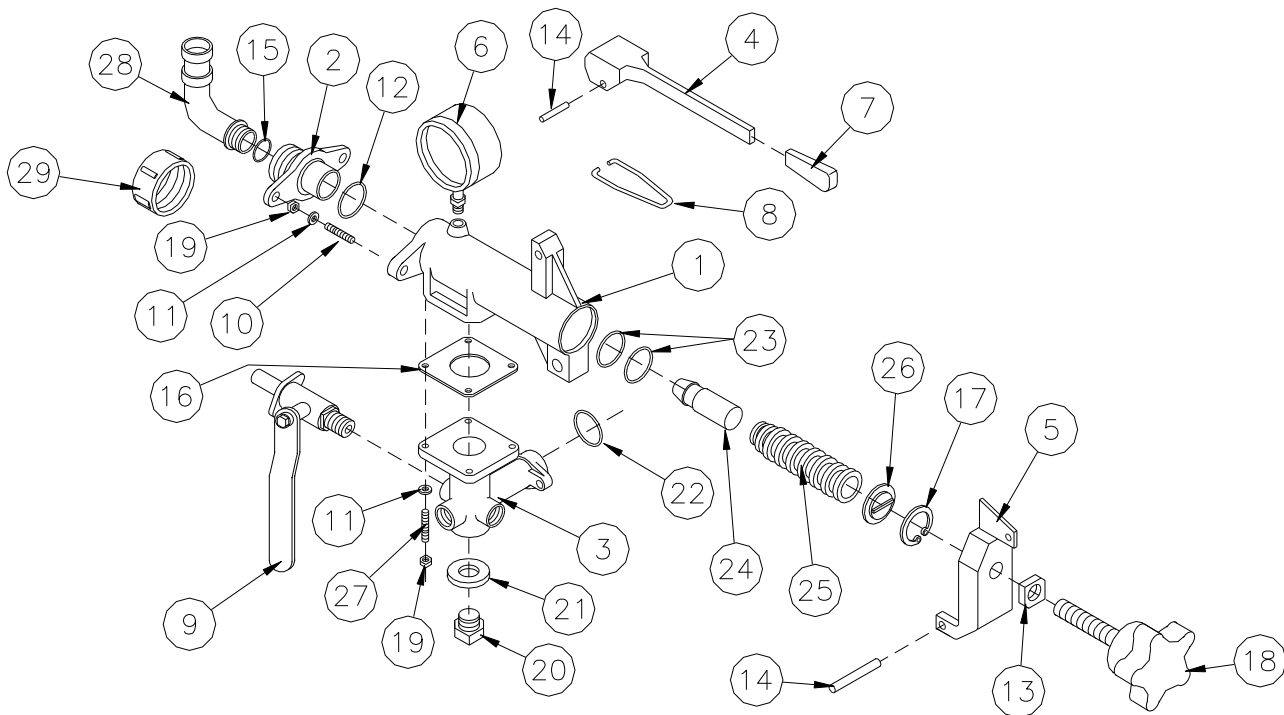


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-085		VALVE BODY	1
2	44-060-086		SEAT, DISCHARGE CONNECTION	1
3	44-060-087		VALVE, CONNECTION	1
4	44-060-088		PRESSURE ADJUSTING VALVE LEVER	1
5	44-060-116		VALVE ARM	1
6	44-060-089		PRESSURE GAUGE, GLYCERINE FIL	1
7	44-060-090		KNOB	1
8	44-060-091		TIE BOLT	1
9	44-060-092		SPRAY VALVE	1
10	44-060-093		STUD, M5 X 18	2
11	44-060-094		WASHER, D.5	6
12	44-060-095		O-RING 2 X 25	1
13	44-060-096		NUT, M8	1
14	44-060-097		SPRING PIN	2
15	44-060-098		O-RING, DIA 62MM X 22, 22MM	1
16	44-060-099		GASKET	1
17	44-060-100		SNAP RING	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
18	44-060-101		KNOB	1
19	44-060-102		NUT M5	6
20	44-060-103		PLUG	1
21	44-060-104		GASKET 16, 5 X 23 X 1	1
22	44-060-061		O-RING DIA 3 X 22	1
23	44-060-106		GASKET 123-17, 86 X 2, 62	2
24	44-060-107		SHUTTER DN23	1
25	44-060-108		SPRING	1
26	44-060-109		WASHER	1
27	44-060-110		STUD M5 X 14	4
28	44-060-111		90° ELBOW TAIL	1
29	44-060-112		WING NUT, M34	1




SPRAY BOOM ASSEMBLY (44-081-001)

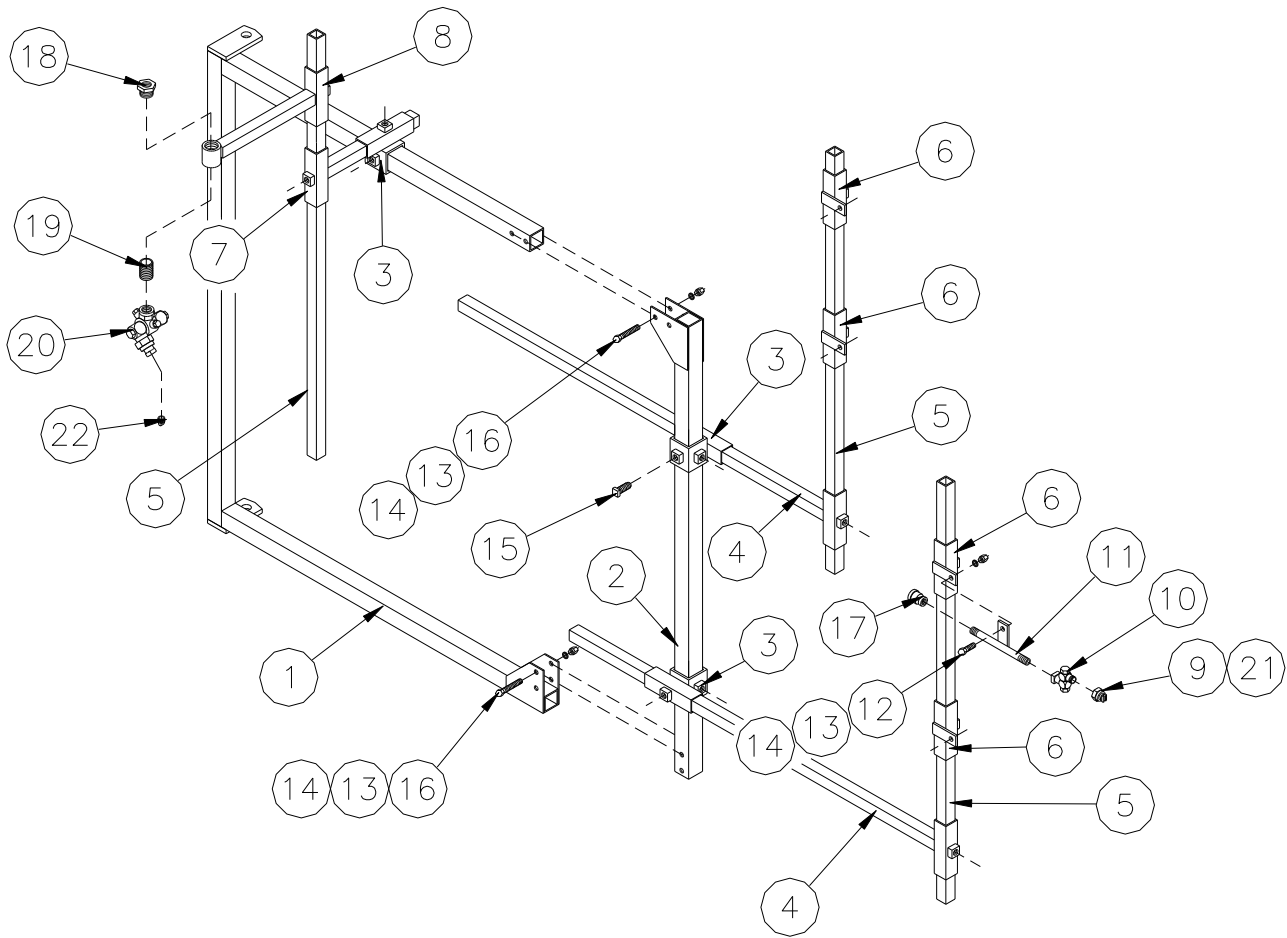


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-080-013		BOOM	1
2	44-080-012		BOOM, LATCH SIDE	1
3	44-080-007		BRACKET, EXTENSION	3
4	44-080-005		EXTENSION, BOOM	2
5	44-024-010		ARM, EXTENSION	3
6	44-080-004		BRACKET, NOZZLE	4
7	44-080-014		EXTENSION, BOOMLESS NOZZLE	1
8	44-080-008		SUPPORT, BOOMLESS NOZZLE	1
9	20-060-005		CAP, BRASS NOZZLE	4
10	20-060-006		BODY, 1/4" SWIVEL NOZZLE	4
11	44-080-003		ARM, NOZZLE	4
12	48-090150		CAPSCREW, 3/8 X 1 1/4 G5 PLT	4
13	66-010150		LOCKWASHER, 3/8 PLT	8

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
14	68-010150		HEX NUT, 3/8 PLT	8
15	54-010250		SETSCREW, 1/2 X 1 SQ HD PT G5	17
16	48-090210		CAPSCREW, 3/8 X 2 1/4 G5 PLT	4
17	44-059-002		REDUCER, 3/8" TO 1/4"	4
18	42-050-004		BUSHING, 3/4" TO 1/2"	1
19	42-050-007		NIPPLE, 3/4" X 1 1/2 SCH 40 GALV	1
20	44-060-004		NOZZLE, 3/4" DOUBLE SWIVEL	1
21	44-060-013		TIP, 1/4" SPRAY	4
22	44-060-083		TIP, S.S. SPRAY	1

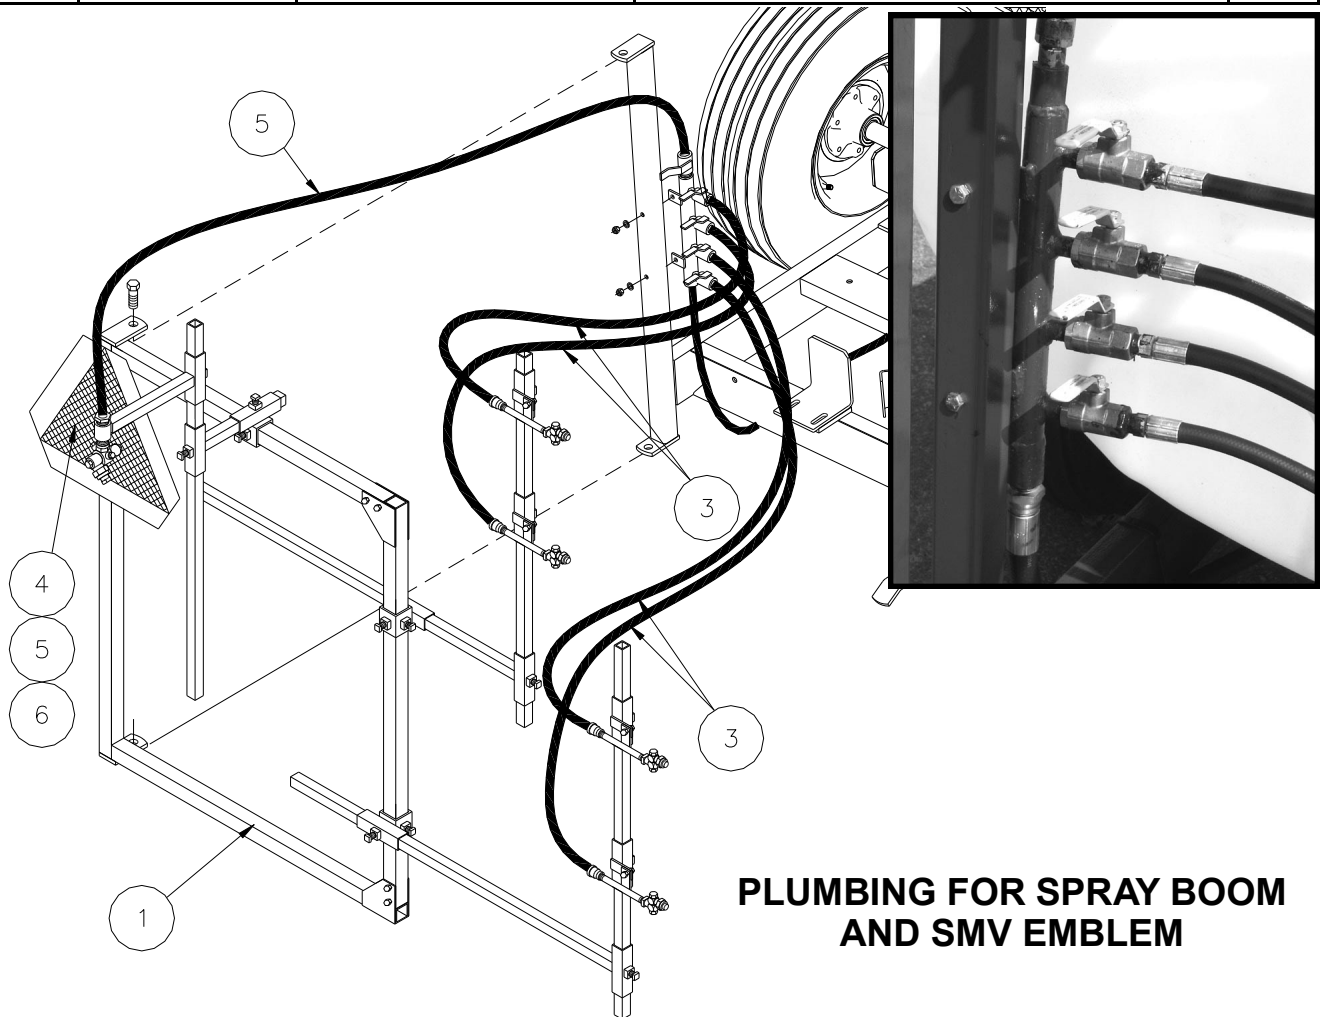

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-081-001		SPRAY BOOM ASSEMBLY	1
2	44-059-013		HOSE, 1/2" X 80"	1
3	44-059-011		HOSE, 3/8" X 100"	4
4	03-050-068		EMBLEM, SMV	1
5	80-080000		#12 X 1 HEX SELF DRIVE	2
6	64-050000		WASHER, 1/4 FENDER	2


TANK AND SADDLE ASSEMBLY

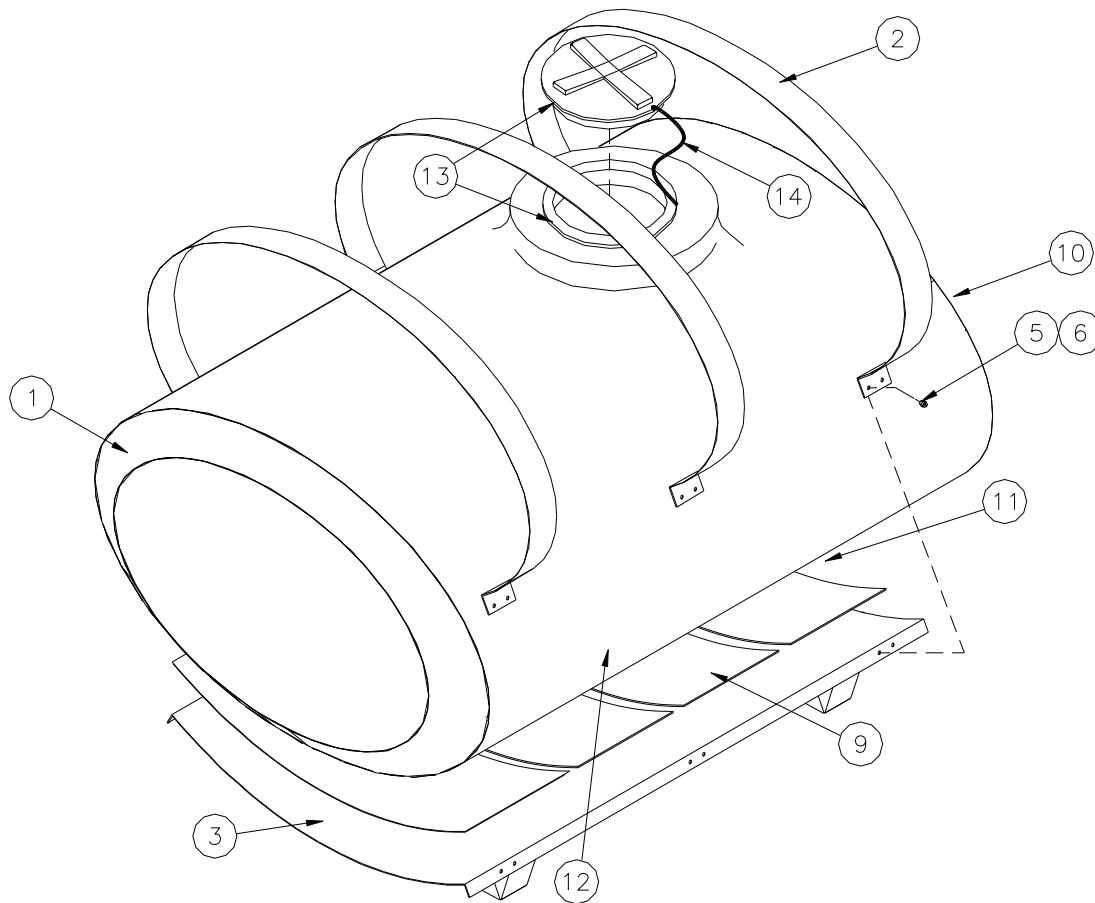

*These Items Come With Tank (44-060-267)

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-016	(-2001)	TANK, 500 GAL POLY	(1)
	44-060-267	(2002-)	TANK, 500 GAL POLY	1
2	44-080-016		STRAP, TANK HOLD DOWN	3
3	44-080-015		SKID, TANK	1
5	48-090315		CAPSCREW, 3/8 X 4 G5 PLT	12
6	72-010050		LOCKNUT, 3/8 G"B" PLT	12
*7	20-060-036		FILLWELL, 10" THREADED	1
*8	20-060-037		COVER, 10" THREADED	1
9	44-050-006		FOAM RUBBER, 3/16 X 76 X 46	4
*10	44-060-084		FITTING, 1" DT	1
*11	20-060-035		FITTING, 1 1/4 ANTI-VORTEX	1
*12	20-060-034		FITTING, 3/4" DT	1
*13	44-060-265	(-2014)	FILLWELL	(1)
	44-060-266	(-2014)	COVER	(1)
	44-060-309	(-2014)	KIT, 16" LID, VENT, & FILLWELL	(1)
	44-060-307	(2015-)	KIT, LID, VENT, & FILLWELL	1
*14	44-060-308	(2015-)	LANYARD, 18"	1

RETRACTABLE REEL ASSEMBLY (44-081-006)

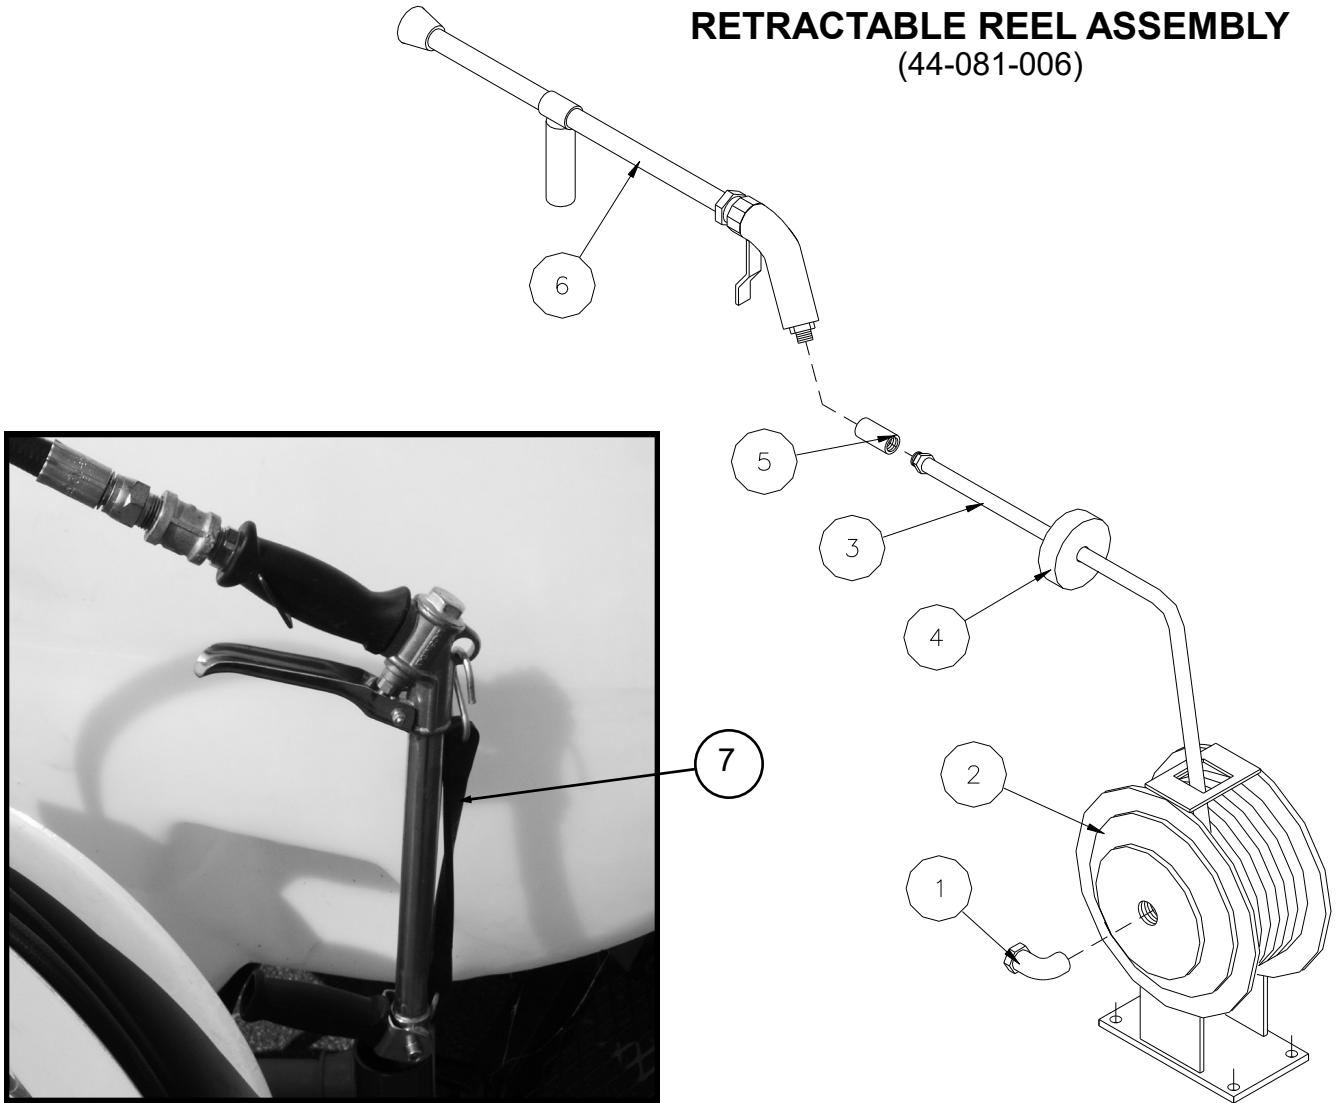


NOTE: The spring-retractable hose reel has no user-serviceable internal parts. Return the reel to KMC for repairs.

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	02-050-097		ELBOW, 1/2" NPT BLACK STREET	1
2	44-059-009		REEL, SPRING-RETRACTABLE HOSE	1
3	44-059-010		HOSE, 1/2" X 600"	1
4	44-050-002		BUMPER, HOSE	1
5	11-059-003		COUPLING, 1/2" GALV	1
6	44-060-001		GUN, SPRAY	1
7	20-050-016		STRAP, RUBBER	1



CAUTION: DO NOT ATTEMPT TO DISMANTLE REEL. A HIGH TENSION SPRING ASSEMBLY IS CONTAINED WITHIN THE REEL. IMPROPER REMOVAL OF THE SPRING COULD RESULT IN PERSONAL INJURY AND/OR REEL DAMAGE.

SPRAY GUN (44-060-001)

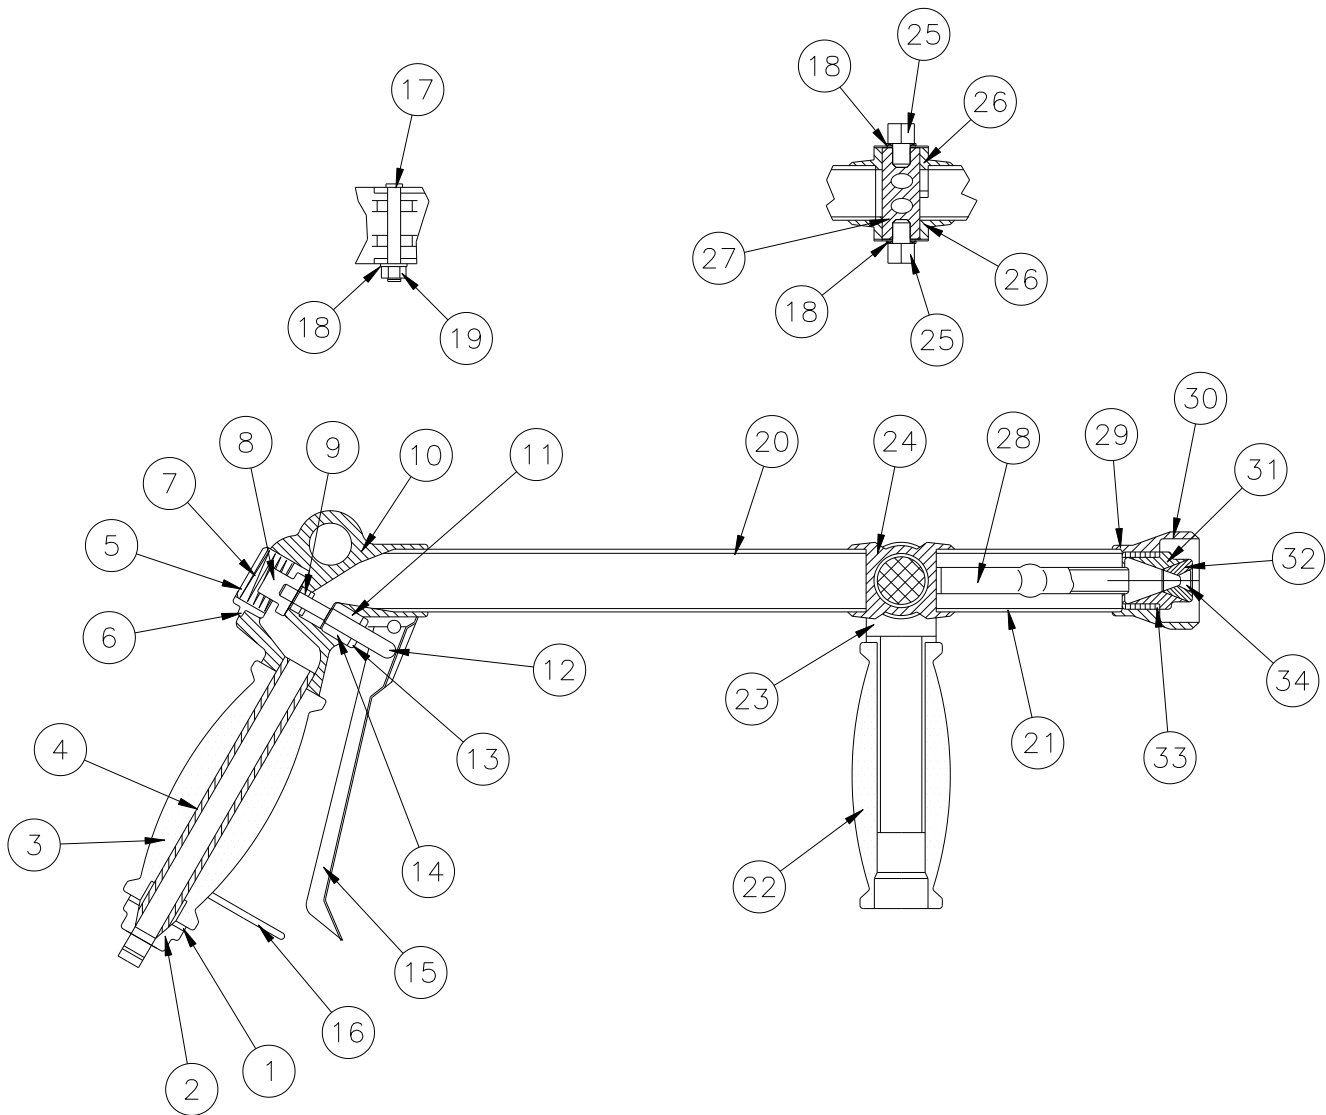


ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-060-117		WASHER	1
2	44-060-118		INLET PORT	1
3	44-060-119		HAND GRIP	1
4	44-060-120		TUBE	1
5	44-060-121		PLUG	1
* 6	44-060-122		O-RING	1
7	44-060-123		SPRING	1
* 8	44-060-124		POPPET	1
* 9	44-060-125		SEAT	1
10	44-060-126		BODY	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
11	44-060-127		O-RING	1
12	44-060-128		PLUNGER	1
13	44-060-129		O-RING	1
14	44-060-130		GUIDE	1
15	44-060-131		TRIGGER	1
16	44-060-132		LOCKING CLIP	1
17	44-060-133		PIN	1
18	44-060-134		WASHER	3
19	44-060-135		NUT	1
20	44-060-136		REAR BARREL MODEL-0011	1
21	44-060-137		FRONT BARREL MODEL-0011	1
22	44-060-138		FRONT GRIP BRACKET	1
23	44-060-139		BRACKET	1
24	44-060-140		REGULAR BODY MODEL-0011	1
25	44-060-141		BOLT	2
*	26	44-060-142	O-RING	2
	27	44-060-143	REGULATOR	1
	28	44-060-144	INNER BARREL MODEL-1100	1
	29	44-060-145	OUTLET PORT MODEL-1100	1
	30	44-060-146	SHROUD MODEL-0011	1
	31	44-060-147	NOZZLE RETAINER MODEL-0011	1
*	32	44-060-148	O-RING	1
*	33	44-060-149	O-RING	1
	34	44-060-150	NOZZLE	1

* These Items Make-up The **Spray Gun Repair Kit** (44-060-152)

1 3/8" 540 DRIVELINE (44-055-001)

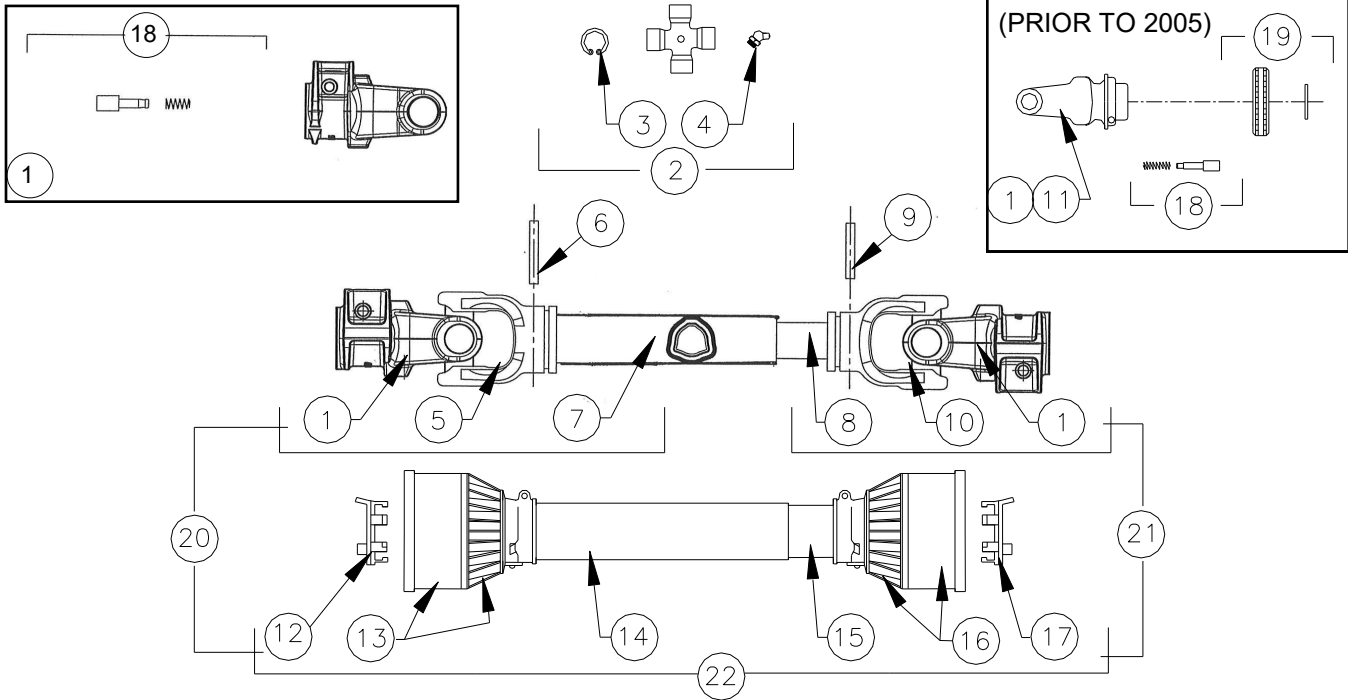

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
1	44-050-002	(-2005)	YOKE RS	(1)
	44-055-024	(2006-)	YOKE SHROUDED PUSH PIN	2
2	44-055-003		CROSS JOURNAL ASSY	2
3	44-055-004	(-2005)	CIRCLIP	(8)
	44-055-025	(2006-)	ELASTIC RING	8
4	03-055-100	(-2005)	GREASE NIPPLE	(2)
	44-055-026	(2006-)	GREASE ZERK	2
5	44-055-005		OUTER TUBE YOKE	1
6	03-055-103	(-2005)	FLEXIBLE PIN	(1)
	03-055-205	(2006-)	FLEXIBLE PIN	1
7	44-055-006		CARDAN TUBE	1
8	44-055-007		CARDAN TUBE	1
9	44-055-008	(-2005)	FLEXIBLE PIN	(1)
	03-055-206	(2006-)	FLEXIBLE PIN	1
10	44-055-009		INNER TUBE YOKE	1
11	44-055-010	(-2005)	YOKE RS	1
12	44-055-011	(-2005)	O. BEARING 2	(1)
	03-055-208	(2006-)	SHIELD SUPPORT 2	1
13	44-055-012		O CONE SETS F1-2	1
14	44-055-013		SAFETY TUBE	1
15	44-055-014		SAFETY TUBE	1

ITEM	PART NO	SERIAL NO OR YR	DESCRIPTION	QTY
16	44-055-015		I.CONE SETS F1-2	1
17	44-055-016	(-2005)	I. BEARING 2	(1)
	03-055-209	(2006-)	SHIELD SUPPORT 2	1
18	33-055-334	(-2005)	COMPLETE PUSH BUTTON	(1)
	44-055-027	(2006-)	COMPLETE PUSH BUTTON	1
19	03-055-148	(-2005)	SLEEVE	(2)
20	44-055-019		HALF SHAFT-TRACTOR	1
21	44-055-020		HALF SHAFT- IMP	1
22	44-055-023		SHIELD-SAFETY	1

The following is a list of serial numbers issued to our machines at the beginning of each year. To determine when a unit was made, find the range within which the particular serial number falls. It would have been produced between January 1 to December 31 of that year.

YEAR	SERIAL NUMBERS
1985	27986-29695
1986	29696-31095
1987	31096-33234
1988	33235-35548
1989	35549-38496
1990	38497-41771
1991	41772-44466
1992	44467-47001
1993	47002-48750
1994	48751-51549
1995	51551-54262
1996	54263-56661
1997	56662-59465
1998	59466-62097
1999	62098-63986
2000	63987-65692
2001	65693-67340
2002	67341-68699
2003	68700-70482
2004	70483-72646
2005	72647-74866
2006	74867-76368
2007	76369-77883
2008	77884-79891
2009	79892-80944
2010	80945-81775
2011	81776-83453
2012	83454-85092
2013	85093-86418
2014	86419-87790
2015	87791-89096
2016	89097-90089
2017	90090-



DEPENDABLE EQUIPMENT FOR PROGRESSIVE FARMING

Visit us at www.kelleymfg.com



KELLEY MANUFACTURING CO.

80 Vernon Drive / Zip 31794
P.O. Drawer 1467 / Zip 31793
Tifton, GA



Tel: 229-382-9393
Toll Free: 1-800-444-5449
Fax: 229-382-5259

Email Address: info@kelleymfg.com